

WP-5231 Series User Manual

(WEC7 Based WinPAC)

Version 1.0.0, January 2015

Service and usage information for

WP-5231

WP-5231M-3GWA



Written by Sean
Edited by Anna Huang

Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year, beginning from the date of delivery to the original purchaser.

Warning

ICP DAS assumes no liability for any damage resulting from the use of this product. ICP DAS reserves the right to change this manual at any time without notice. The information furnished by ICP DAS is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS for its use, not for any infringements of patents or other rights of third parties resulting from its use.

Copyright

Copyright © 2015 by ICP DAS Co., Ltd. All rights are reserved.

Trademark

The names used for identification only may be registered trademarks of their respective companies.

Contact US

If you have any problem, please feel free to contact us.

You can count on us for quick response.

Email: service@icpdas.com

Contents

Contents	3
1. Introduction.....	6
1.1. Features	7
1.2. Specifications	10
1.3. Overview	12
1.4. Dimensions.....	17
1.5. Companion CD.....	18
2. Getting Started	19
2.1. Mounting the Hardware	20
2.2. Installing the XV-Board.....	22
2.3. Configuring the Boot Mode.....	23
2.4. Using PAC Utility to Manage WinPAC.....	25
2.5. Using DCON Utility Pro to Configure I/O Modules.....	26
2.6. Changing the User Interface Language.....	29
3. Tools and Tasks	31
3.1. PAC Utility	33
3.1.1. Menu Bar – File	34
3.1.2. Menu Bar – Help	35
3.1.3. Property Tab - General.....	36
3.1.4. Property Tab – Display	38
3.1.5. Property Tab – IP Config.....	39
3.1.6. Property Tab – Network	40
3.1.7. Property Tab – Device Information.....	43
3.1.8. Property Tab – Auto Execution.....	44
3.1.9. Property Tab – Rotary Execution	45
3.2. DCON Utility Pro	46
3.3. TaskMgr	47
3.4. VCEP.....	48
3.5. Remote_Display	49
3.6. SendToCOM	50
3.7. RegEdit.....	51
3.8. ISQLW35.....	52

3.9. INotepad.....	53
4. Your First WinPAC Program.....	54
4.1. Preparing the Development Tools	55
4.2. Installing WP-5231 SDK.....	56
4.3. First WinPAC Program in VB.NET.....	59
4.3.1. Create a New Project	60
4.3.2. Specify the Path of PAC Reference	63
4.3.3. Add the Control to the Form	66
4.3.4. Add the Event Handling for the Control	68
4.3.5. Upload the Application to WinPAC	70
4.3.6. Execute the Application on WinPAC	72
4.4. First WinPAC Program in Visual C#.....	73
4.4.1. Create a New Project	74
4.4.2. Specify the Path of PAC Reference	77
4.4.3. Add the Control to the Form	80
4.4.4. Add the Event Handling for the Control	82
4.4.5. Upload the Application to WinPAC	84
4.4.6. Execute the Application on WinPAC	86
4.5. First WinPAC Program in Visual C++.....	87
4.5.1. Create a New Project	88
4.5.2. Configure the Platform	93
4.5.3. Specify the Path of the PAC Reference	94
4.5.4. Add the Control to the Form	97
4.5.5. Add the Event Handling for the Control	100
5. APIs and Samples	105
5.1. PAC Standard APIs.....	106
5.1.1. VB.NET Samples for PAC Standard APIs.....	107
5.1.2. C# Samples for PAC Standard APIs	108
5.1.3. Visual C++ Samples for PAC Standard APIs	109
5.2. PAC IO APIs.....	110
5.2.1. VB.NET Samples for PAC Standard APIs.....	111
5.2.2. C# Samples for PAC Standard APIs	112
5.2.3. Visual C++ Samples for PAC Standard APIs	113
6. I/O Modules and SDK Selection	114
7. WP-5231 Updates	117
7.1. OS Updates.....	118

7.1.1. OS Updates using Eshell	119
7.1.2. OS Updates using micro_SD.....	122
7.2. SDK Updates.....	124
7.2.1. SDK Updates for VB.NET or C#.....	125
7.2.2. SDK Updates for Visual C++	126
A. Tips – How to	127
A.1. How to use the Printer.....	127
A.1.1. How to use the network printer	128
A.1.2. How to use the USB printer	130
A.2. How to Automatically Synchronize WinPAC Clock with an Internet Time Server	131
A.3. How to use User Account Control in WinPAC.....	133
A.3.1. How to Create an User Account.....	133
A.3.2. How to Use Telnet to remote login the WinPAC from PC	135
A.3.3. How to Remove a User Account from the Login List.....	137
B. XV-Board Modules	138
C. Revision History	139

1. Introduction

This chapter provides an overview of the WP-5231 series modules and its components, and introduces the fundamental concepts for user familiar with the WP-5231 series modules.



The WP-5231 series is equipped an AM3352 CPU (720 MHz) and running a Windows Embedded Compact 7.0 operating system. Instead of external wireless module, the WP-5231 can add an internal 3G wireless module provides high-protection I/O. Using the built-in micro SD, the WP-5231 series can save application program, image file and data., various connectivity (VGA, USB, Ethernet, RS-232/485) and I/O expansion bus.

1.1. Features

The WP-5231 series modules offer the most comprehensive configuration and remote system upgrade solutions to meet specific application requirements. The following list shows the hardware and software features designed to simplify installation, configuration and application.

➤ **Windows Embedded Compact 7.0**



- Support PC based software: Visual Studio.NET
- Web server, FTP server, Telnet server

➤ **Local I/O and Communication Expansion Board**

WP-5231 series equip an I/O expansion bus to support one optional expansion board, called XV-board. It can be used to implement various I/O functions such as DI, DO, A/D, D/A, Timer/Counter



➤ **Various Memory Expansions**

WP-5231 series modules provides various memory storage options, such as FRAM and microSD. Customers can choose the memory based on their characteristics.



- 64 KB FRAM: no limit on the number of write-erase cycles.
- microSD/microSDHC: to implement portable data logging applications; supports up to 32 GB.


➤ **Unique 64-bit Hardware Serial Number to Protect Your Program**

A unique 64-bit serial number is assigned to each hardware device to protect your software against piracy.



➤ **Remote I/O Module and Expansion Unit**

With the built-in RS-485 and Ethernet port, the WP-5231 series modules can connect RS-485/Ethernet remote I/O units (RU-87Pn/ET-87Pn) or modules (I-7000/M-7000/ET-7000).

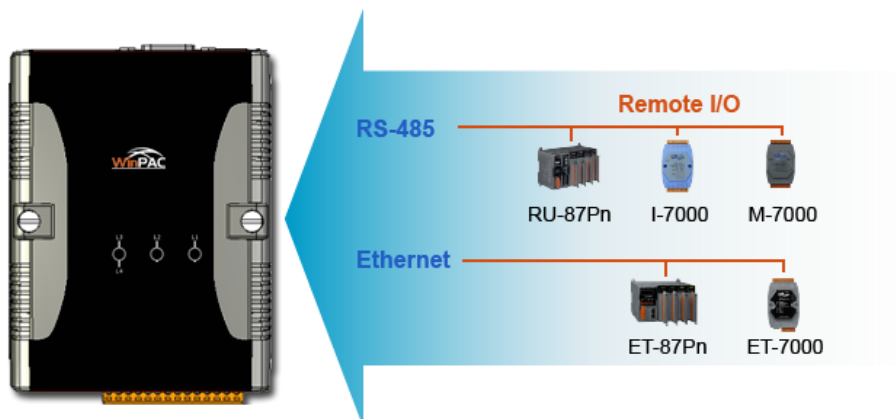

➤ **Plastic and Metal Housing**

The default case is plastic material. Metal casing is also offered to provide extra security.


➤ **Small and Easy Installation**

The WP-5231 series modules have a slender shape (91 mm x 132 mm x 52 mm) to be installing in a narrow space with DIN-Rail.



➤ **Highly Reliable Under Harsh Environment**

Our WinPACs operate in a wide range of temperature and humidity.

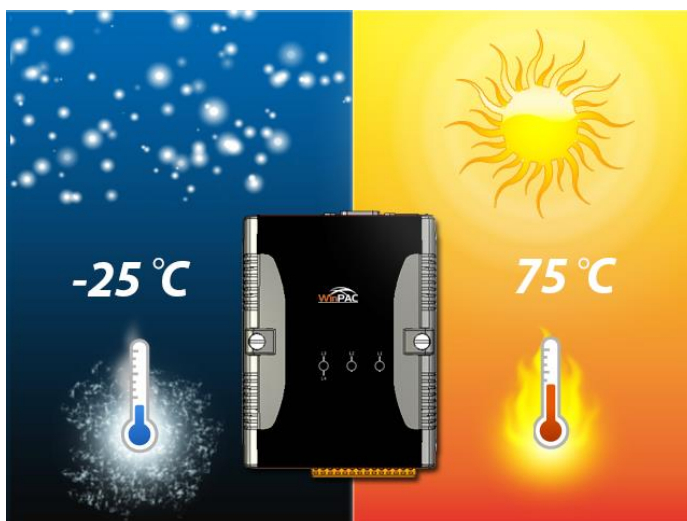

- Operating Temperature: -25 ~ +75 °C
- Storage Temperature: -40 ~ +80 °C
- Humidity: 10% ~ 90% RH, non-condensing

1.2. Specifications

The table below summarizes the specifications of the WP-5231 series modules.


Models	WP-5231	WP-5231M-3GWA
System Software		
OS	Windows CE 7.0 Professional	
Framework Support	.Net Compact Framework 3.5	
Embedded Service	FTP Server, Web Server	
SDK Provided	DII for Visual Studio.Net 2008	
Multilanguage Support	English, German, French, Spanish, Russian, Italian, Korean, Simplified Chinese, Traditional Chinese	
CPU Module		
CPU	AM3352, 720 MHz	
DDR3 SDRAM	256 MB	
Flash	256 MB	
FRAM	64 KB	
Expansion Flash Memory	microSD socket with one 4 GB microSD card (support up to 32 GB microSDHC card)	
RTC (Real Time Clock)	Provide second, minute, hour, date, day of week, month, year	
64-bit Hardware Serial Number	Yes, for software copy protection	
Dual Watchdog Timers	Yes	
Rotary Switch	Yes (0 ~ 9)	
LED Indicators	1 LED for Power and Running; 2 LEDs for user defined	
VGA & Communication Ports		
Resolution	640 x 480, 800 x 480, 800 x 600, 1024 x 768	
Ethernet	RJ-45 x 1, 10/100/1000 Base-TX (Auto-negotiating, Auto MDI/MDI-X, LED indicators)	
USB 2.0	1	
COM 1	RS-232 (RxD, TxD, and GND); Non-isolated	
COM 2	RS-232 (RxD, TxD, and GND); Non-isolated	
COM 3	RS-485 (Data+, Data-); Non-isolated	

COM 4	RS-485 (Data+, Data-); 2500 V _{DC} isolated	
Wireless Port		
Wireless Port	-	3G (WCDMA)
I/O Expansion		
I/O Expansion Bus	Yes, one optional XV-board	
Mechanical		
Dimensions (W x H x D)	91 mm x 132 mm x 52 mm	117 mm x 126 mm x 62 mm
Housing	Plastic	Metal
Installation	DIN-rail mounting	Wall mounting
Environmental		
Operating Temperature	-25 °C ~ +75 °C	
Storage Temperature	-30 °C ~ + 80 °C	
Ambient Relative Humidity	10 % ~ 90 % RH (non-condensing)	
Power		
Input Range	+12 V _{DC} ~ +48 V _{DC}	
Isolation	-	
Consumption	4.8W (0.2 A @ 24 V _{DC})	
Modem Specification of WP-5231M-3GWA		
3G (WCDMA)		
Band	UMTS: 2100/1900/850 MHz	
Data Transfer	UMTS/HSDPA/HSUPA Upload: Max. 5.76 Mbps Download: Max. 7.2 Mbps	
2G (GPRS)		
Band	850/900/1800/1900 MHz	
GPRS Multi-slot	Class 10/8	
GPRS Mobile Station	Class B	
GPRS Class 10	Max. 85.6 kbps	
CSD	Up to 14.4 kbps	
Compliant to GSM phase 2/2+	Class 4 (2 W @ 850/900 MHz); Class 1(1W @ 1800/1900 MHz)	
Coding Schemes	CS 1, CS 2, CS 3, CS 4	
SMS	Text and PDU mode	


1.3. Overview

The WP-5231 Series modules are equipped with several interfaces and peripherals that can be integrated with external systems. Here is an overview of the components and its descriptions. The details of these items are as follows:


Front View

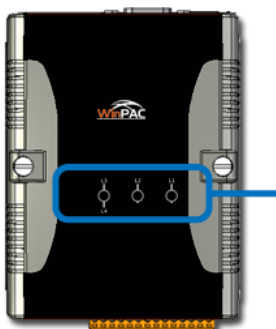

LED Indicators

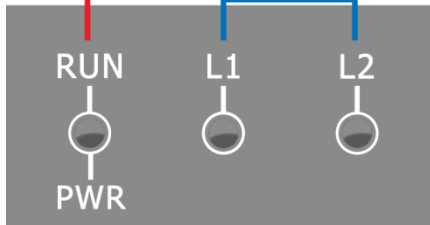
Item	Description									
LED Indicators	The WP-5231 series modules has one system LED indicators and two user programmable LED Indicators.	User Programmable LED Indicators								
		System LED Indicator								
										
	A system LED indicator display the status of the WP-5231 series modules. The details are shown as below.									
	<table><tr><th>LED Indicator</th><th>Color (On state)</th><th>Meaning</th></tr><tr><td rowspan="2">RUN/PWR</td><td>Green</td><td>Power is on</td></tr><tr><td>Orange</td><td>Power on and OS is running</td></tr></table>	LED Indicator	Color (On state)	Meaning	RUN/PWR	Green	Power is on	Orange	Power on and OS is running	
LED Indicator	Color (On state)	Meaning								
RUN/PWR	Green	Power is on								
	Orange	Power on and OS is running								

Top View

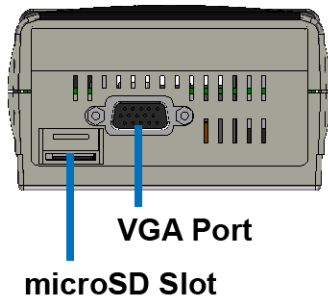


Item	Description
microSD Slot	The microSD slot can be used to restore the WinPAC system and expand the memory up to 32 GB.
VGA port	A VGA connector is a 3-row 15-pin connector that can be used with a variety of supported VGA resolutions, and the output resolution covers 640x480, 800x480, 800x600, 1024x768.


Bottom View



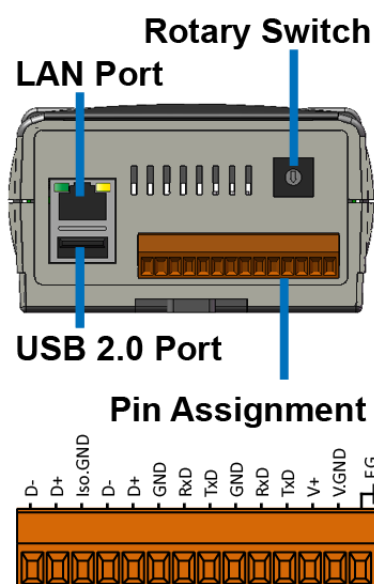


Item	Description
Rotary Switch	Rotary Switch is an operating mode selector switch which provides seven functions related to the selection of the operating mode for WinPAC.



Item	Description			
LAN Port	The WP-5231 has an Ethernet port that can be connected to a computer or device via an Ethernet cable.		<div>Link/Act 100M/1G</div> 	
	The Link/Act and 100M/1G LED indicators display the status of the WP-5231 LAN series modules. The details are shown as below.			
	LED Indicator	State (Color)		Meaning
	100M/1G	ON (Orange)		Network Speed: 1 G
		OFF		Network Speed: 10/100 M
Link/Act	ON (Green)	The Link is active		
	OFF	The Link is inactive		
	Blinking(Green)	Network activity		
USB 2.0 Port	The WinPAC has an USB ports that allow support for the USB devices such as mouse, keyboard or an external USB hard drive.			

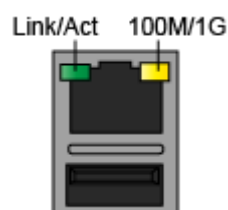

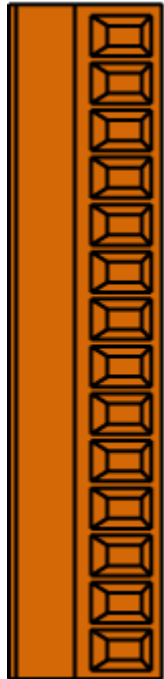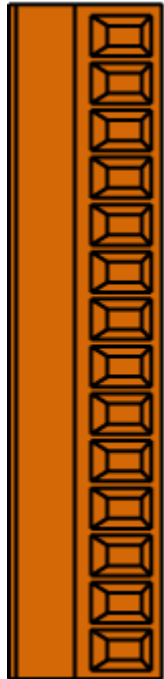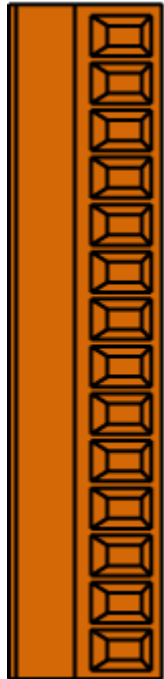Item	Description																																						
Pin Assignment	<div>The pin assignments of the connector are as follows:</div> <table><thead><tr><th>Pin</th><th>Signal</th><th>Description</th></tr></thead><tbody><tr><td rowspan="14"></td><td>1</td><td>F.G</td><td>Frame Ground</td></tr><tr><td>2</td><td>P.GND</td><td rowspan="2">Power Input</td></tr><tr><td>3</td><td>PWR</td></tr><tr><td>4</td><td>TXD</td><td rowspan="3">COM 1: RS-232</td></tr><tr><td>5</td><td>RXD</td></tr><tr><td>6</td><td>GND</td></tr><tr><td>7</td><td>TXD</td><td rowspan="3">COM 2: RS-232</td></tr><tr><td>8</td><td>RXD</td></tr><tr><td>9</td><td>GND</td></tr><tr><td>10</td><td>D+</td><td rowspan="2">COM 3: RS-485</td></tr><tr><td>11</td><td>D-</td></tr><tr><td>12</td><td>ISO.GND</td><td rowspan="3">COM 4: RS-485</td></tr><tr><td>13</td><td>D+</td></tr><tr><td>14</td><td>D-</td></tr></tbody></table>	Pin	Signal	Description		1	F.G	Frame Ground	2	P.GND	Power Input	3	PWR	4	TXD	COM 1: RS-232	5	RXD	6	GND	7	TXD	COM 2: RS-232	8	RXD	9	GND	10	D+	COM 3: RS-485	11	D-	12	ISO.GND	COM 4: RS-485	13	D+	14	D-
Pin	Signal	Description																																					
	1	F.G	Frame Ground																																				
	2	P.GND	Power Input																																				
	3	PWR																																					
	4	TXD	COM 1: RS-232																																				
	5	RXD																																					
	6	GND																																					
	7	TXD	COM 2: RS-232																																				
	8	RXD																																					
	9	GND																																					
	10	D+	COM 3: RS-485																																				
	11	D-																																					
	12	ISO.GND	COM 4: RS-485																																				
	13	D+																																					
	14	D-																																					

COM1 (3-wire RS-232)

Note: 16C550 compatible

Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2

FIFO: 64 bytes

COM2 (3-wire RS-232)

Note: 16C550 compatible

Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2

FIFO: 64 bytes

COM3 (2-wire RS-485)

Note: 16C550 compatible

Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8

Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2

FIFO: 64 bytes

COM4 (2-wire RS-485)

Note: 16C550 compatible

Baud Rate: 115200, 57600, 38400, 19200, 9600, 4800, 2400, 1200 bps

Data Bits: 5, 6, 7, 8


Parity: None, Even, Odd, Mark (Always 1), Space (Always 0)

Stop Bits: 1, 2


FIFO: 64 bytes

1.4. Dimensions

WP-5231

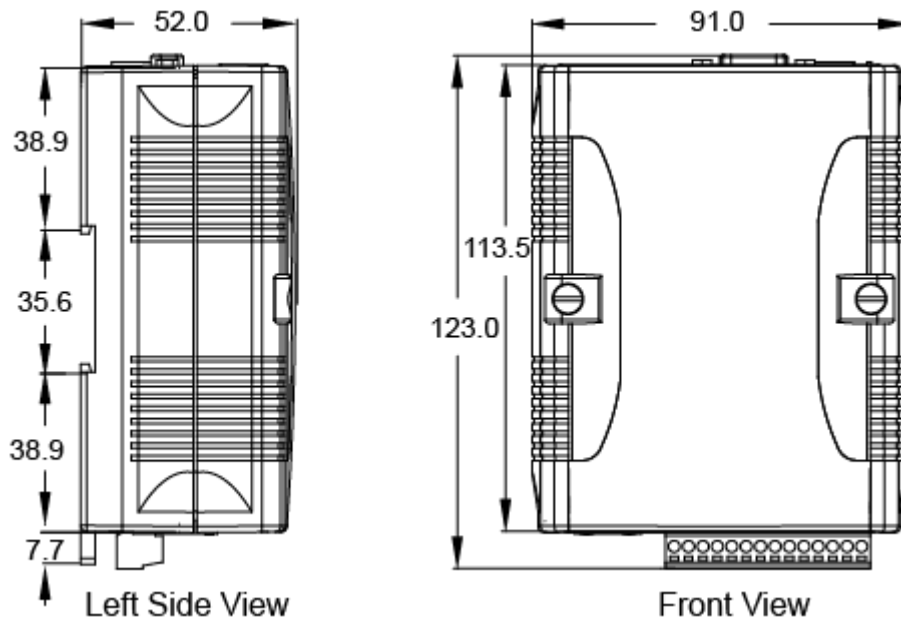

WP-5231M-3GWA

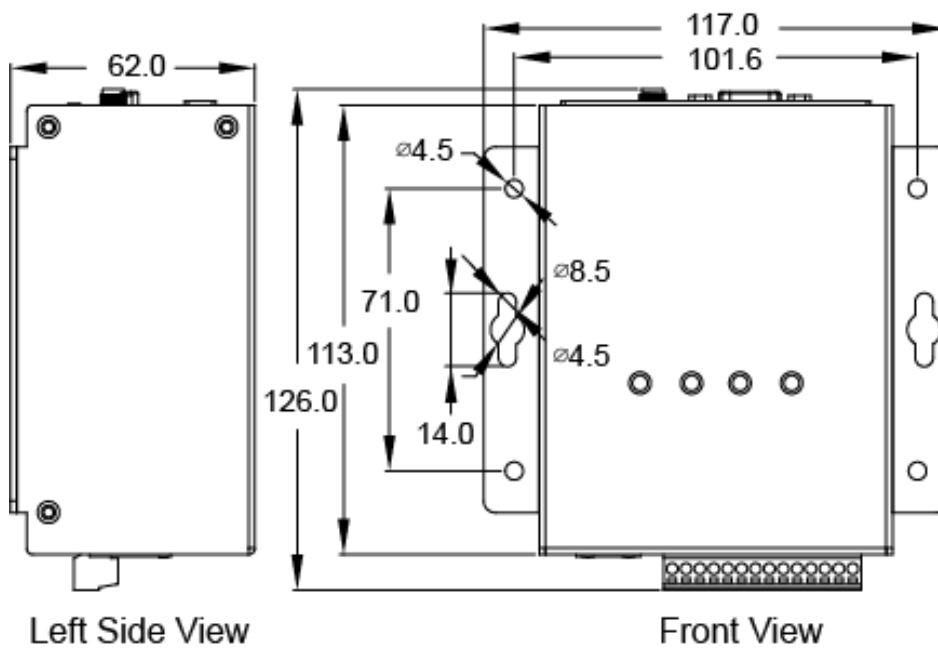

1.5. Companion CD

This package comes with a CD that provides a collection of the software utility, documentation, drivers, demo program and application. The CD contains several subdirectories located in \wp-5231 directory. All of them are listed below.

CD:\wp-5231\

Backup

The files package for each release.

demo

The demo programs for examples of use in the application.

Document

The technical support documents for installation, operation, maintenance, development and application.

Micro_SD

The files stored on micro_SD card, that can be used to boot and recover the system from micro SD card.

OS_image

The files and related information for OS releases and technology.

PC_Tools

The tools and utilities for operation with PC.

SDK

The sources for development and application in your application.

System_Disk

The tools and drivers related to System_Disk that install on WP-5231.

Update

The installation packages related to WP-5231.

2. Getting Started

This chapter provides a guided tour of the WinPAC installation and configuration that describes the steps needed to download, install, configure, and run the basic procedures for user working with the WinPAC for the first time.

Before starting any task, please check the package contents. If any of the following package contents are missing or damaged, contact your dealer, distributor.



WP-5231



A microSD card and a micro SD/SD adapter



Software Utility CD



Screw Driver

(1C016)

2.4 mm




GSM/GPRS Antenna

(ANT-421-02)

(for WP-5231M-3GWA series only)

2.1. Mounting the Hardware

Step 1: Mounting WP-5231

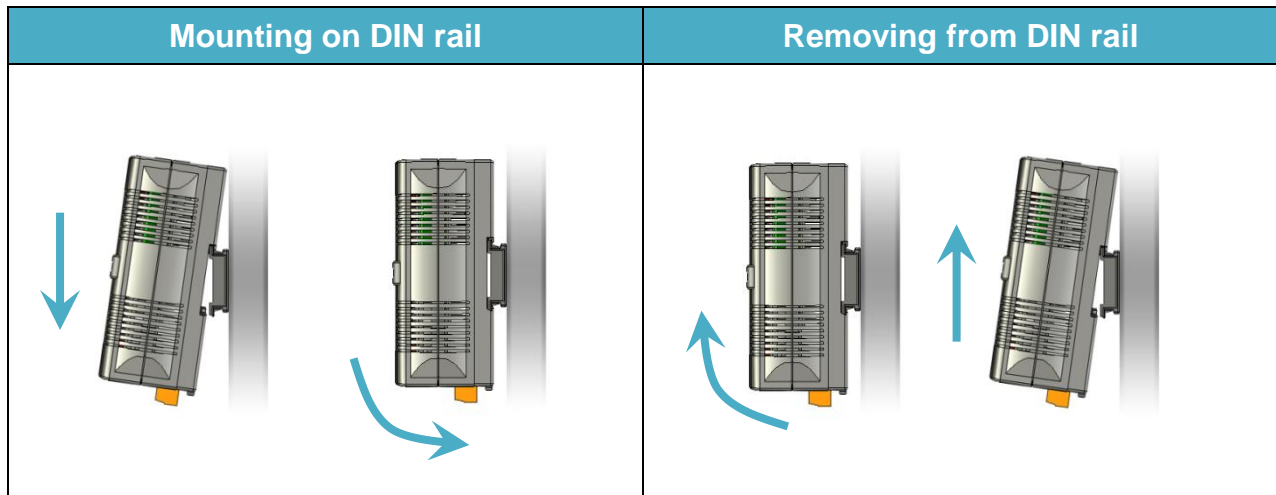


DIN rail mounting

The WP-5231 has simple rail clips for mounting reliably on a standard 35 mm DIN rail.



Step 2: Connecting to a PC, the USB device, and the power supply

- i. Connect the mouse or keyboard to the USB port.
- ii. Connect PC to the Ethernet port through an Ethernet switch.
- iii. Connect the power supply (+12 to +48 VDC) to PWR and P.GND terminals.
- iv. Connect the monitor to the VGA port.

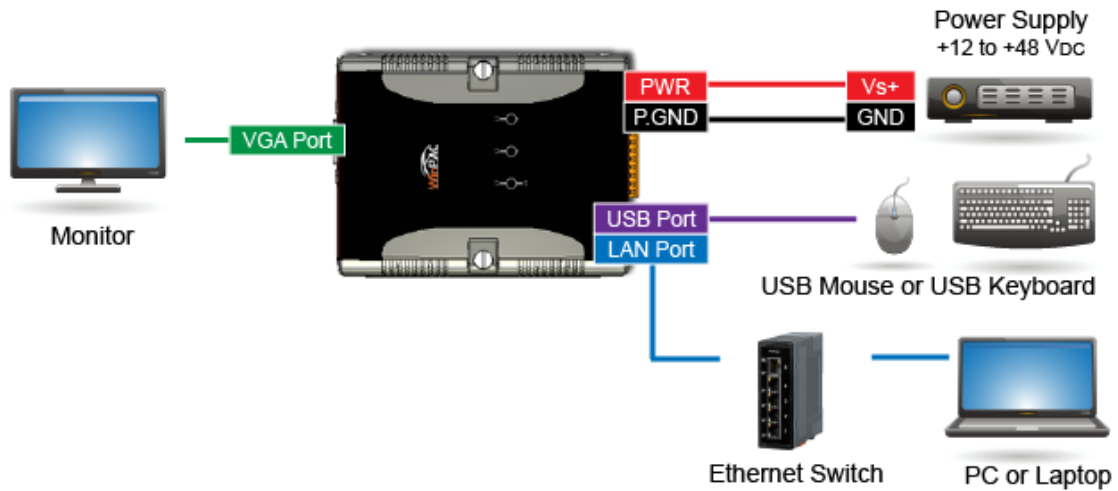

2.2. Installing the XV-Board

What's in the package

(A) Screws (A1) (A2) (A3)


(B1) XV-board


(B2) Connector


(C) Pin assignment label


for VPD-133/132, not for WP-5231 series


DO GND	DO15	DO14	DO13	DO12	DO11	DO10	DO9	DO8	DO7	DO6	DO5	DO4	DO3	DO2	DO1	DO0
XV1111 / XV111A																


(1) 


(2) 


(3) 

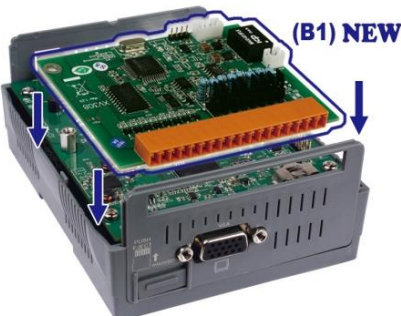(4) 

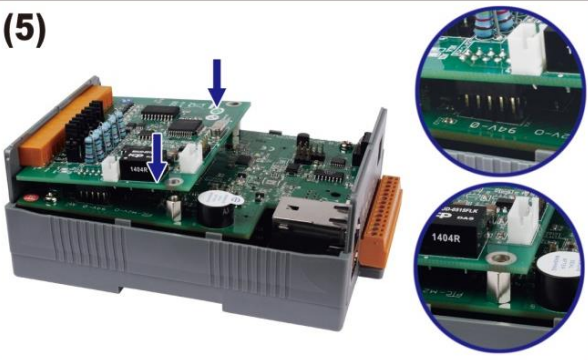(5) 


(6) 

(7) 

(8) 

2.3. Configuring the Boot Mode

The WP-5231 has several operating modes, which can be selected by a rotary switch.

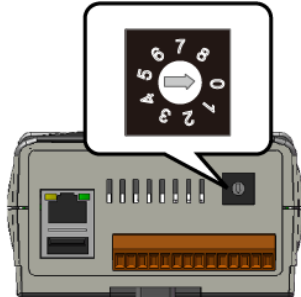

The table below lists the operation modes available with the WP-5231.

Position	Operating Mode
0	Normal mode (Default)
1	Safe mode
2	Debug mode
3	OS update mode by Ethernet
4	Reserve
5	OS update mode by Micro_SD
6	Reserve
7 ~ 9	Normal mode (For user)

The following is a brief introduction of these modes.

Normal Mode (Default mode)

Normal mode is the default mode of operation and the one you will use most of the time. Use this mode for more tasks and configurations. Programs also are executed in this mode.

Safe Mode

Safe mode is a trouble shooting. The mode loads the minimum required device drivers and system services to boot the WP-5231.

If you have malicious software or a program caused the WP-5231 cannot be boot or run the normal mode, you can boot in safe mode to solve the problem.

Debug Mode

Debug mode is a special environment in which program debug functions can be used in addition to normal system functions.

Debug mode is unsupported.

OS Update Mode

OS update mode is a way used to update OS. For more information on updating the WP-5231 OS image, please refer to section 6.1. OS updates

Reserve->OS Development Mode

The positions 4, 6, of rotary switch are reserved for OS development.

User Mode

The positions 7, 8, 9 of rotary switch are reserved for user's applications.


When WP-5231 is boot with one of these positions, it is boot at normal mode. User's application can check the position of the rotary switch position to run at different mode.

2.4. Using PAC Utility to Manage WinPAC


The PAC Utility is a collection of the WinPAC system tool that allows user quickly and easily manage and configure the WinPAC.

For more detailed information on PAC Utility applications, please refer to “3.1. PAC Utility”


Step 1: Double-click the PAC Utility on the desktop

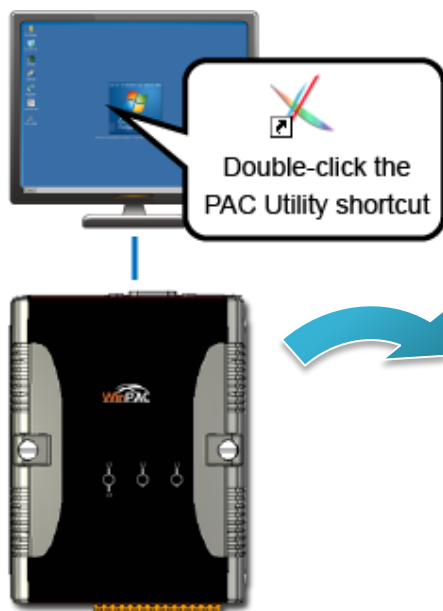

Step 2: Configure IP address (DHCP), FTP Server, Auto Execution files..., etc

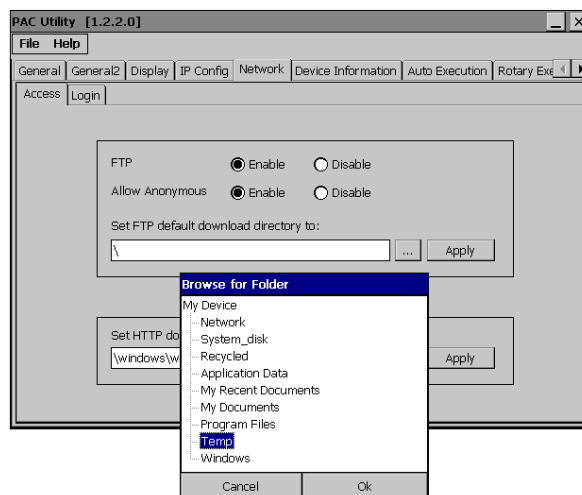


Step 3: Reboot the WinPAC

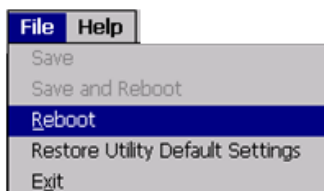


2.5. Using DCON Utility Pro to Configure I/O Modules

DCON Utility Pro enables users easily to configure and manage the I/O modules via Ethernet or serial ports (RS-232/RS-485).

Step 1: Double-click the DCON_Utility_Pro on the desktop

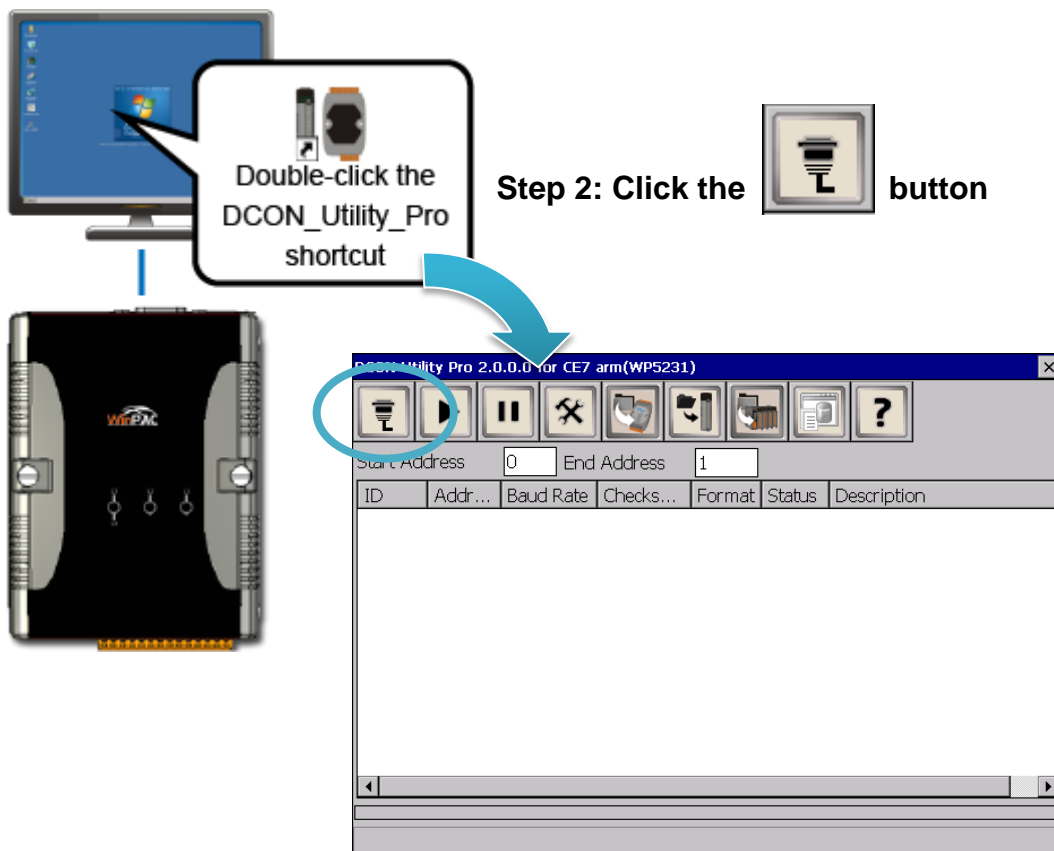

Step 3: Configure the communication settings

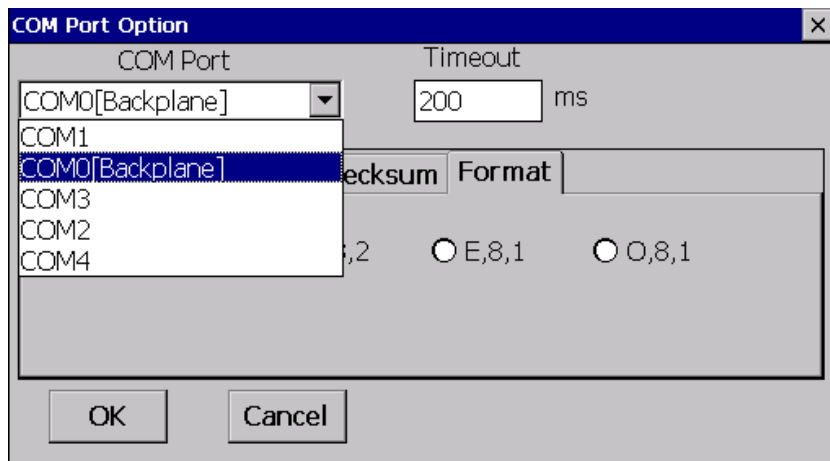

Tips & Warnings



The COM port settings for expansion I/O modules are listed below.

COM0[Backplane]




COM1/2/3/4




For more information on these COM port selections, please refer to the specification of the pin assignments in section 1.3. Overview

Step 4: Click the  button

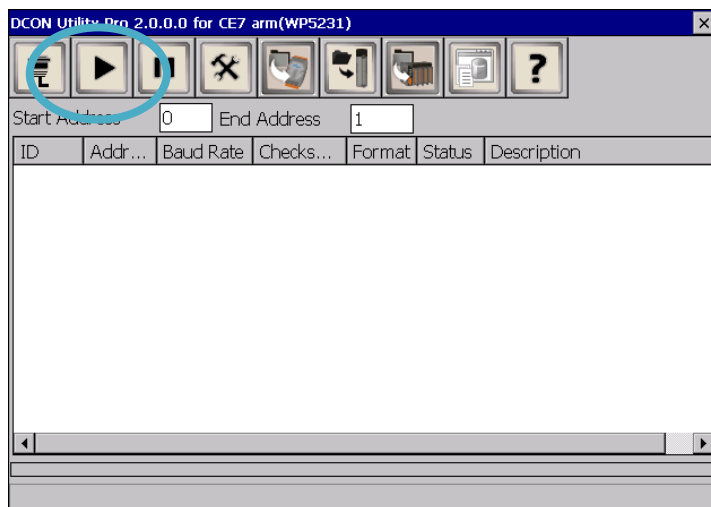


Step 5: Click the module name to configure the I/O module

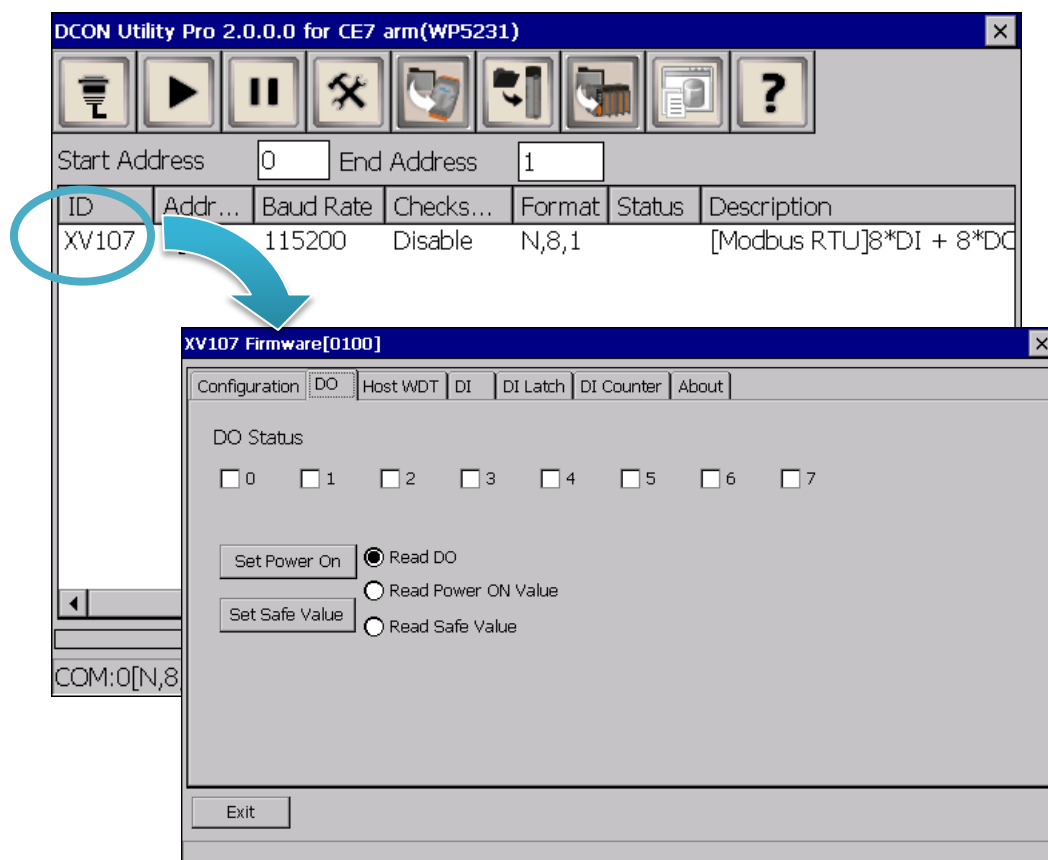

2.6. Changing the User Interface Language

The Windows CE operating system on the WinPAC comes with several built-in functions.


Step 1: Click Start menu, point to Settings, click Control Panel, and then click Regional Settings Options

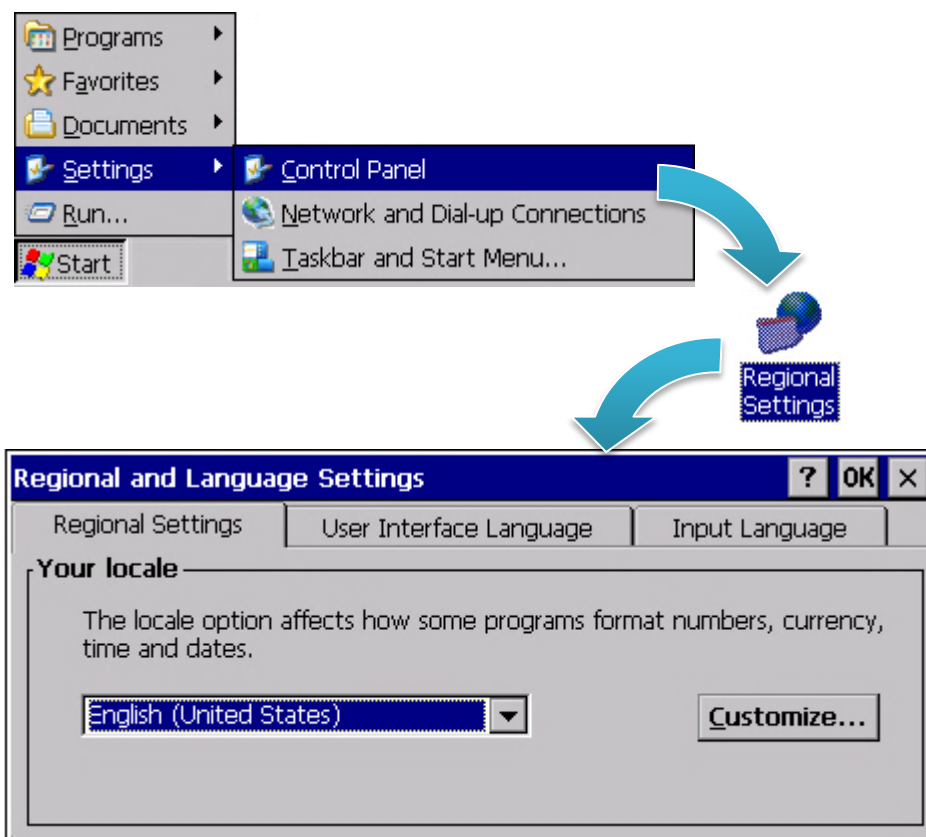

Step 2: Click User Interface Language tab, choose to your local language, and then click OK



Step 3: Run the PAC Utility, and then reboot the WinPAC for changes to take effect

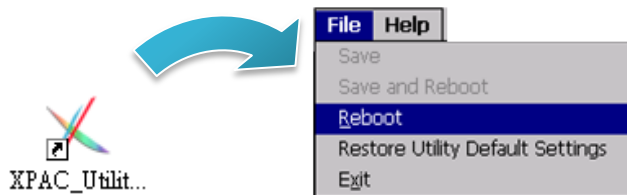

3. Tools and Tasks


This chapter provides a brief introduction of the WP-5231 service tools and its benefits.

There are several tools and utilities built-in and designed for use with WP-5231. Some of these are pre-installed on WP-5231 and can work directly on WP-5231, and some of these are supporting tools and can help you to manage the WP-5231 remotely on a PC.

The following tools are pre-installed on WP-5231 and can work directly on WP-5231 that can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\System_Disk\Tools\


http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/system_disk/tools/

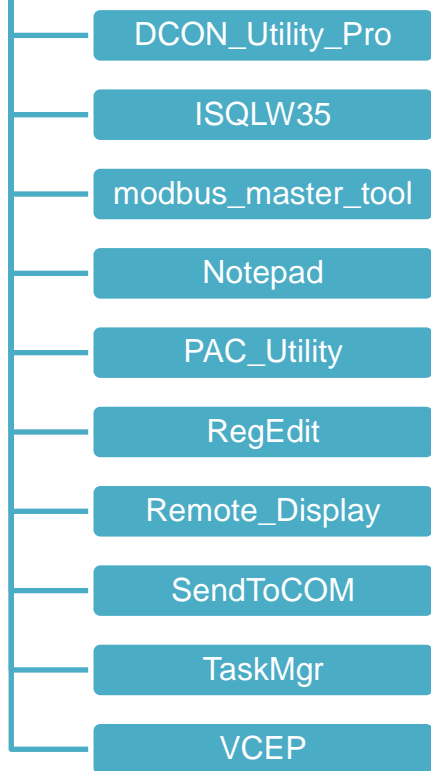

The following tools are supporting tools for remote managing the WP-5231 used on PC that can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.


CD:\wp-5231\PC_Tools\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/pc_tools/

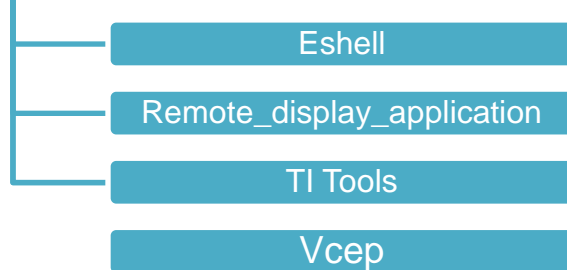

3.1. PAC Utility


PAC Utility is a collection of software applications that enable management and configuration of WinPAC system and features.

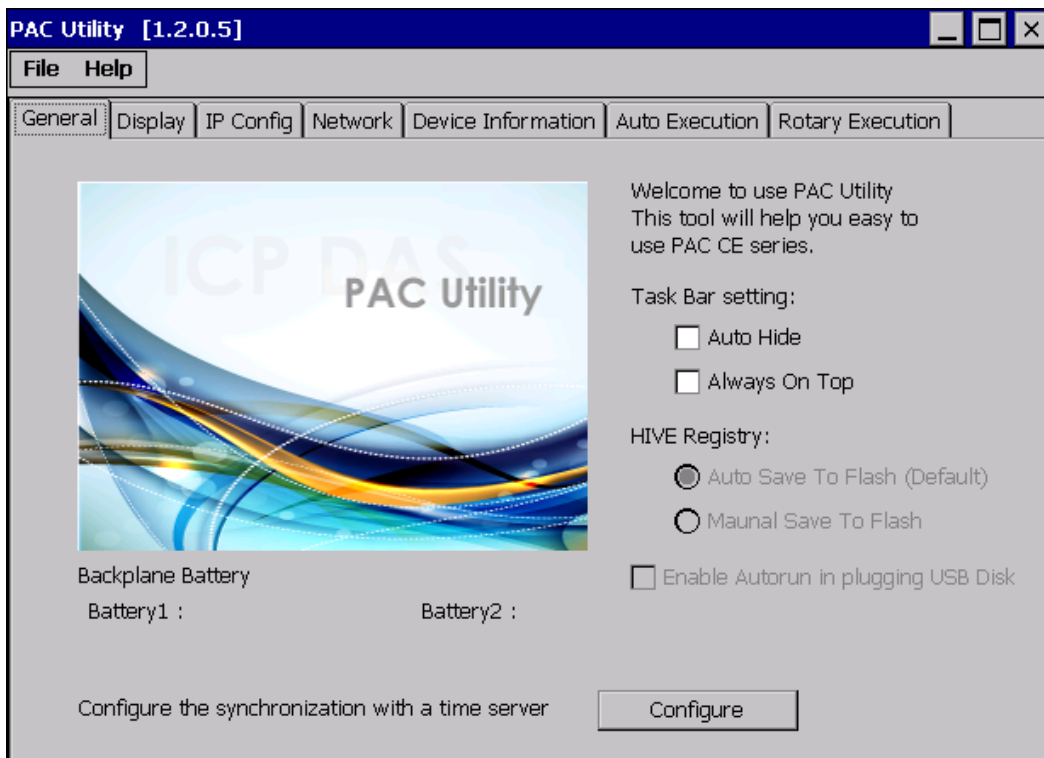

The PAC Utility includes the following menu bars and property tabs. All of these functions will be explained later.


Menu bar	Property Tab
<ul style="list-style-type: none">➤ File➤ Help	<ul style="list-style-type: none">➤ General➤ General2➤ Display➤ IP Config➤ Network➤ Device Information➤ Auto Execution➤ Rotary Execution

3.1.1. Menu Bar – File

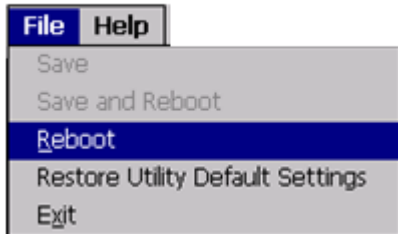

The menus use to	How to use
Reboot	Restarts the WinPAC
Restore Default Settings	Restore the settings of WinPAC to its default.
Exit	Exits the PAC Utility.


3.1.2. Menu Bar – Help

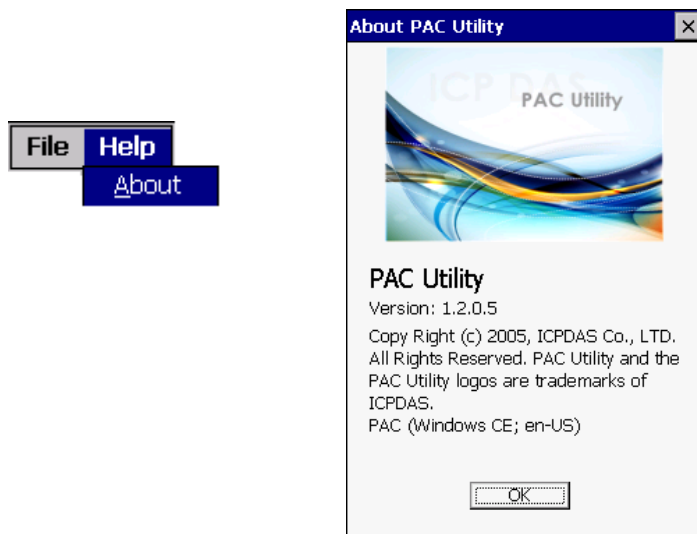

The menus use to	How to use
About	Displays a dialog box with information about PAC Utility, including the current version and copyright information.

3.1.3. Property Tab - General

The General tab provides functions to configure the task bar, check the status of the battery..., etc.

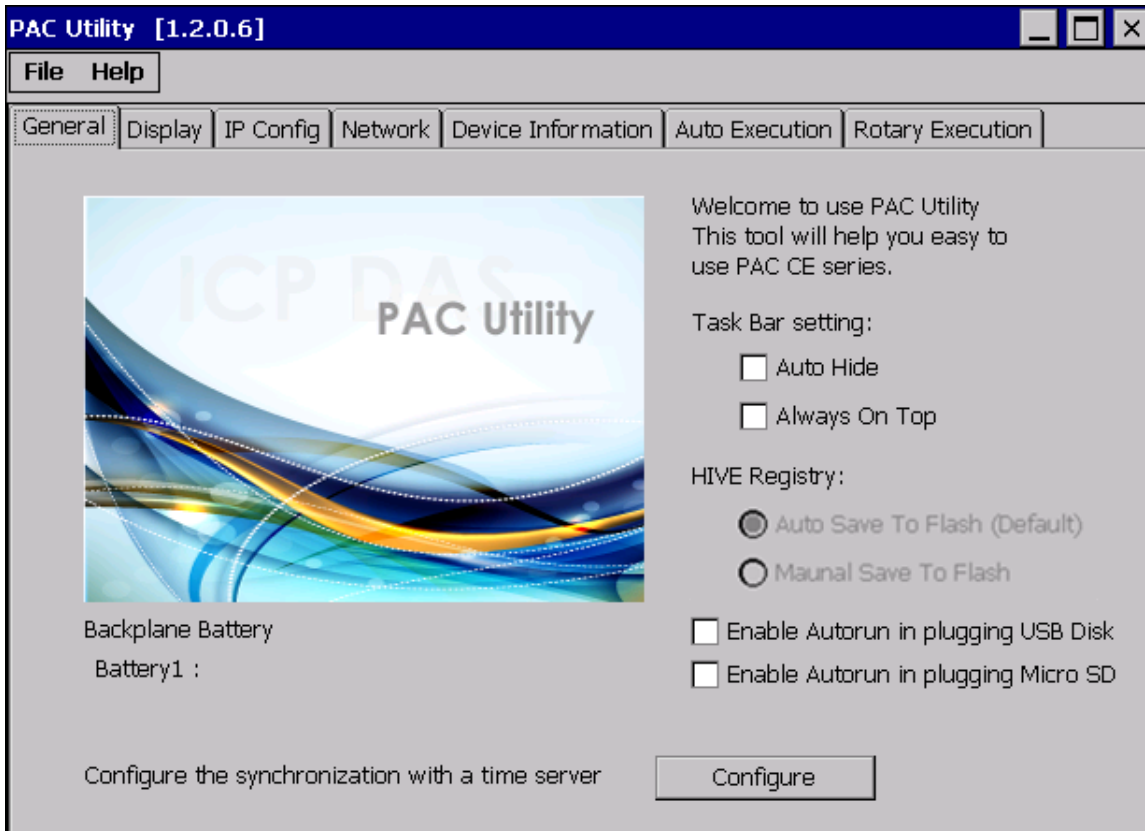


The tab use to	How to use
Lock or Auto-Hide the taskbar	Auto-Hide: Select the Auto Hide check box. Lock: Select the Always On Top check box.
Auto save or manual save to flash	By default, these options are unavailable. Auto save to flash: This option is checked by default. Any changes made to the WP-5231 will be saved and only take effect after the WP-5231 reboots. Manual save to flash: This option is useless.

The tab use to	How to use
Check the status of the battery	See the Battery1 field that displays the display resolution.
Automatic synchronization of system time	Refer to the Appendix A.2. How to configure the service for automatically synchronizing with the internet time server.

3.1.4. Property Tab – Display

The Display tab provides functions to configure the monitor settings.

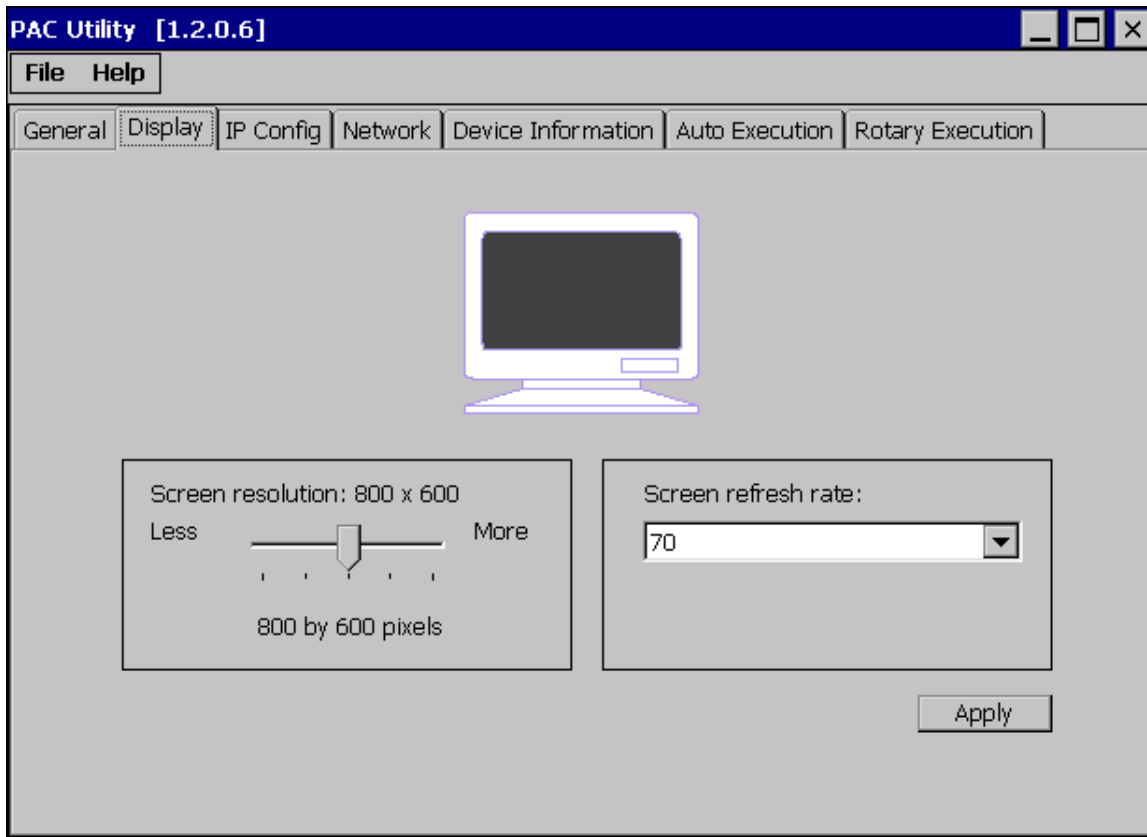

The tab use to	How to use
Adjust the screen resolution	Move the slider to the left to decrease the resolution or move the slider to the right to increase the resolution, and then click the Apply button.
Change the screen refresh rate	Select the desired refresh rate from the Screen refresh rate drop-down list, and then click the Apply button.

3.1.5. Property Tab – IP Config

The IP Config tab provides functions to configure either DHCP (Roaming) or manually configured (Static) network settings and to monitor the MAC address. Generally, DHCP is the default settings, but if you don't have a DHCP server, you must configure the network settings by using manual configuration.

PAC Utility [1.2.0.6]

File Help

General Display **IP Config** Network Device Information Auto Execution Rotary Execution

LAN 1:

MAC Address: 78-C5-E5-88-96-8C

☒ Use DHCP to get IP address

☐ Assign IP address

IP Address:

Mask:

Gateway:

DNS Server:

☐ Reboot for changes to take effective

Apply


The tab use to	How to use
Set the network settings	<p>Use DHCP to get IP address:</p> <p>Select the Use DHCP to get IP address option, and then click the Apply button.</p> <p>Assign an IP address:</p> <p>Select the Assign IP address option, and then click the Apply button.</p>

3.1.6. Property Tab – Network

The Network tab comprises two tabs - Access and Login.

Access

The Access tab provides functions to enable/disable the FTP access, enable/disable anonymous FTP access, and configure the FTP and HTTP directory path.

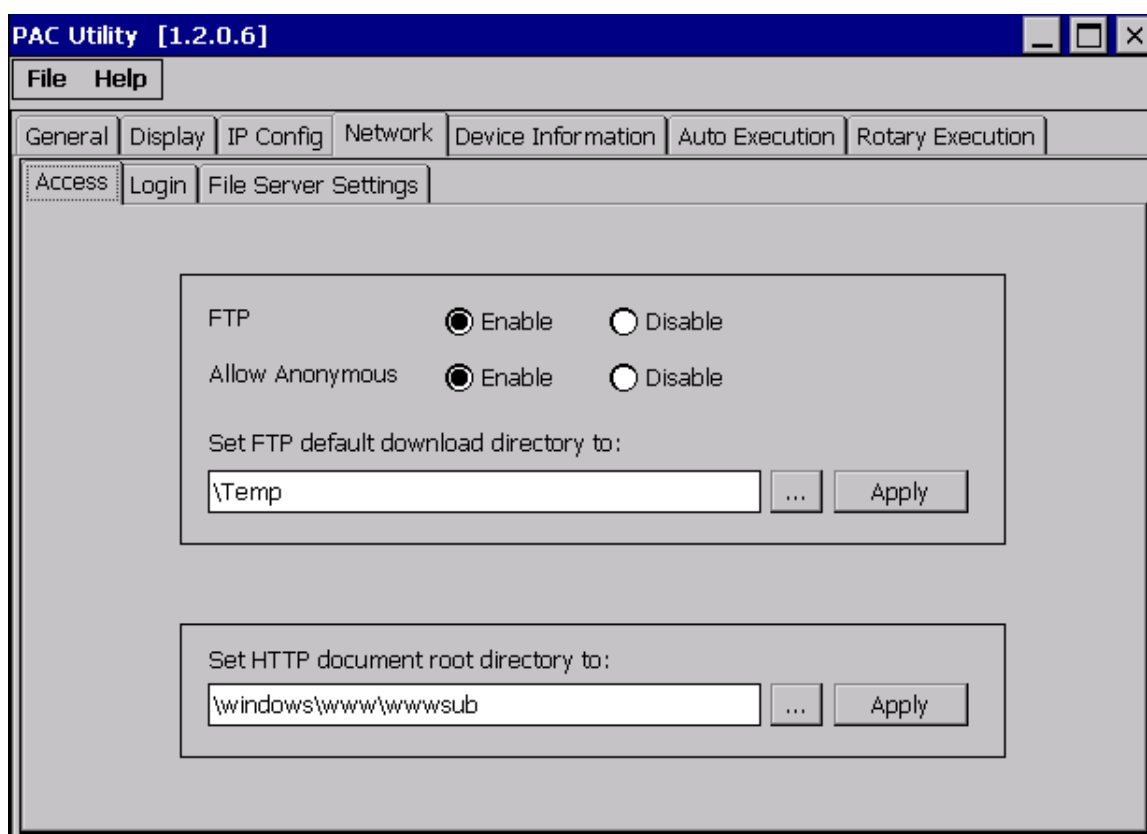

The tab use to	How to use
Enable or disable the FTP access	<p>Enable:</p> <p>Select the Enable check box in the FTP field, and then click the Apply button.</p> <p>Disable:</p> <p>Select the Disable check box in the FTP field, and then click the Apply button.</p>

The tab use to	How to use
Enable or disable anonymous FTP access	<p>Enable:</p> <p>Select the Enable check box in the Allow Anonymous field, and then click the Apply button.</p> <p>Disable:</p> <p>Select the Disable check box in the Allow Anonymous field, and then click the Apply button.</p>
Set the FTP directory path	Enter a new path in the Set FTP default download directory to: field, and then click the Apply button.
Set the HTTP directory path	Enter a new path in the Set HTTP document root directory to: field, and then click the Apply button.

Login

The Login tab provides functions to maintain the FTP accounts.

PAC Utility [1.2.0.6]

File Help

General Display IP Config Network Device Information Auto Execution Rotary Execution

Access Login File Server Settings

User Name Password


ICPDAS **** Add Delete

User name	Password
ICPDAS	****

The tab use to	How to use
Maintain the FTP accounts	Refer to the Appendix C.1 How to add a user account to remote login the WinPAC from PC.

FTP Server Settings

The FTP Server Settings tab provides functions to set the SMB server.

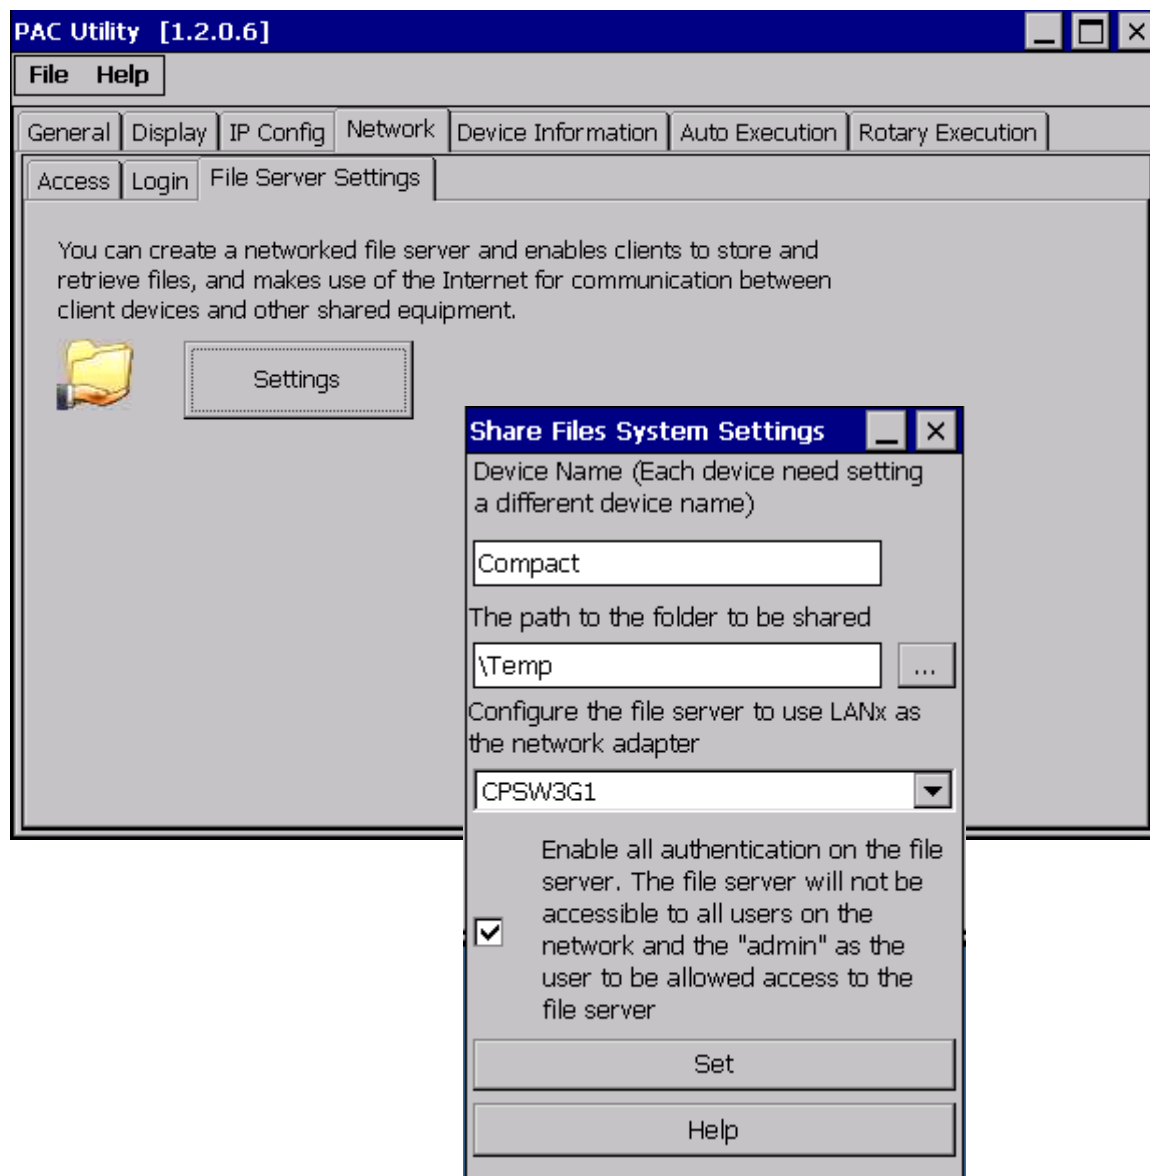

The tab use to	How to use
Set the SMB server	Click the Settings button to set the SMB server path.

3.1.7. Property Tab – Device Information

The Device Information tab provides functions to monitor necessary system information of the WinPAC. The information is the most important note of version control for upgrading system.

The screenshot displays the 'PAC Utility [1.2.0.6]' window with the 'Device Information' tab selected. The window contains a menu bar with 'File' and 'Help', and a tabbed interface with 'General', 'Display', 'IP Config', 'Network', 'Device Information', 'Auto Execution', and 'Rotary Execution'. The 'Device Information' tab shows a list of slots (Slot 1 to Slot 7) on the left, each with an empty text box. To the right of each slot, there are labels for various system parameters and their corresponding values in text boxes:

Slot	CPU Type	Serial Number	Backplane Version	CPU Version	OS Version	Eboot Version	.NET CF Version	SQL CE Version	PACSDK Version
Slot 1:	WP523x	01-A8-2C-1F-16-00-00-20	N/A	N/A	1005	5.2.5.25	3.5.7338.00	3.5.8154.0	4.3.2.1
Slot 2:									
Slot 3:									
Slot 4:									
Slot 5:									
Slot 6:									
Slot 7:									


3.1.8. Property Tab – Auto Execution

The Auto Execution tab provides functions to configure programs running at WinPAC startup, it allows users to configure ten execute files at most.

Tips & Warnings




The specific extensions are .exe and .bat, and they are executed in order of program 1, program 2, etc.

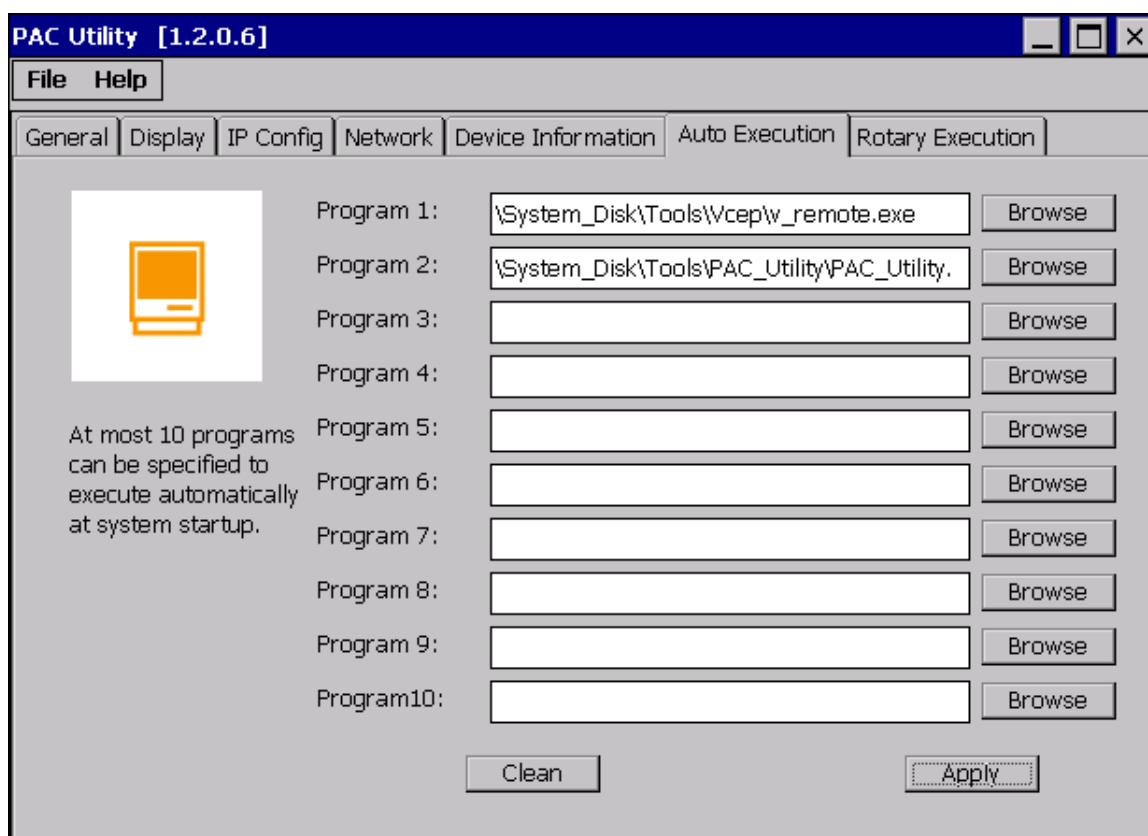

The tab use to	How to use
Configure programs running at startup	Click the Browse button to select the execute file which you want, and then click the Apply button.

3.1.9. Property Tab – Rotary Execution

The Rotary Execution tab provides functions to configure programs running at WinPAC startup in one of the user defined mode, it allows users to configure ten execute files at most.

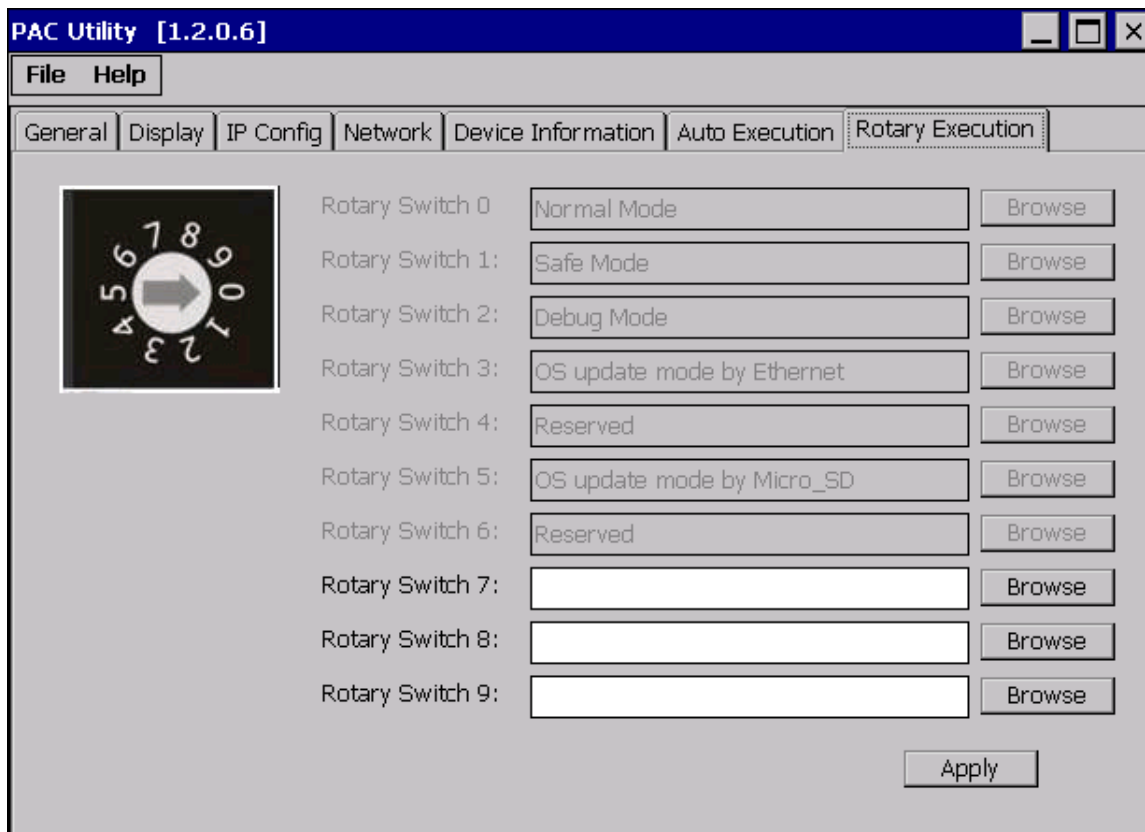


The tab use to	How to use
Configure programs running at startup in one of the user defined mode	Click the Browse button to select the execute file which you want, and then click the Apply button.

3.2. DCON Utility Pro


DCON Utility Pro enables users easily to configure and manage the I/O modules via Ethernet or serial ports (RS-232/RS-485).

For more detailed information on how to use DCON Utility Pro to configure I/O modules, please refer to “2.5. Using DCON Utility Pro to Configure I/O Modules”

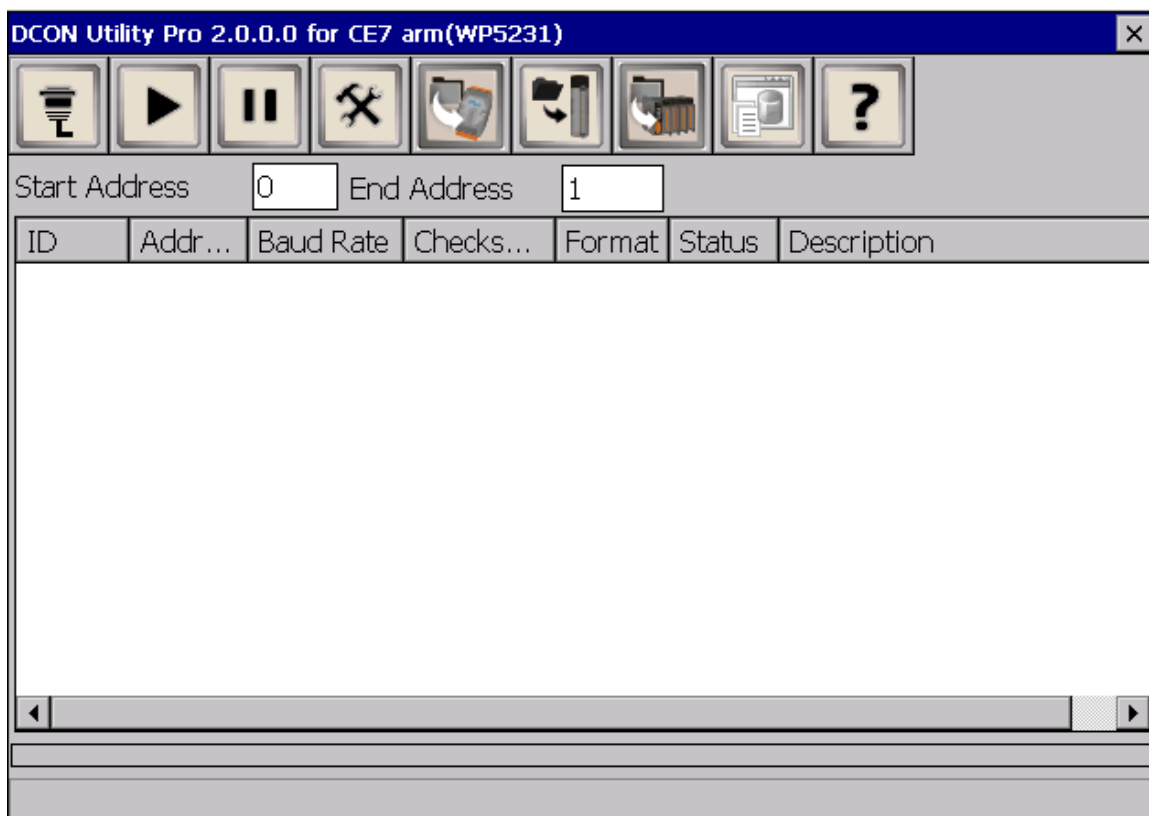

3.3. TaskMgr

The TaskMgr is a Windows CE application, which provides real time info on all processes and threads including System threads, similar in appearance to the Windows Task Manager.

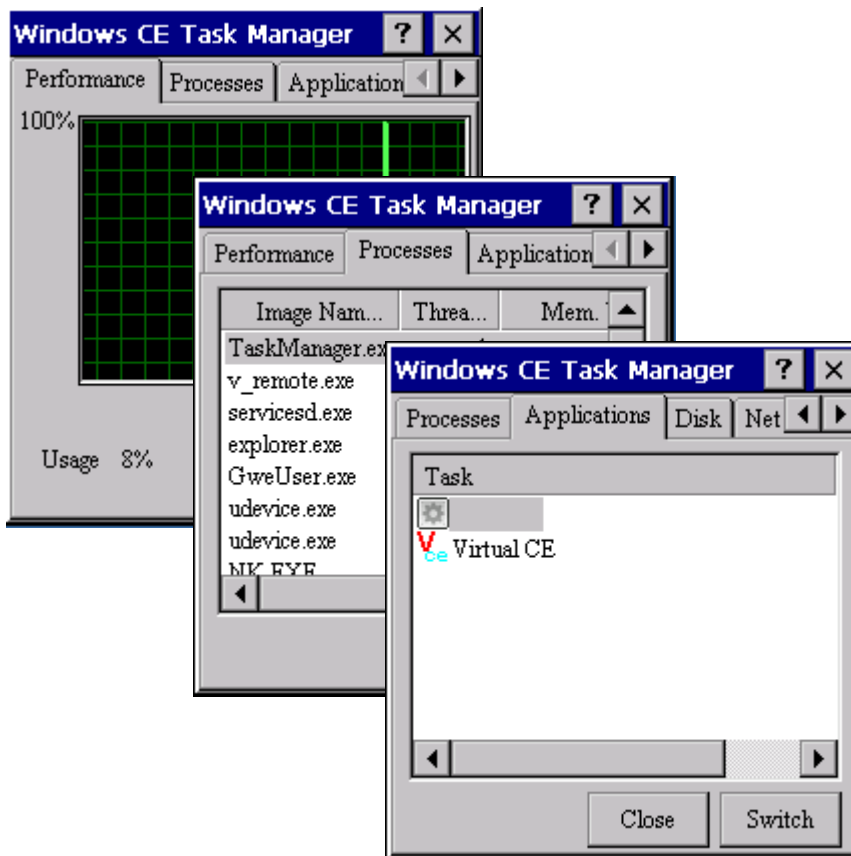

3.4. VCEP

ICPDAS VCEP is designed for managing your WinPAC anywhere. No matter where you are, ICPDAS VCEP provides a convenient environment on the Desktop PC and lets you control your WinPAC remotely.



ICPDAS VCEP is composed of two main components: The “Server” which runs on WinPAC and the ‘Client’ which runs on a Desktop PC.

Once a connection is established between the client and server (initiated by the client), the client will periodically send requests for screen updates and send mouse/key click information to the server to simulate.

Each video frame is inter-compressed against the previous frame and then intra-compressed with a modified LZW scheme to minimize the amount of data transmitted from server to client.

For more detailed information on VCEP application, please refer to

http://ftp.icpdas.com.tw/pub/cd/winpac/napdos/wp-8x4x_ce50/pc_tools/vcep_5.0.0.0/

3.5. Remote_Display

The "Remote Display" allows WinPAC to be controlled and monitored from a remote location. This tool is composed of two parts, a client and a server. The server is a program named cerdisp.exe running on WinPAC. The client is a PC-based program named cerhost.exe running on the PC.

3.6. SendToCOM


The SendToCOM uses the serial port to communicate with expansion module. To use the SendToCOM, you can send data to expansion module through the serial port, and receive data from other device through the serial port.

For more information about these commands for communicating with expansion module, please refer to:

[http://www.icpdas.com/root/product/solutions/remote_io/rs-485/i-8k_i-87k/i-87k_selection.html#b](http://www.icpdas.com/root/product/solutions/remote_io/rs-485/i-8k_i-87k/i-8k_i-87k_selection.html#b)


3.7. RegEdit

The RegEdit provides a hierarchical representation of the registry on a target computer, similar in appearance to the Windows Registry Editor. The standard registry roots are represented; you can add keys beneath a root to point to existing registry keys, or you can add your own keys. Values can be changed for existing keys, or added for new keys, and default keys can be specified. For more information, see Registry Settings Management in Deployment.

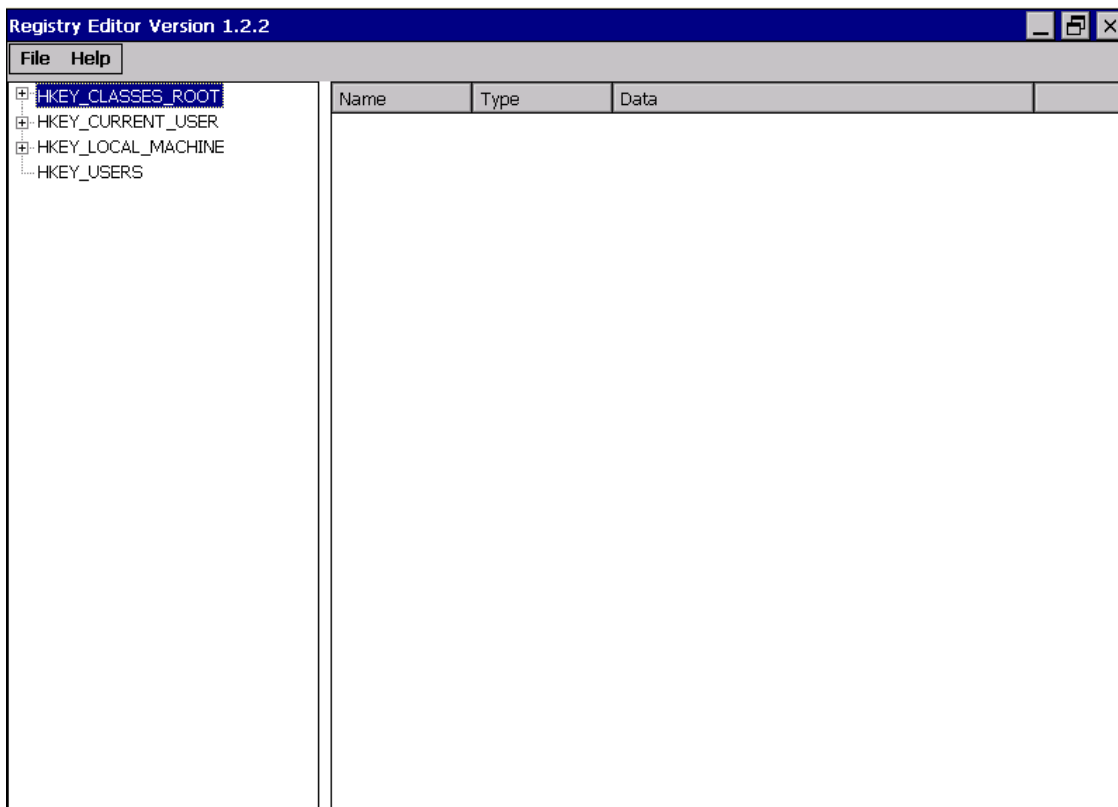


3.8. ISQLW35

The "ISQLW35" is a Windows Embedded Compact 7 functionality that implements SQL Server Compact 3.5 Query.

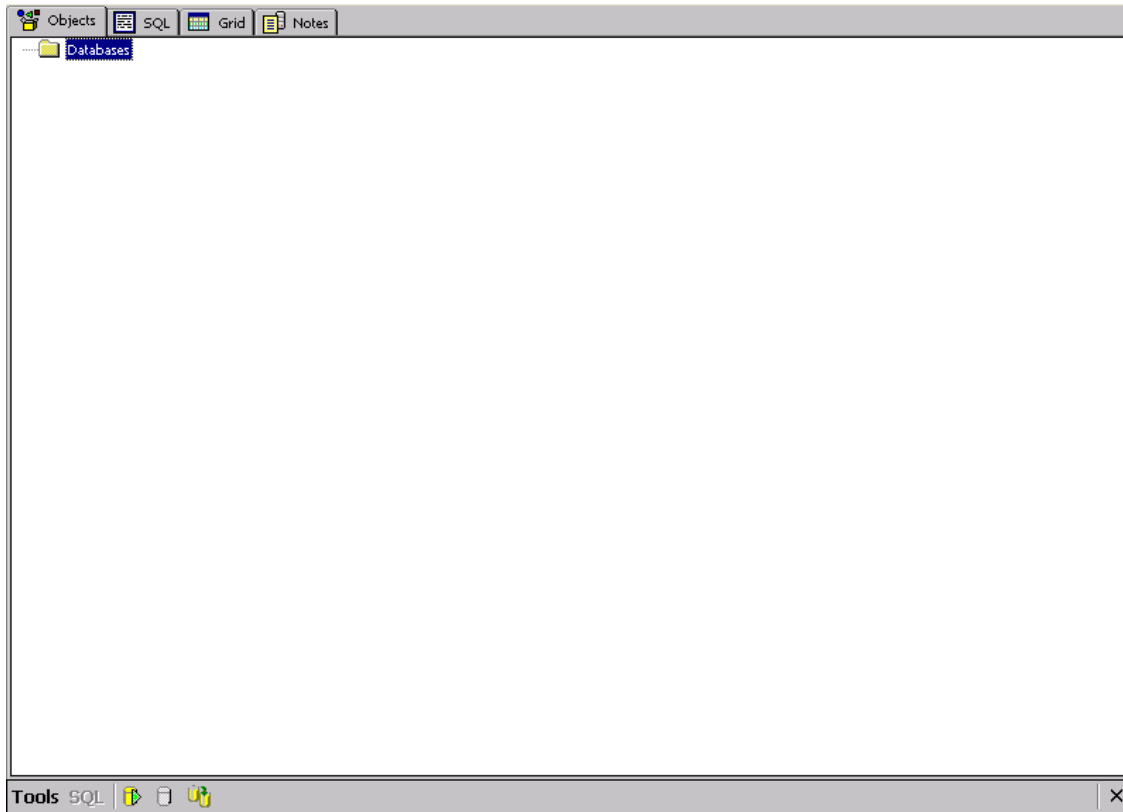

3.9. INotepad

The INotepad is a common text-only editor. The resulting files have no format tags or styles, making the program suitable for editing system files that are to be used in a DOS environment.

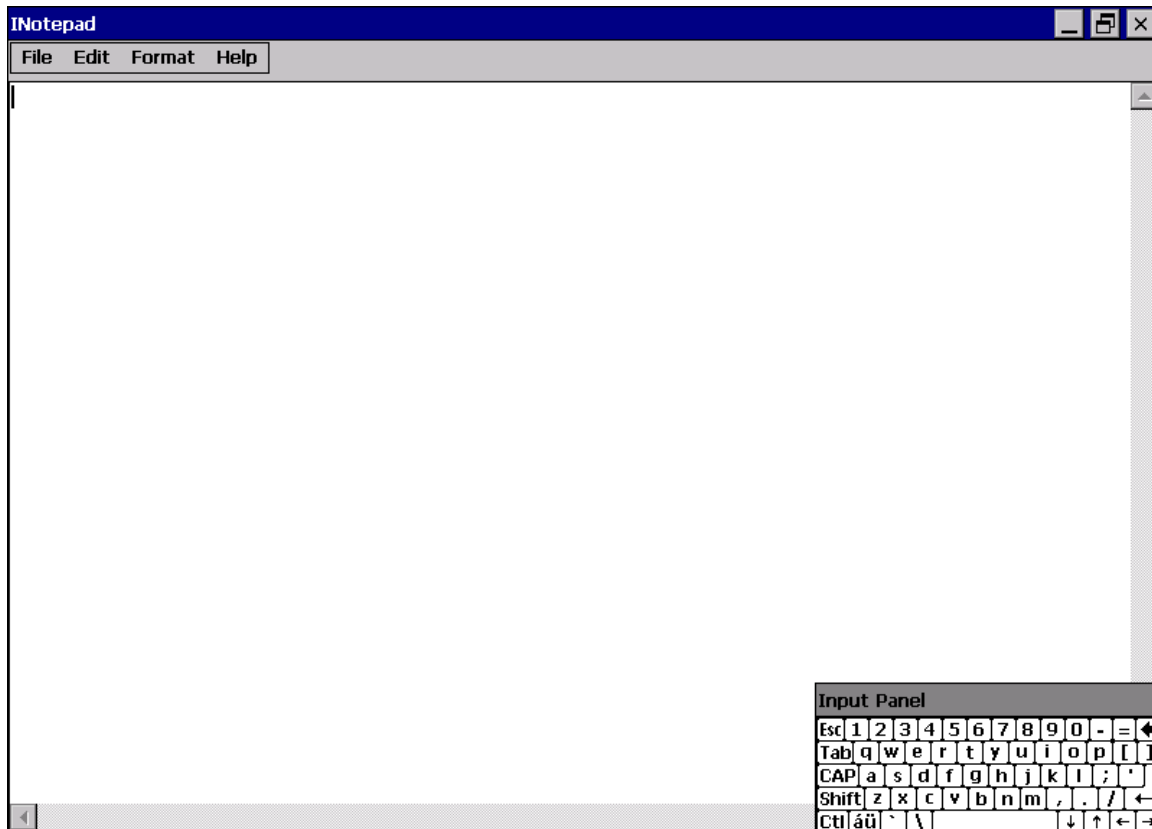

4. Your First WinPAC Program

This chapter provides a guided tour that describes the steps needed to set-up a development environment, download, install, configure for user programming with the WP-5231 series modules.

Before writing your first program, ensure that you have the necessary development tool and the corresponding WinPAC SDKs are installed on your system.

Development Tools

WP-5231 series modules are Windows CE-based units. Windows CE is a mature embedded operating system which supports rapid development.

The table below lists the supported development tools and development languages to develop WP-5231 applications.

Development Tools \ Languages		Visual Basic.Net	Visual C#	Visual C++
Visual Studio 2005 or earlier	Any versions except Professional	-	-	-
	Professional	-	-	-
Visual Studio 2008	Any versions except Professional	-	-	-
	Professional	√	√	√
Visual Studio 2012 or later	Any versions except Professional	-	-	-
	Professional	-	-	-

4.1. Preparing the Development Tools

WP-5231 is a Windows CE-based unit. Windows CE is a mature embedded operating system which supports rapid development. The standard development tool is list as follows which is highly integrated, with comprehensive support for developing applications of Windows CE-based WP-5231.

➤ Visual Studio 2008



WP-5231 has .NET Compact Framework 3.5 installed. Visual Studio 2008 takes full advantage of the .NET Compact Framework, which uses public Internet standards to enable integration with new and existing applications running on any platform. Supported languages include Visual C#, Visual C++ and Visual Basic .NET.

Installation Steps:

1. Visual Studio 2008 Professional

Purchase from MSDN subscription

Microsoft DreamSpark:

<https://www.dreamspark.com/Product/Product.aspx?productid=1>

2. Visual Studio 2008 Service Pack 1

<http://www.microsoft.com/en-us/download/details.aspx?id=10986>

3. Visual Studio 2008 update for Windows Embedded Compact 7

<http://www.microsoft.com/en-us/download/confirmation.aspx?id=11935>

4. Windows Embedded Compact 7 ATL Update for Visual Studio 2008 SP1

<http://support.microsoft.com/kb/2468183/en-us>

4.2. Installing WP-5231 SDK

The WinPAC SDK is a Software Development Kit (SDK) that contains C header files, C libraries and documents.

Step 1: Insert the CD into your CD-ROM drive

Step 2: Execute the “AM335x_WINCE7_SDK_YYYYMMDD.msi”

The AM335x_WinCE7_SDK_YYMMDD.msi can be obtained from:
CD:\wp-5231\SDK\PlatformSDK\

The installation program for the latest version of the WinPAC Platform SDKs can be obtained from:

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/platformsdk/


File name: am335x_wince7_sdk_yyyymmdd.msi
yyymmdd: platform sdk released date

Step 3: Follow the prompts until the installation is complete


Step 4: Execute the “VisualStudioDeviceWindowsEmbeddedCompact7.msi”

The VisualStudioDeviceWindowsEmbeddedCompact7.msi can be obtained from:
CD:\wp-5231\SDK\PlatformSDK\
http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/platformsdk/


Step 5: Execute any VS2008 C++ project include the AM335x_WINCE7_SDK(ARMv4I) platform and the click the “Tools”->”Options...”

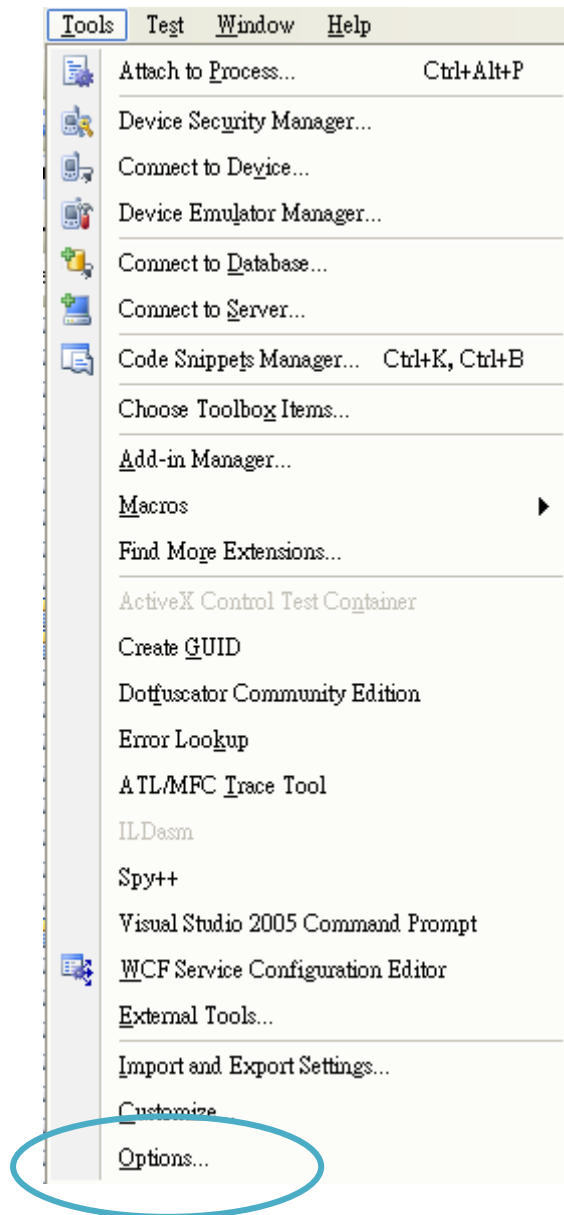

Step 6: Click the “Projects and Solutions”->”VC++ Directories” and then select the “AM335x_WINCE7_SDK (ARMv4I)” 、 “Include files” at “Platform:” and “Show directories for:” item

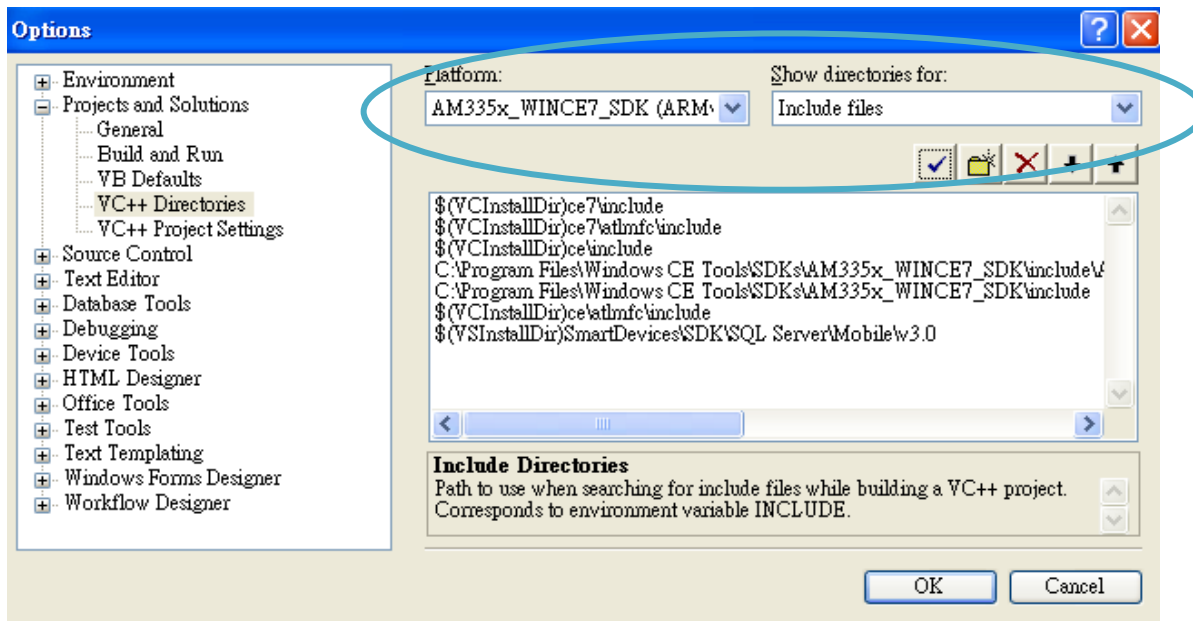

Step 7: Add the path “\$(VCInstallDir)ce7\include” and “\$(VCInstallDir)ce7\atlmfc\include” and then click the OK button.

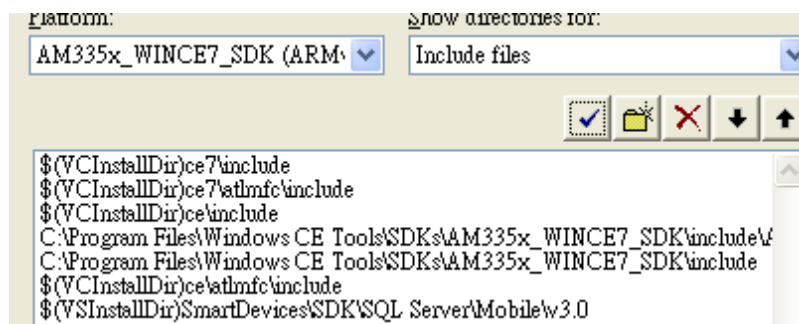

Tips & Warnings



The path “\$(VCInstallDir)ce7\include” and “\$(VCInstallDir)ce7\atlmfc\include” must be on the top of box.

4.3. First WinPAC Program in VB.NET

The best way to learn programming with WinPAC is to actually create a WinPAC program.

The example below demonstrates how to create a demo program running on WinPAC with VB.NET.

To create a demo program with VB.NET that includes the following main steps:

1. Create a new project
2. Specify the path of the PAC reference
3. Add the control to the form
4. Add the event handling for the control
5. Upload the application to WP-5231
6. Execute the application on WP-5231

All main steps will be described in the following subsection.

In this tutorial, we will assume that you have installed WP-5231 SDK on PC and used the Visual Studio 2008 for application development.

4.3.1. Create a New Project


The Visual VB.net project template is a composite control that you use in this example creates a new project with this user control.

Step 1: Run the Visual Studio 2008

Visual Studio 2008



Step 2: On the File menu, point to New, and then click Project

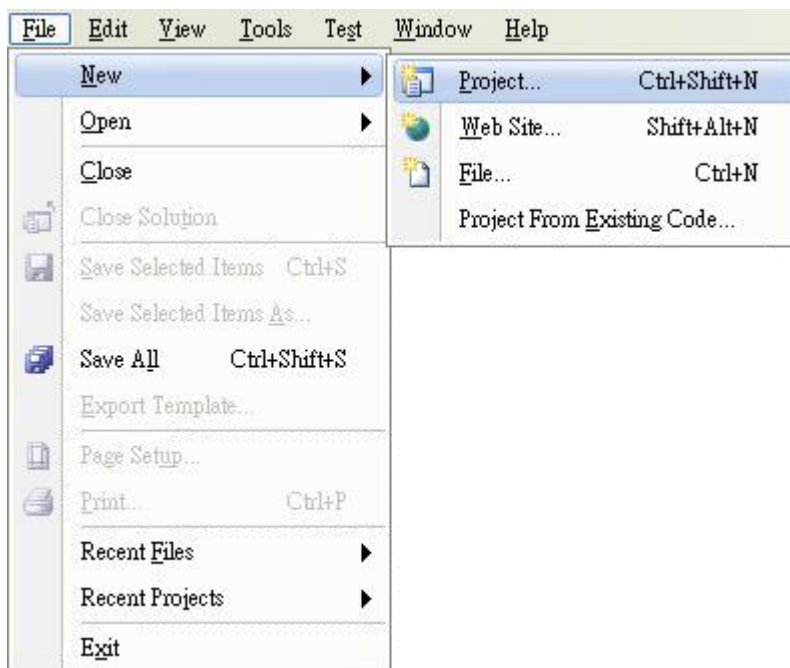


Step 3: In the Project types pane, expand Visual Basic, and then click Smart Device

Step 4: In the Templates pane, click Smart Device

Step 5: Type a name in the Name field, and then click OK

Here we will enter the name “SDKInformation” and a different location for the project if you wish

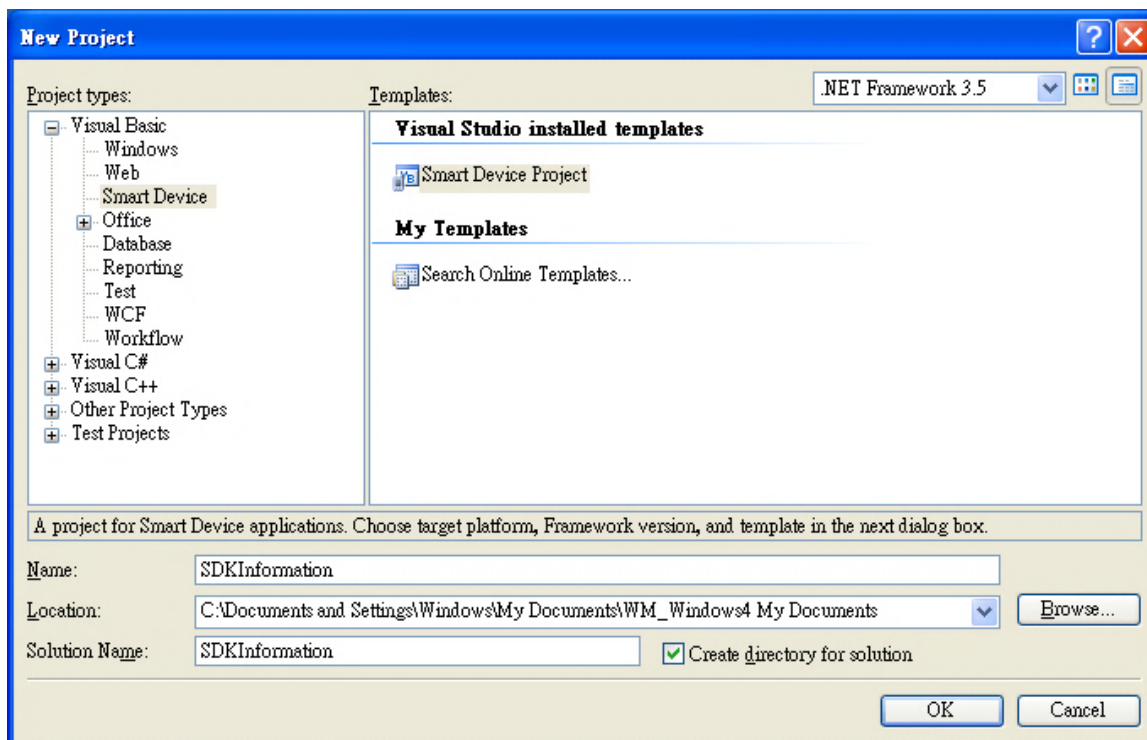

Tips & Warnings




The WCE7 only support .NET Compact Framework Version 3.5, if your application uses .NET Compact Framework Version 2.0 there is no guarantee that the program will function correctly.

Step 6: In the Target platform item, choose Windows CE

Step 7: in the .NET Compact Formwork version item, choose .NET Compact Framework Version 3.5

Step 8: in the Templates pane, choose Device Application, and then click Next

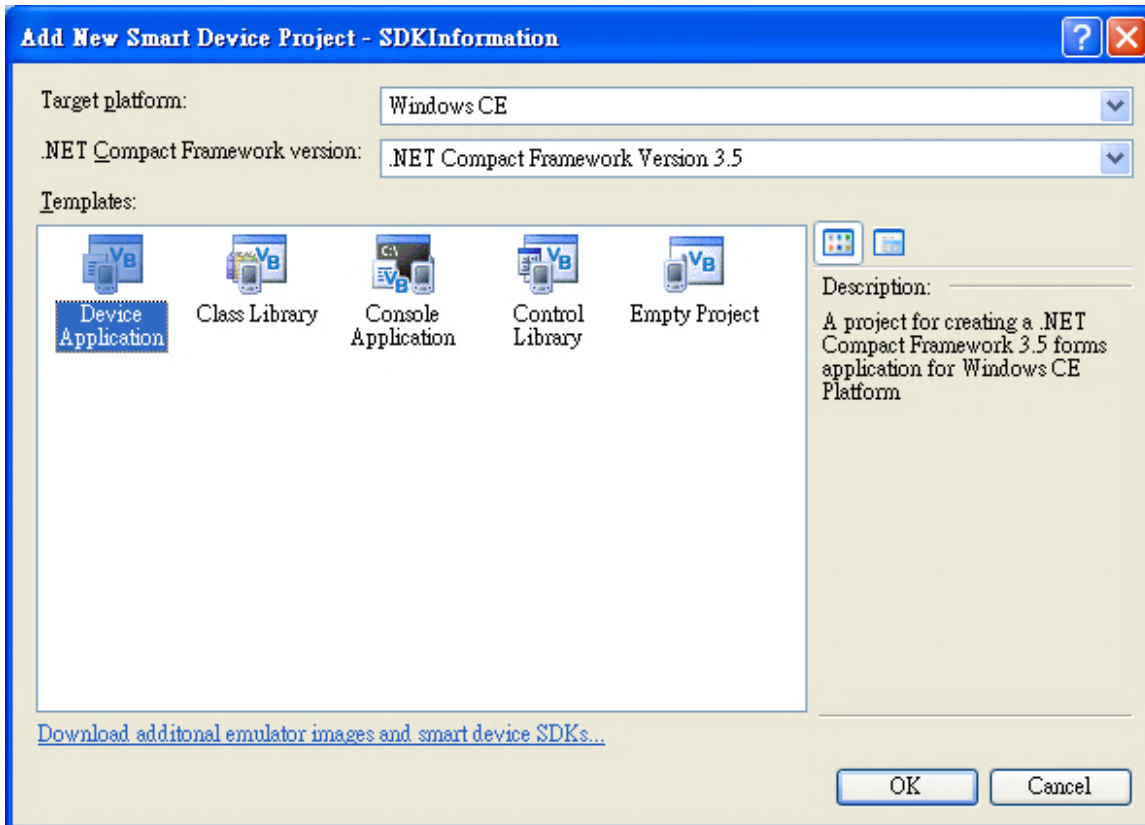

4.3.2. Specify the Path of PAC Reference

The PAC SDK provides a complete solution to integrate with WP-5231 and it's compatible with Visual C#, Visual Basic .net and C++. In order to use a component in your application, you must first add a reference to it.

Step1: Get the PACNET.dll and copy it to the project folder


The PACNET.dll can be obtained from the link below that has been provided on the CD or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\SDK\PACNET\


http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/pacnet/



Step 2: In Solution Explorer, right-click the References node, and then click Add Reference...

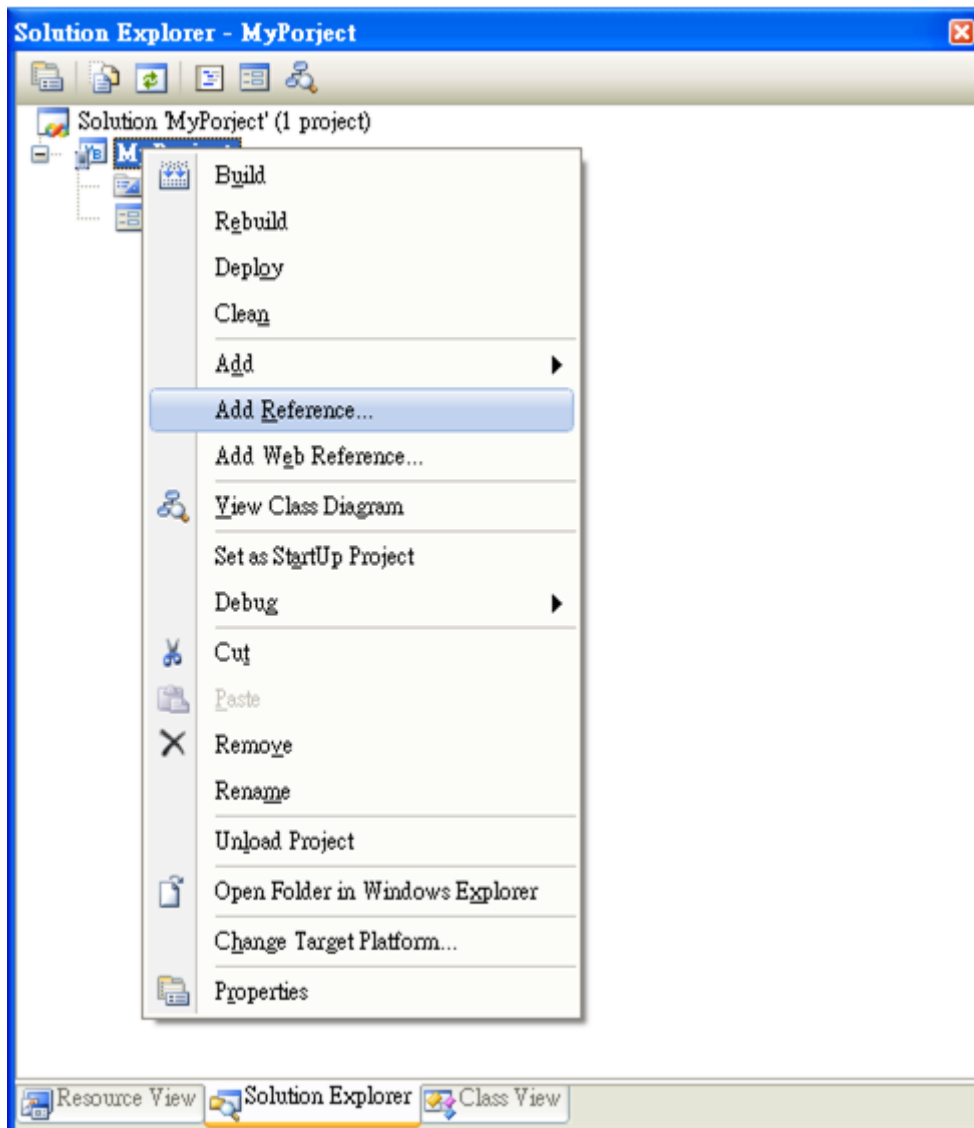

Step 3: Select Browse tab and add the PACNET.dll

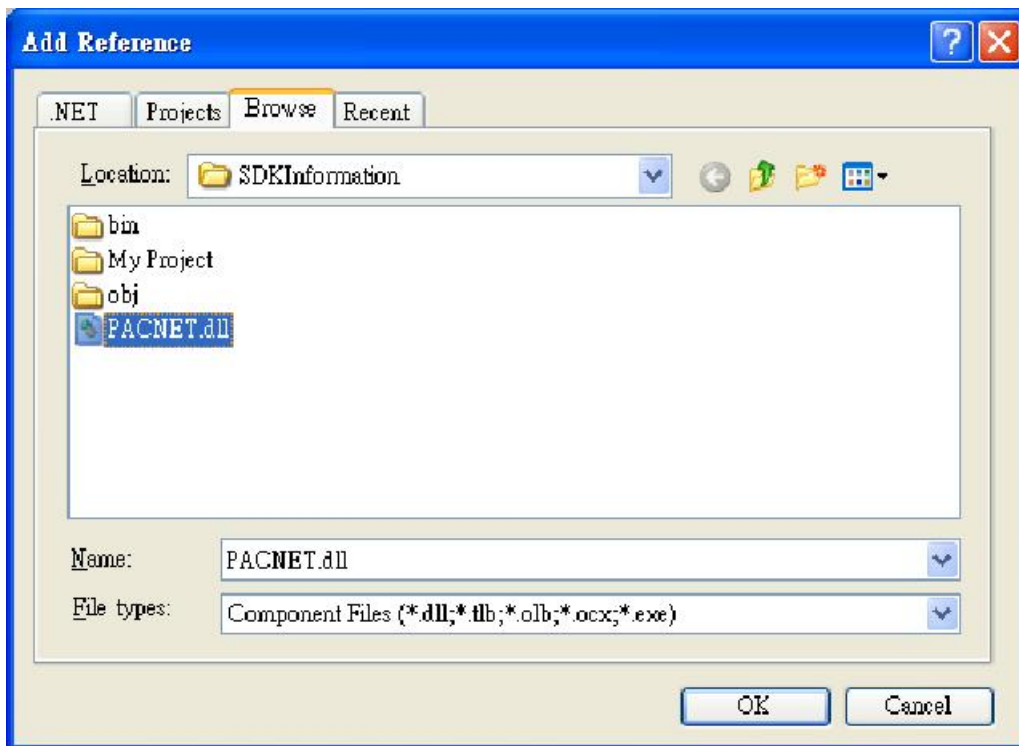


4.3.3. Add the Control to the Form


You can drag various controls from the Toolbox onto the form. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.

After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.


Step 1: From the Toolbox, drag a Button control onto the form

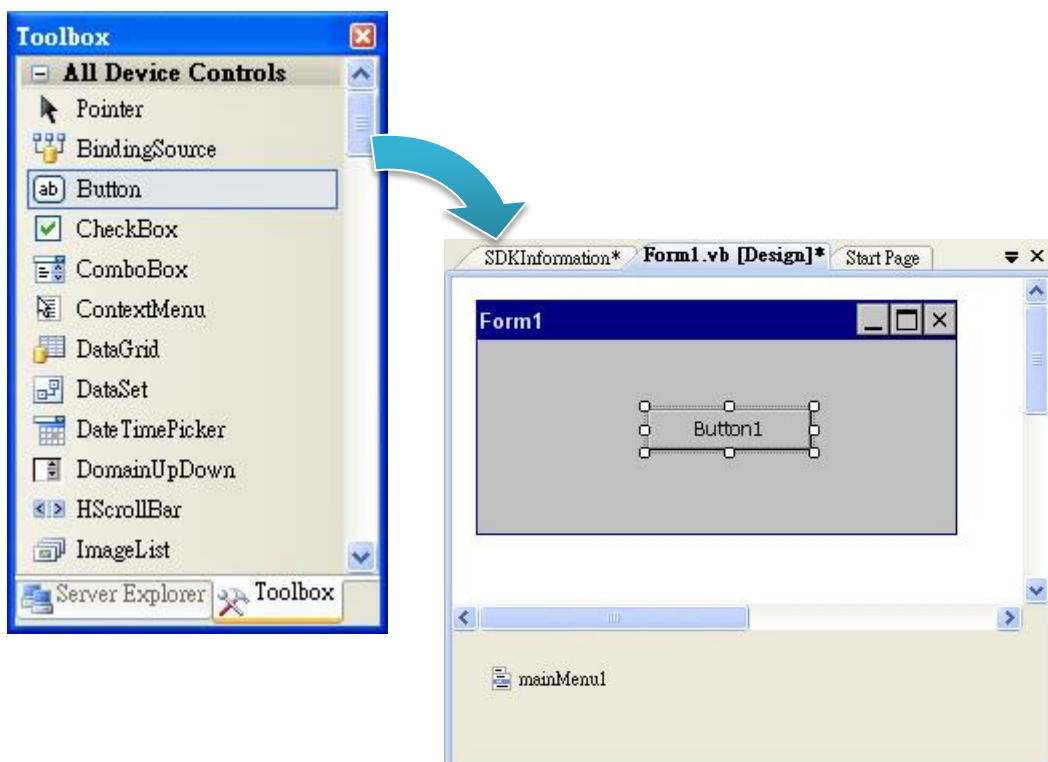

Step 2: Right-click the Button control, and then click Properties

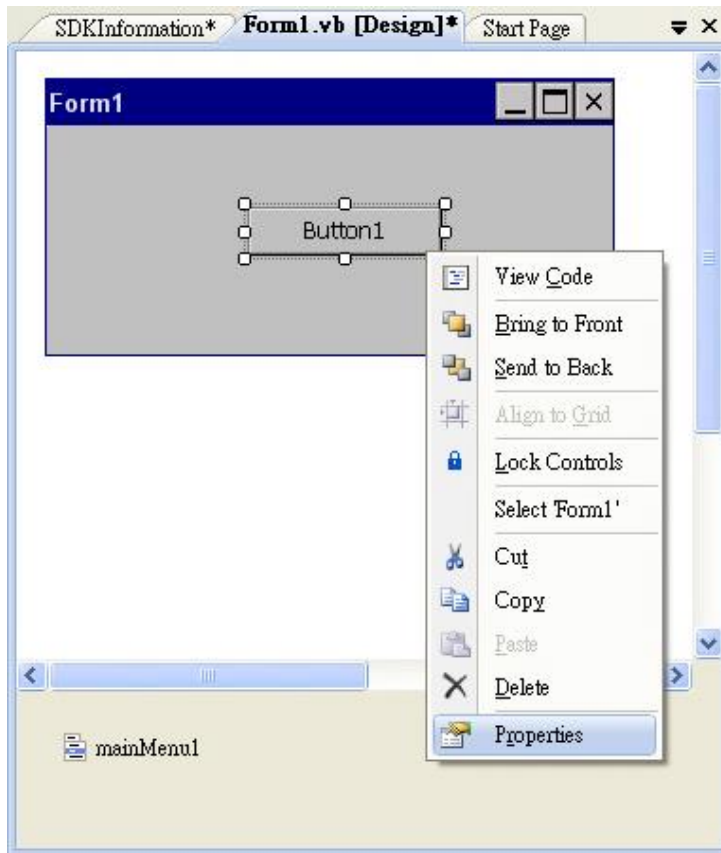


Step 3: In the Properties window, type Check the SDK version, and press ENTER to set the Text property

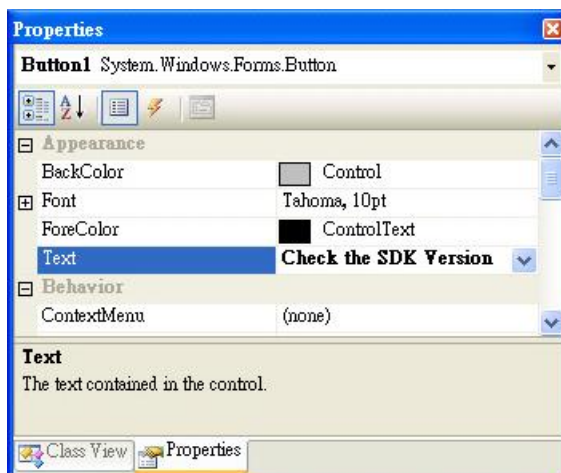

4.3.4. Add the Event Handling for the Control

You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 1: Double-click the button on the form

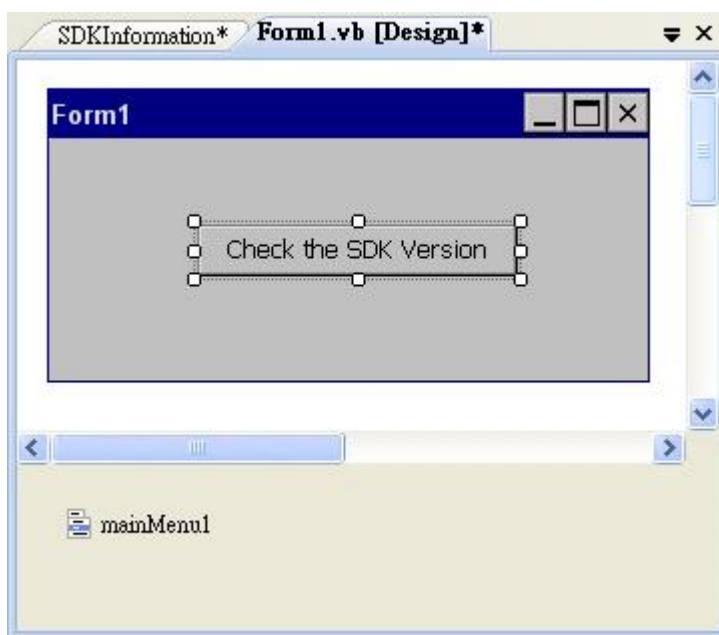

Step 2: Inserting the following code

```
Dim data(30) As Byte
PACNET.Sys.GetSDKVersion(data)
MessageBox.Show(PACNET.MISC.WideString(data))
```

```
Public Class Form1
    Private Sub Button1_Click(ByVal sender As System.Object, ByVal e As System.EventArgs) Handles Button1.Click
        Dim data(30) As Byte
        PACNET.System.GetSDKVersion(data)
        MessageBox.Show(PACNET.MISC.WideString(data))
    End Sub
End Class
```


Tips & Warnings




The “PACNET” of “using PACNET” is case- sensitive.

4.3.5. Upload the Application to WinPAC

WinPAC supports FTP server service. You can upload files to WinPAC or download files from a public FTP server.

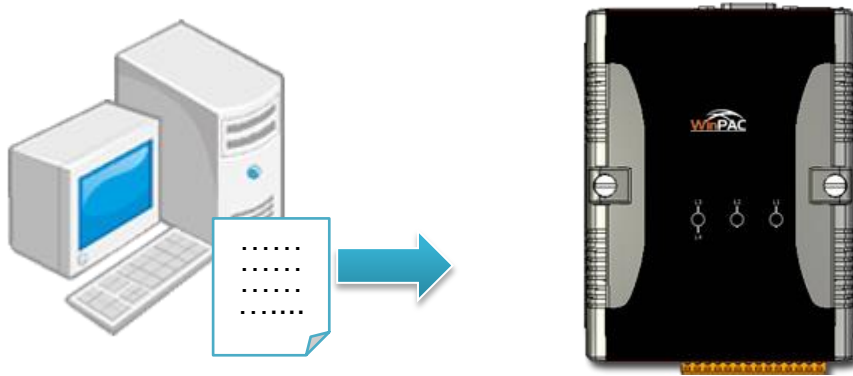

Step 1: On the Build menu, click Build SDKInformation

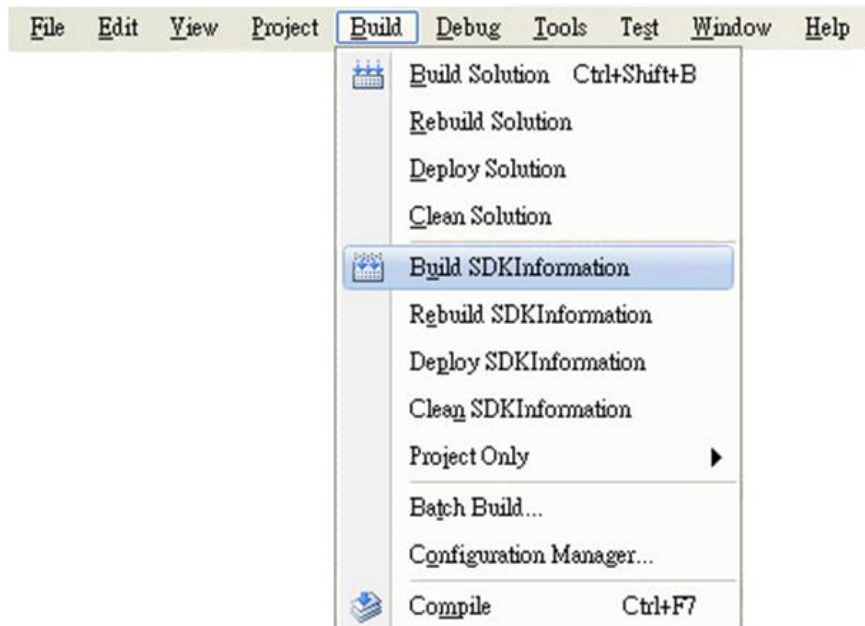


Step 2: Open the browser and type the IP address of WinPAC

Step 3: Upload the SDKInformation.exe application and the corresponding PACSDK.dll and PACNET.dll files to WinPAC

Tips & Warnings



For applications programming in C# and VB.net with .net compact framework, when executing these application on WinPAC, the corresponding PACSDK.dll and PACNET.dll must be in the same directory as the .exe file.

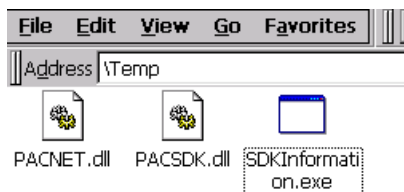

4.3.6. Execute the Application on WinPAC

After uploading the application to WinPAC, you can just double-click it on WinPAC to execute it.



4.4. First WinPAC Program in Visual C#

The best way to learn programming with WinPAC is to actually create a WinPAC program.

The example below demonstrates how to create a demo program running on WinPAC with C#.

To create a demo program with C# that includes the following main steps:

1. Create a new project
2. Specify the path of the PAC reference
3. Add the control to the form
4. Add the event handling for the control
5. Upload the application to WinPAC
6. Execute the application on WinPAC

All main steps will be described in the following subsection.

4.4.1. Create a New Project


The C# project template is a composite control that you use in this example creates a new project with this user control.

Step 1: Run the Visual Studio 2008

Visual Studio 2008



Step 2: On the File menu, point to New, and then click Project

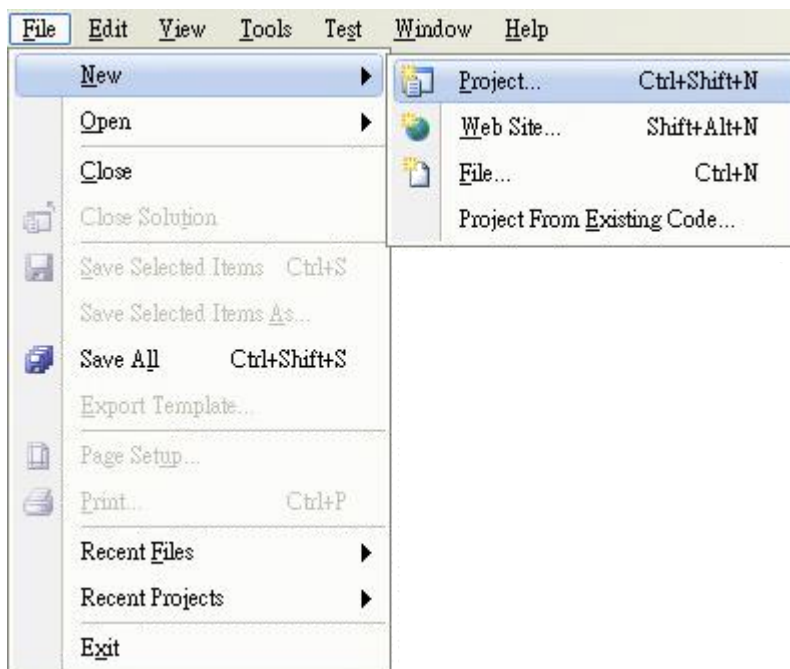


Step 3: In the Project types pane, expand Visual C#, and then click Smart Device

Step 4: In the Templates pane, click Smart Device

Step 5: Type a name in the Name field, and then click OK


Here we will enter the name “SDKInformation” and a different location for the project if you wish.

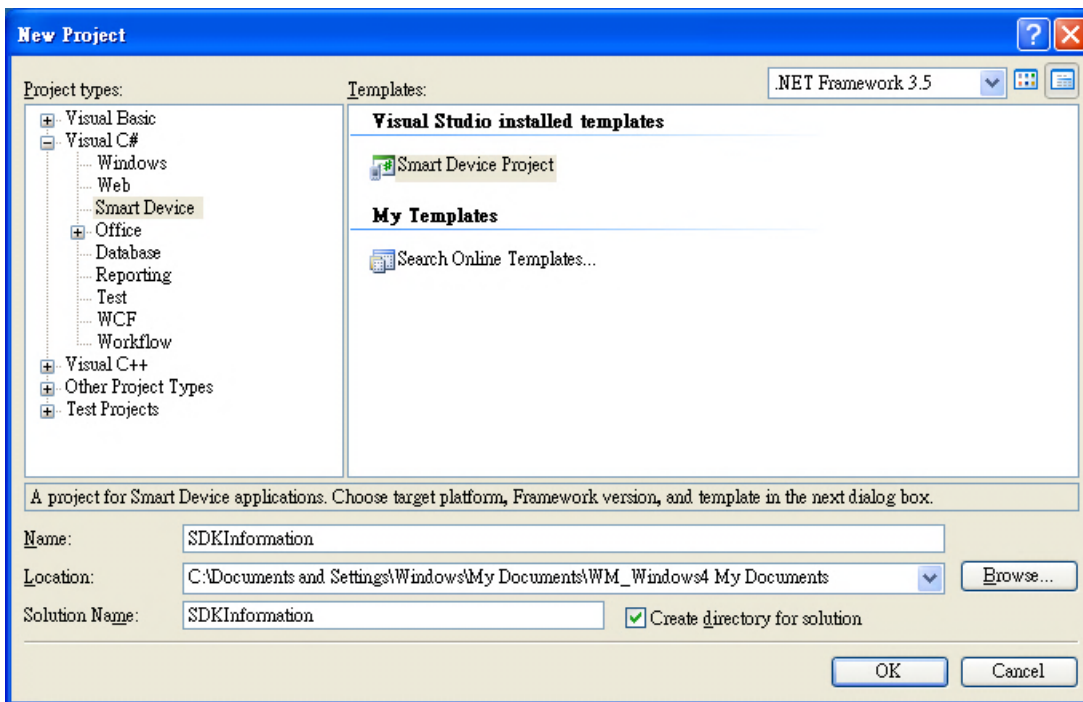

Step 6: In the Target platform item, choose Windows CE

Step 7: in the .NET Compact Framework version item, choose .NET Compact Framework Version 3.5

Step 8: in the Templates pane, choose Device Application, and then click Next

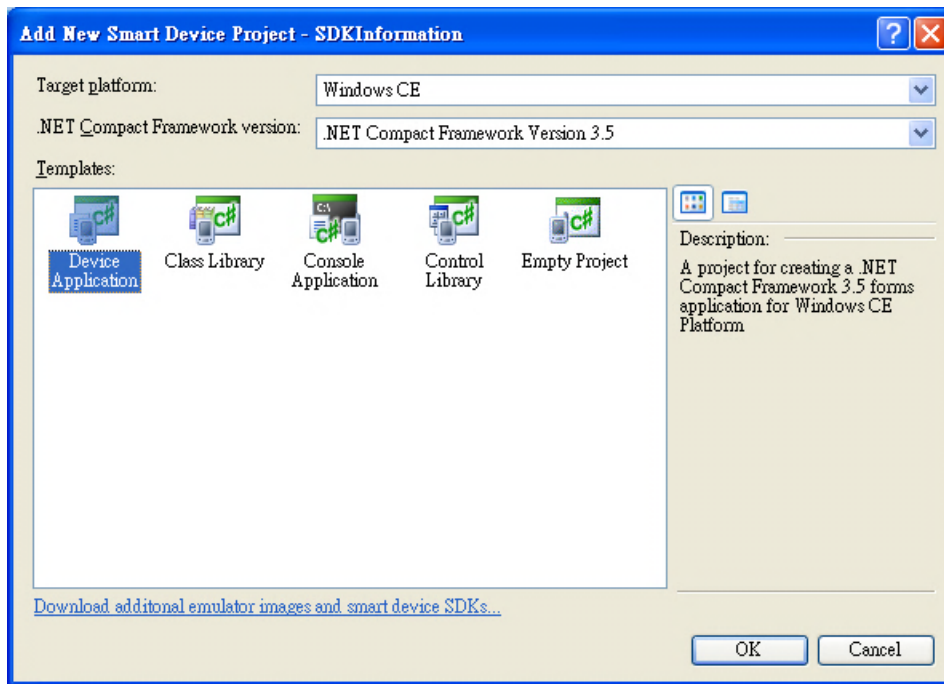

Tips & Warnings



The WCE7 only support .NET Compact Framework Version 3.5, if your application uses .NET Compact Framework Version 2.0 there is no guarantee that the program will function correctly.

4.4.2. Specify the Path of PAC Reference

The PAC SDK provides a complete solution to integrate with WP-5231 and it's compatible with Visual C#, Visual Basic .net and C++. In order to use a component in your application, you must first add a reference to it.

Step1: Get the PACNET.dll and copy it to the project folder


The PACNET.dll can be obtained from the link below that has been provided on the CD or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\SDK\PACNET\


http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/pacnet/



Step 2: In Solution Explorer, right-click the References node, and then click Add Reference...

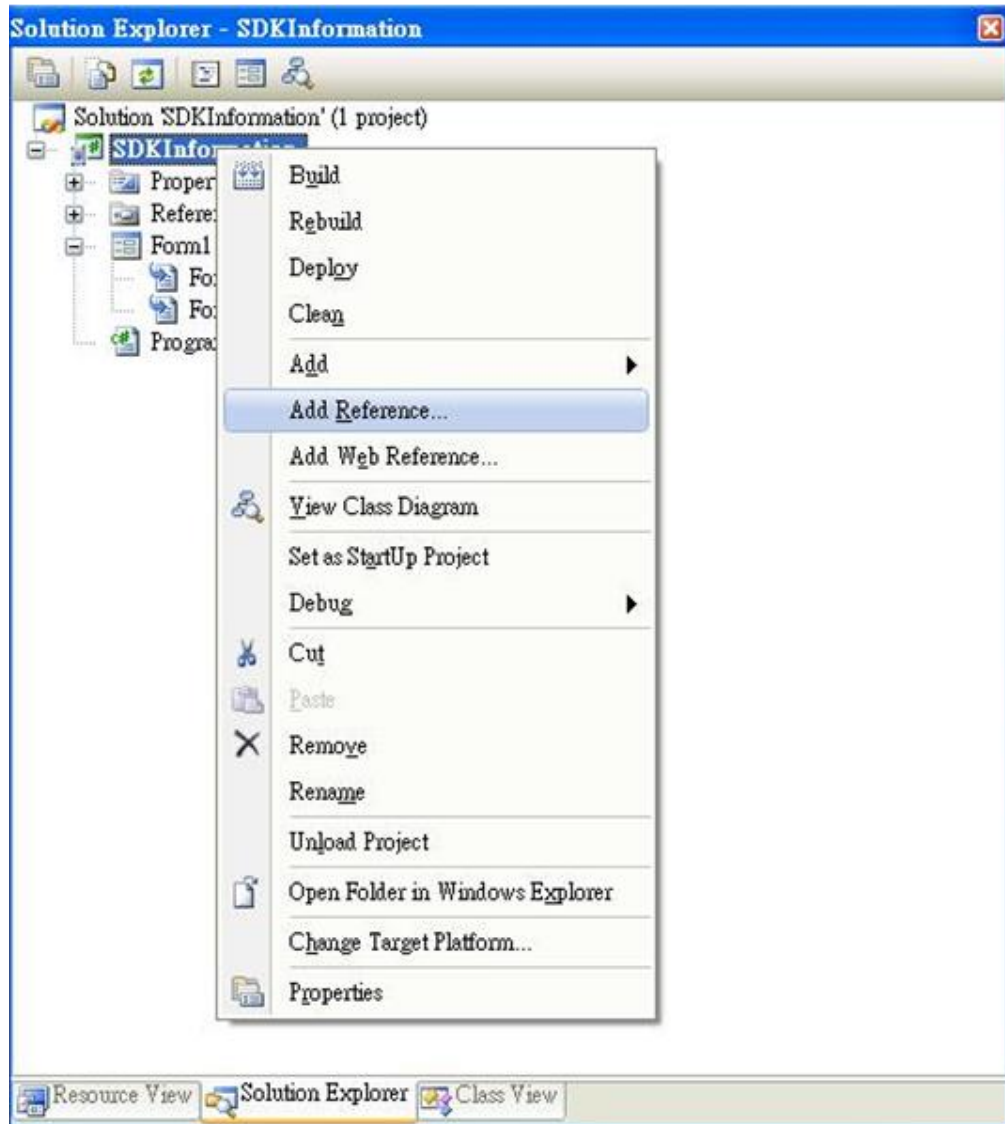

Step 3: Select Browse tab and add the PACNET.dll

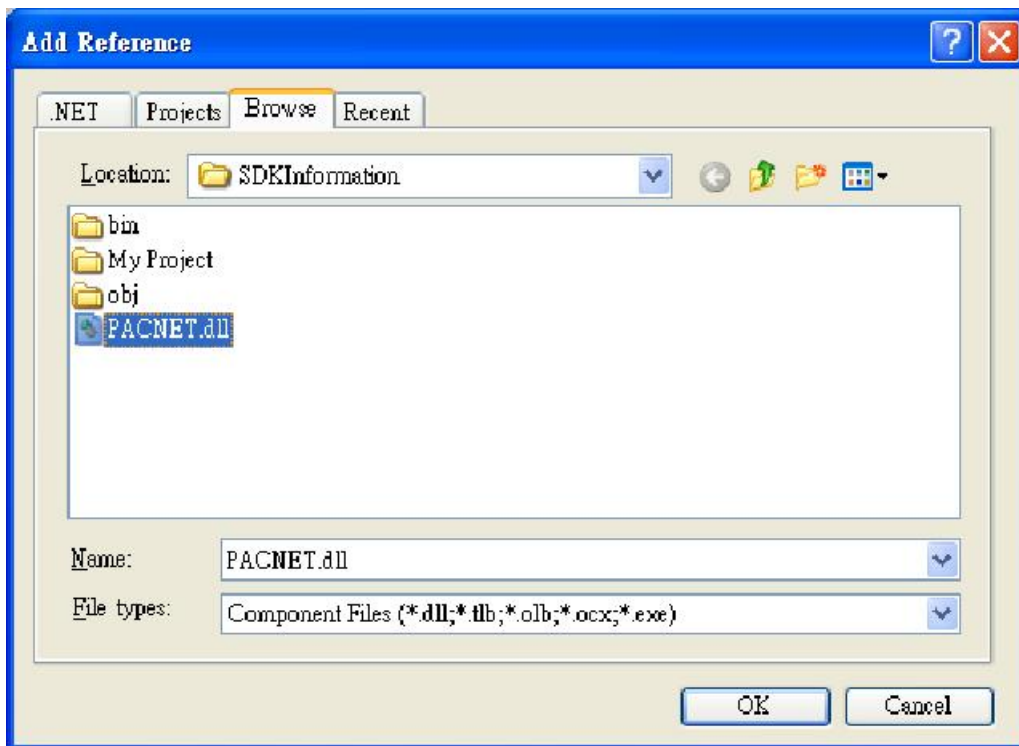


4.4.3. Add the Control to the Form


You can drag various controls from the Toolbox onto the form. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.

After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.


Step 1: From the Toolbox, drag a Button control onto the form

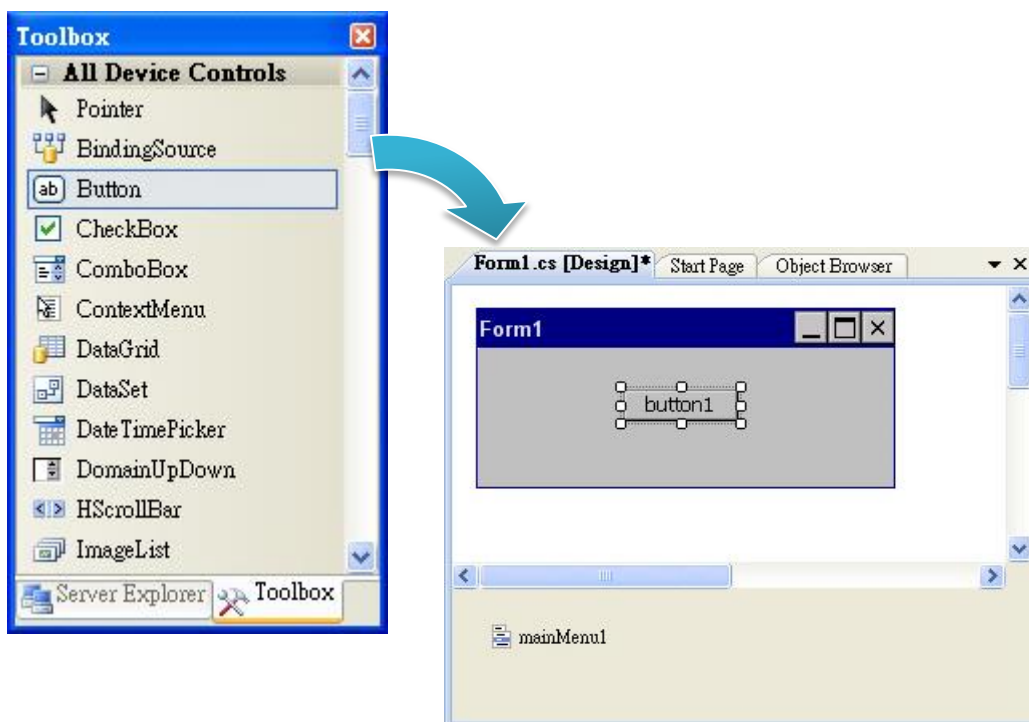

Step 2: Right-click the Button control, and then click Properties

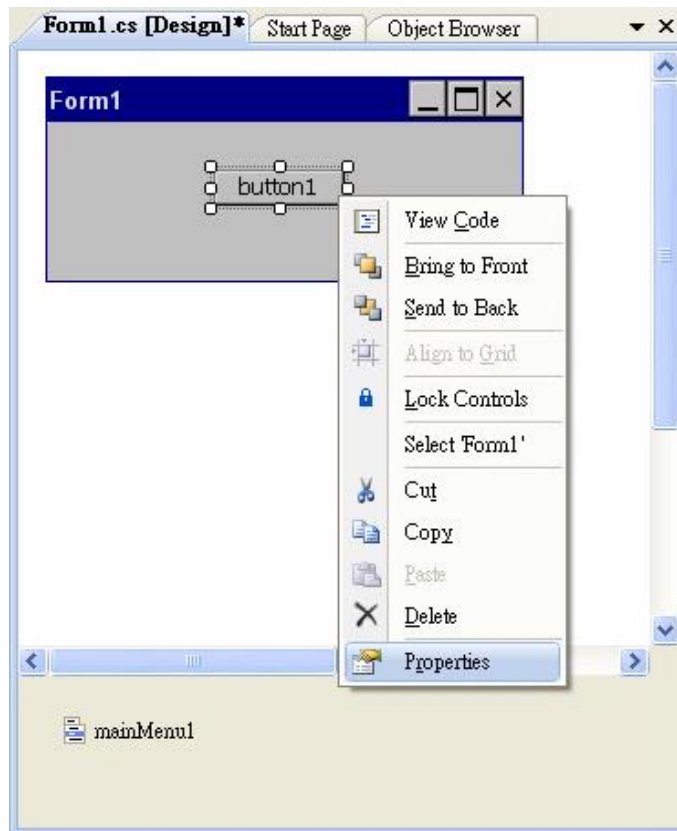


Step 3: In the Properties window, type Check the SDK version, and press ENTER to set the Text property

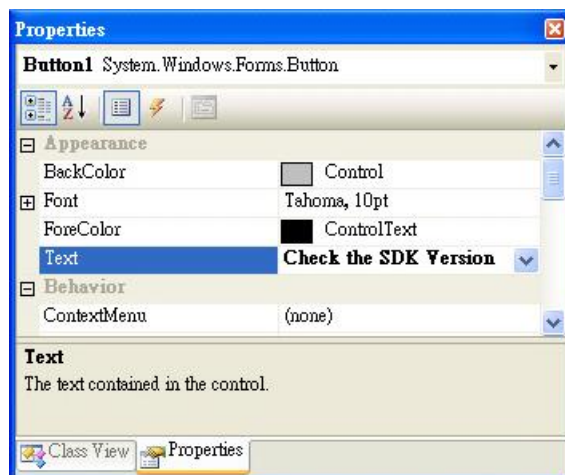

4.4.4. Add the Event Handling for the Control


You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 1: Double-click the button on the form

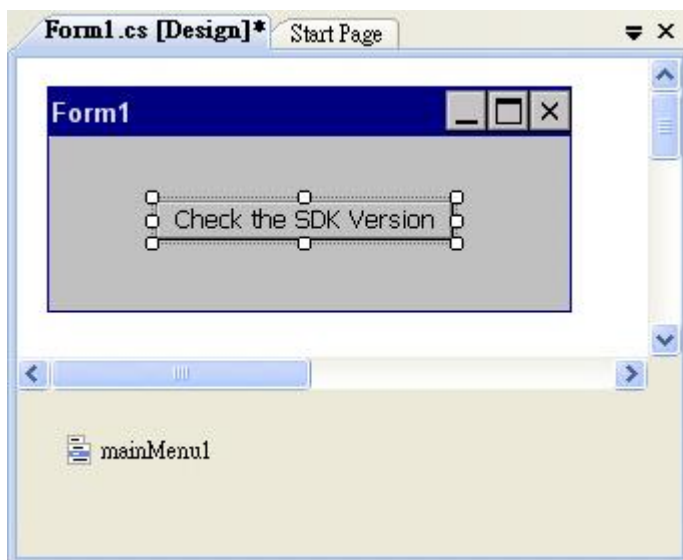

Step 2: Inserting the following code


```
byte []data = new byte[30];  
PACNET.Sys.GetSDKVersion(data);  
MessageBox.Show(PACNET.MISC.WideString(data));
```

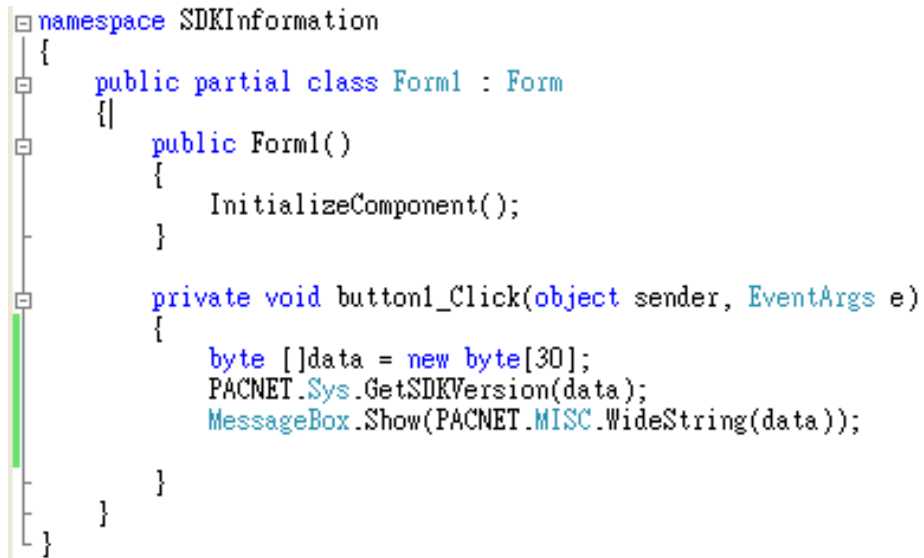A screenshot of a code editor with a file explorer on the left. The file explorer shows a tree structure with folders and files. The main editor area displays C# code. The code is as follows:


```
namespace SDKInformation  
{  
    public partial class Form1 : Form  
    {  
        public Form1()  
        {  
            InitializeComponent();  
        }  
  
        private void button1_Click(object sender, EventArgs e)  
        {  
            byte []data = new byte[30];  
            PACNET.Sys.GetSDKVersion(data);  
            MessageBox.Show(PACNET.MISC.WideString(data));  
        }  
    }  
}
```

4.4.5. Upload the Application to WinPAC

WinPAC supports FTP server service. You can upload files to WinPAC or download files from a public FTP server.

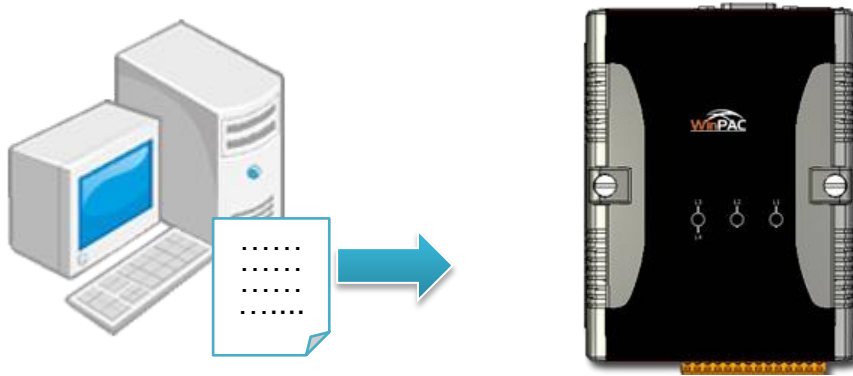

Step 1: On the Build menu, click Build SDKInformation

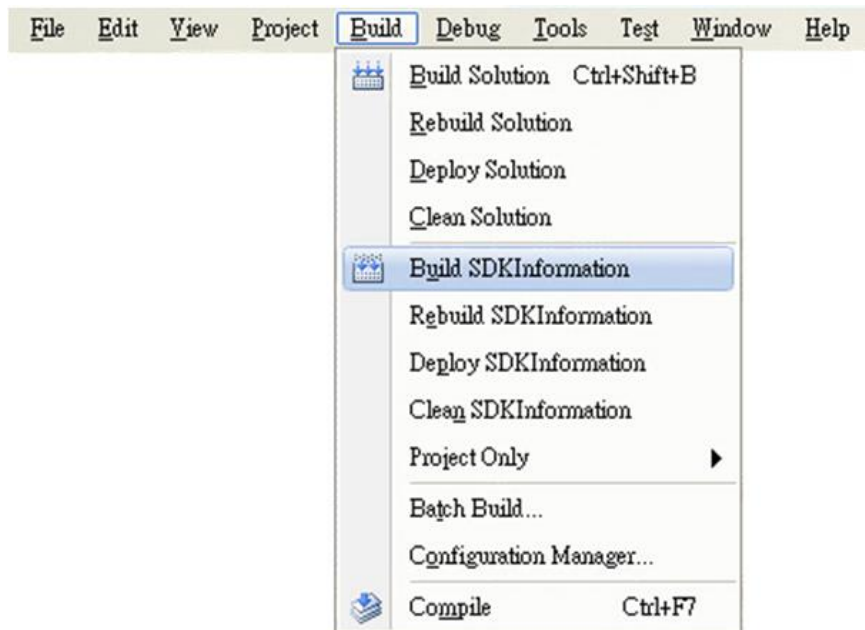


Step 2: Open the browser and type the IP address of WinPAC

Step 3: Upload the SDKInformation.exe application and the corresponding PACSDK.dll and PACNET.dll files to WinPAC

Tips & Warnings



For applications programming in C# and VB.net with .net compact framework, when executing these application on WinPAC, the corresponding PACSDK.dll and PACNET.dll must be in the same directory as the .exe file.

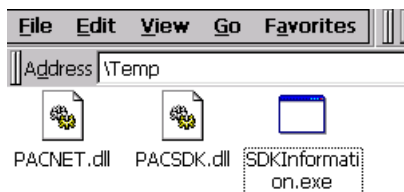

4.4.6. Execute the Application on WinPAC

After uploading the application to WinPAC, you can just double-click it on WinPAC to execute it.



4.5. First WinPAC Program in Visual C++

The best way to learn programming with WinPAC is to actually create a WinPAC program.

The example below demonstrates how to create a demo program running on WinPAC with Visual C++

To create a demo program with Visual C++ that includes the following main steps:

1. Create a new project
2. Configure the platform
3. Specify the path of the PAC reference
4. Add the control to the form
5. Add the event handling for the control
6. Upload the application to WinPAC
7. Execute the application on WinPAC

All main steps will be described in the following subsection.

Tips & Warnings



Before beginning a new project, the “Embedded Compact 7 ATL Update” must be installed. If this update is not installed, the error message “atlconv.h error C2039: IstrlenW” will be displayed after the program is compiled.

The update can be found on the CD that was provided with the package or by downloading the latest version from Microsoft.

CD:\wp-5231\SDK\VisualStudioDeviceWindowsEmbeddedCompact7.msi

<http://download.microsoft.com/download/9/D/D/9DDBD3EC-A43C-4BCE-A7A9-AEE9B1007BCE/VisualStudioDeviceWindowsEmbeddedCompact7.msi>

4.5.1. Create a New Project


The Visual C++ project template is a composite control that you use in this example creates a new project with this user control.

Step 1: Run the Visual Studio 2008

Visual Studio 2008



Step 2: On the File menu, point to New, and then click Project

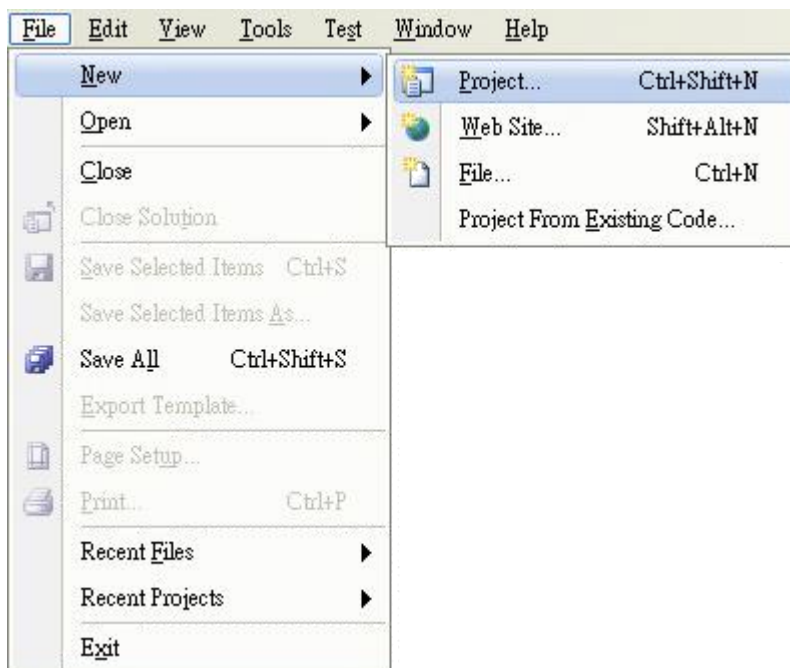


Step 3: In the Project types pane, expand Visual C++, and then click Smart Device


Step 4: In the Templates pane, click MFC Smart Device Application

Step 5: Type a name in the Name field, and then click OK


Here we will enter the name “SDKInformation” and a different location for the project if you wish

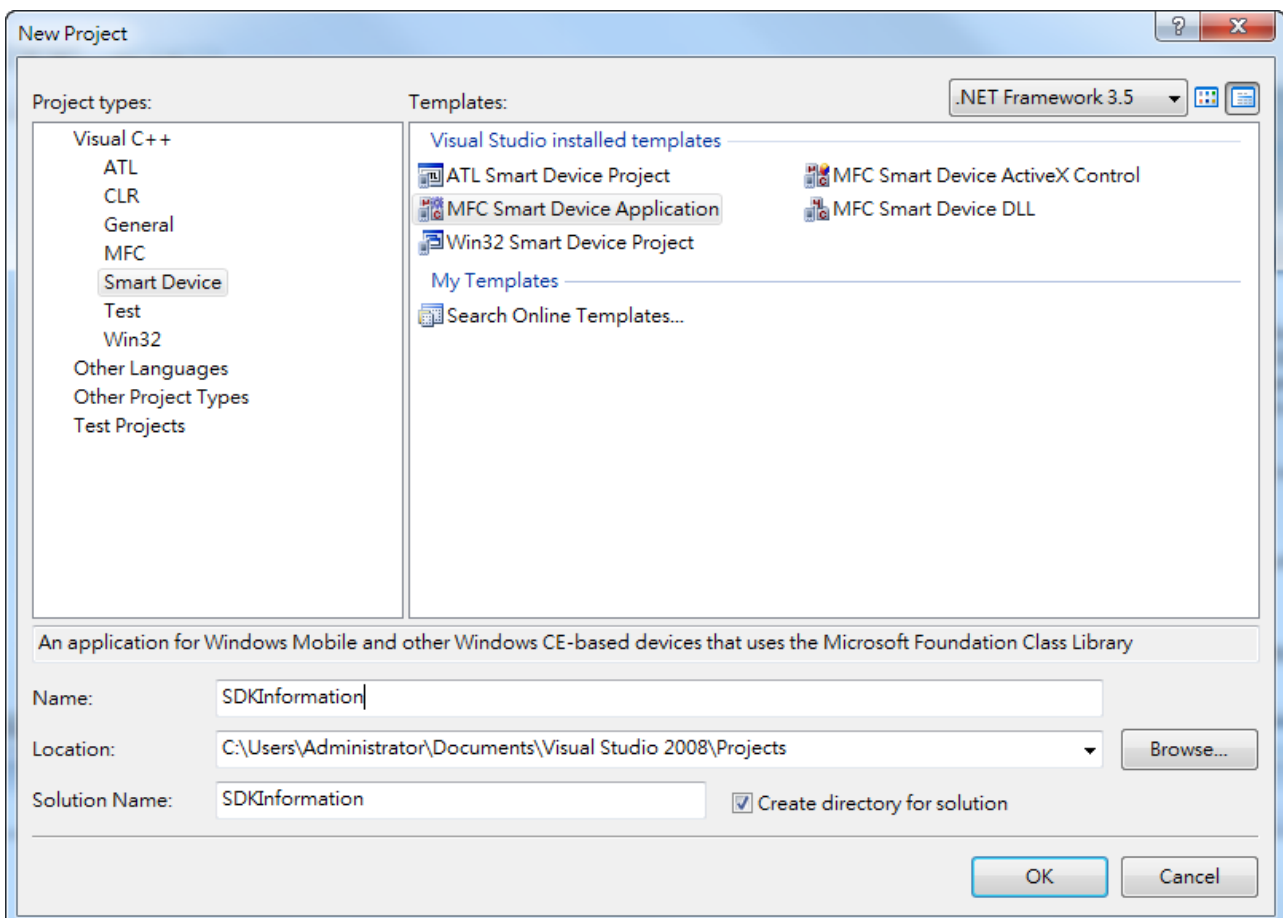


Step 6: On the first page of the wizard, click Next

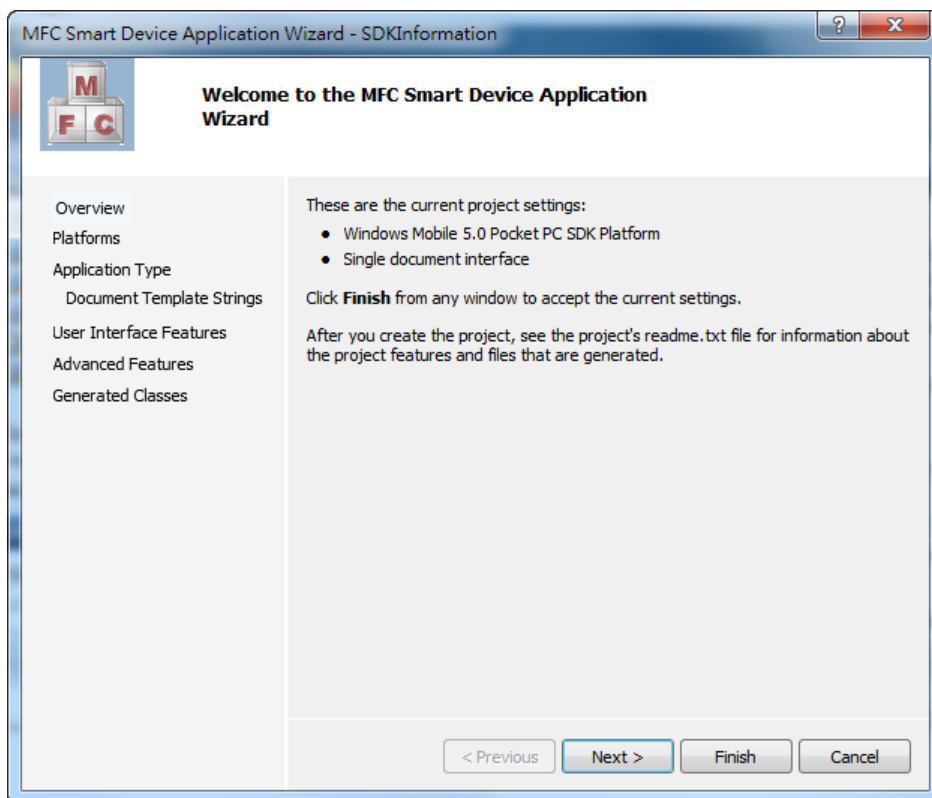


Step 7: On the next page of the wizard, select AM335x_WINCE7_SDK to be added to the project, and then click Next

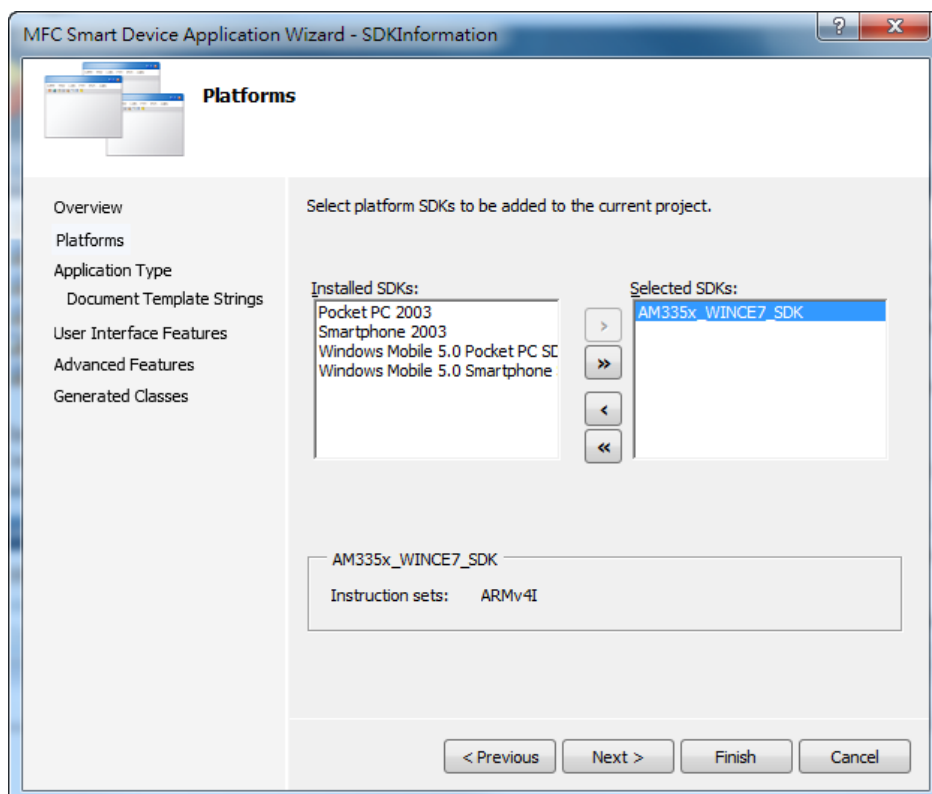


Step 8: On the next page of the wizard, select Dialog based, and then click next

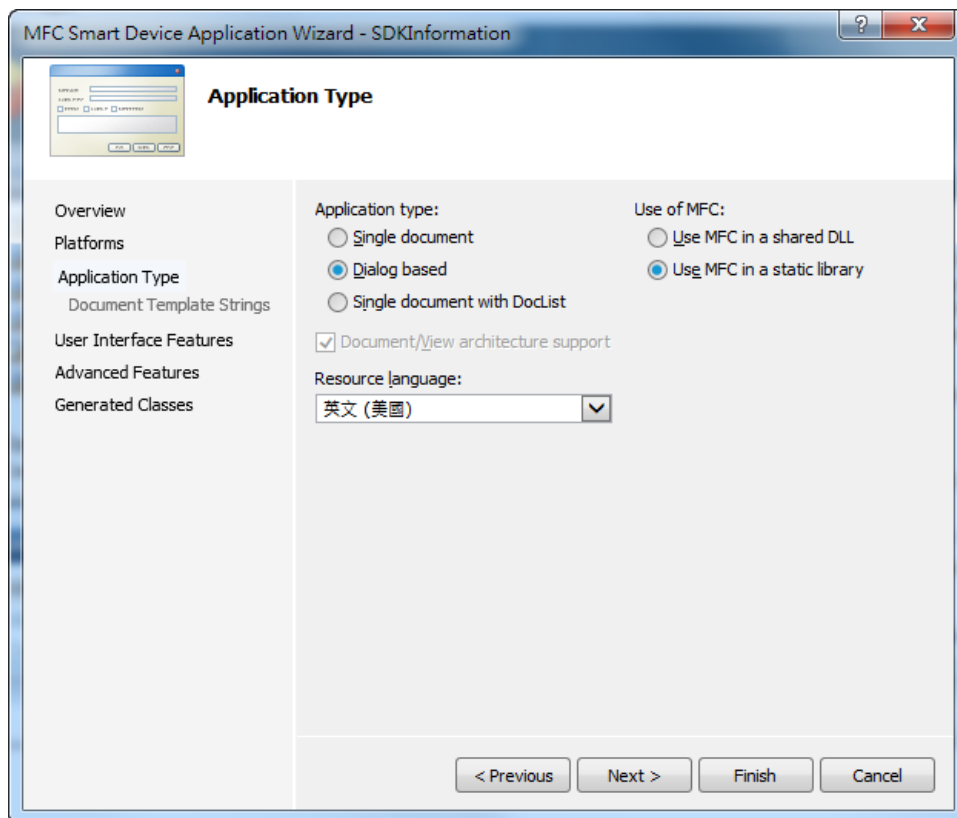


Step 9: On the next page of the wizard, click next

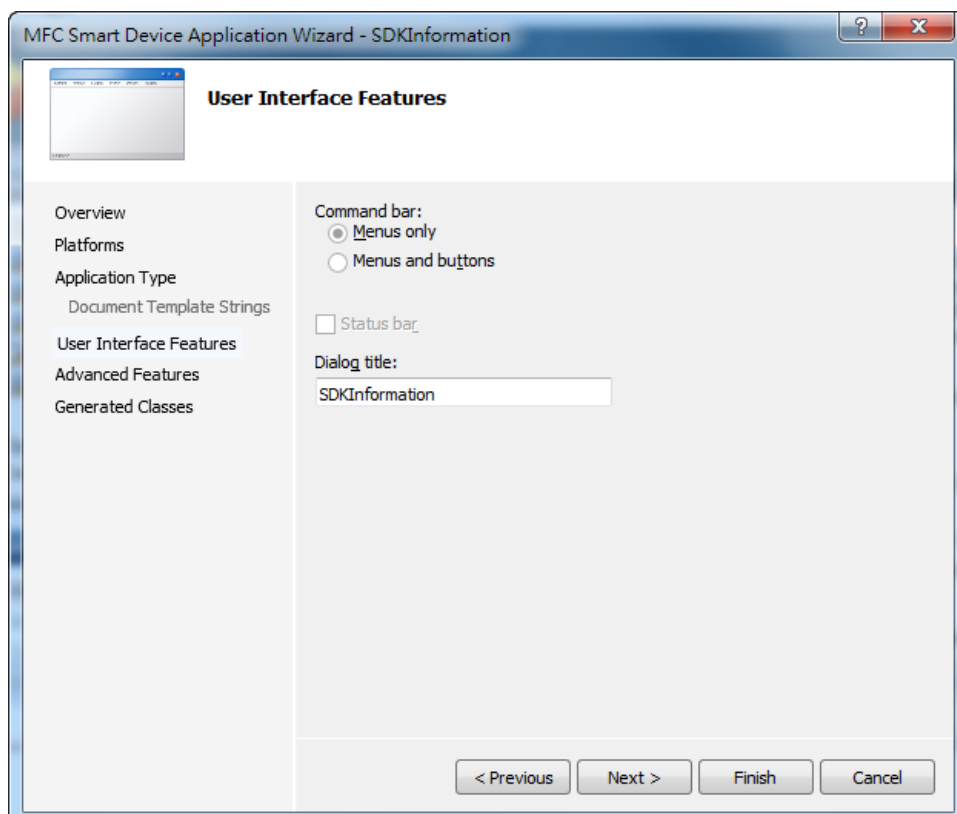

Step 10: On the next page of the wizard, click next

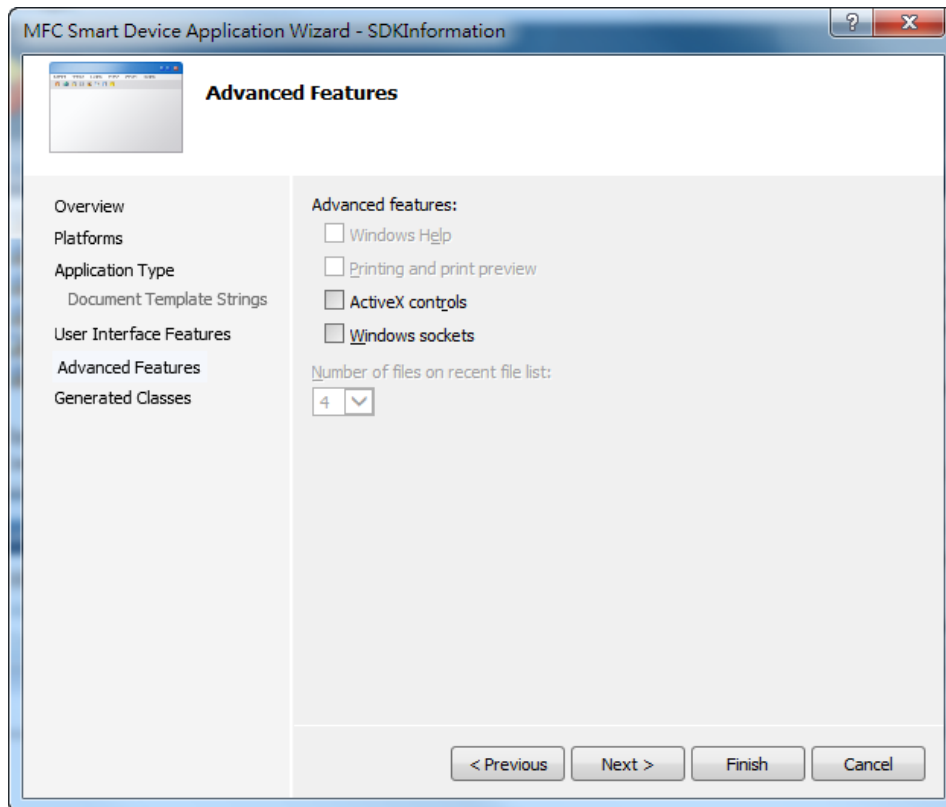


Step 11: On the next page of the wizard, click Finish

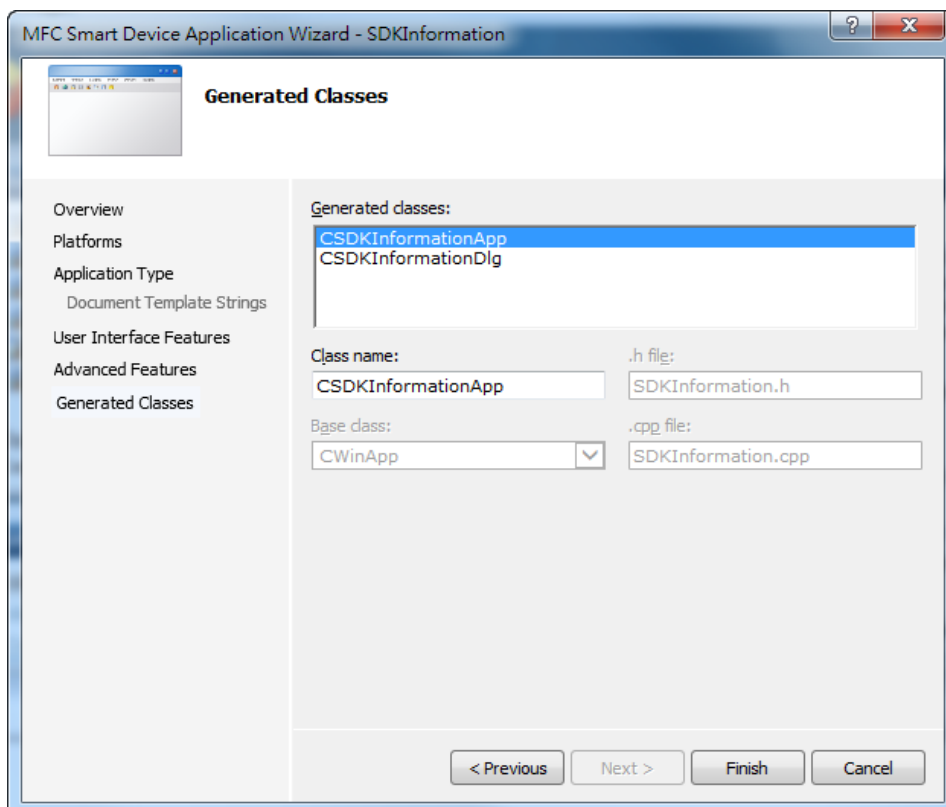

4.5.2. Configure the Platform

When developing applications by using Visual C++, you must configure the Platform to indicate what platform and device you intend to download the application to. Before you deploy your project, check the platform.

 
On the Debug configuration toolbar, select Release, and then on the AM335x_WINCE7_SDK (ARMV4) configuration toolbar, select AM335x_WINCE7_SDK (ARMV4), as shown in the following illustration.



4.5.3. Specify the Path of the PAC Reference


The PAC SDK provides a complete solution to integrate with WP-5231 and it's compatible with Visual C#, Visual Basic .net and C++. In order to use a component in your application, you must first add a reference to it.

Step 1: Right-click the project name, and then click Properties

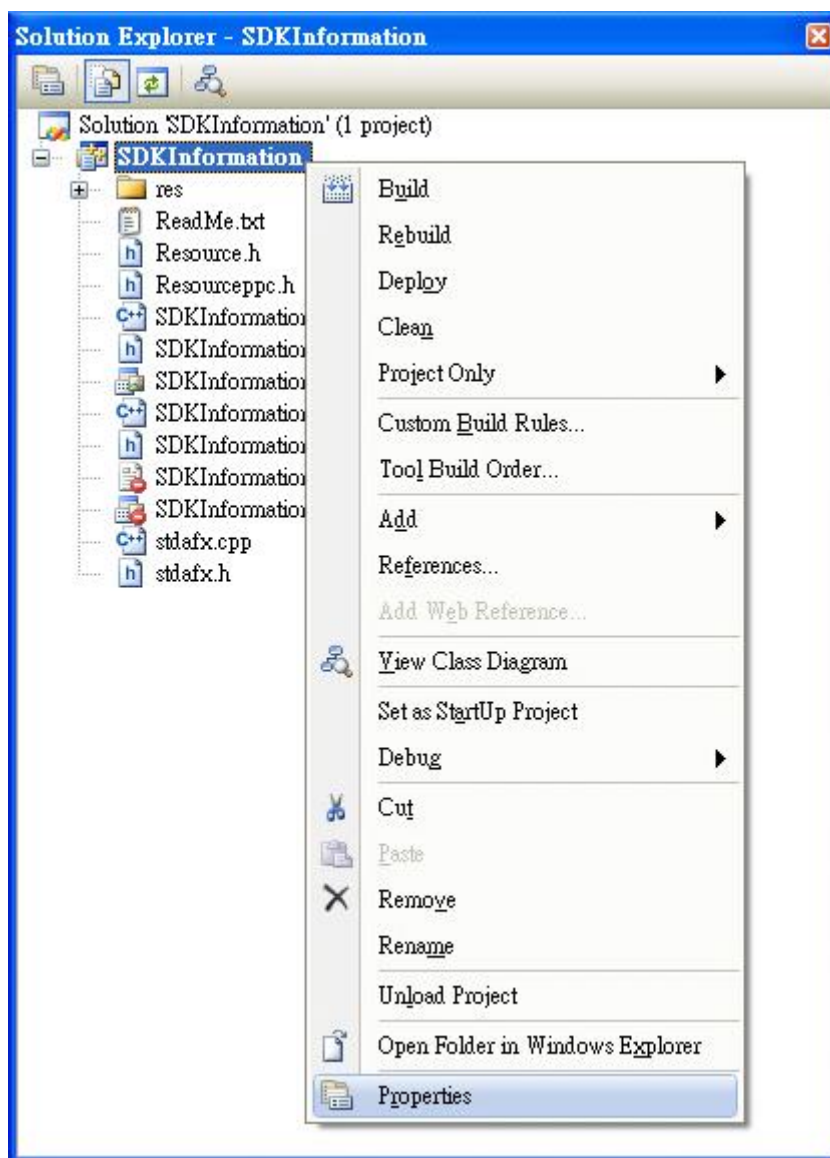

Step 2: In left pane, expand Configuration Properties, and then click Link

Step 3: In the right pane, choose the PACSDK_CE.lib in the Additional Dependencies item

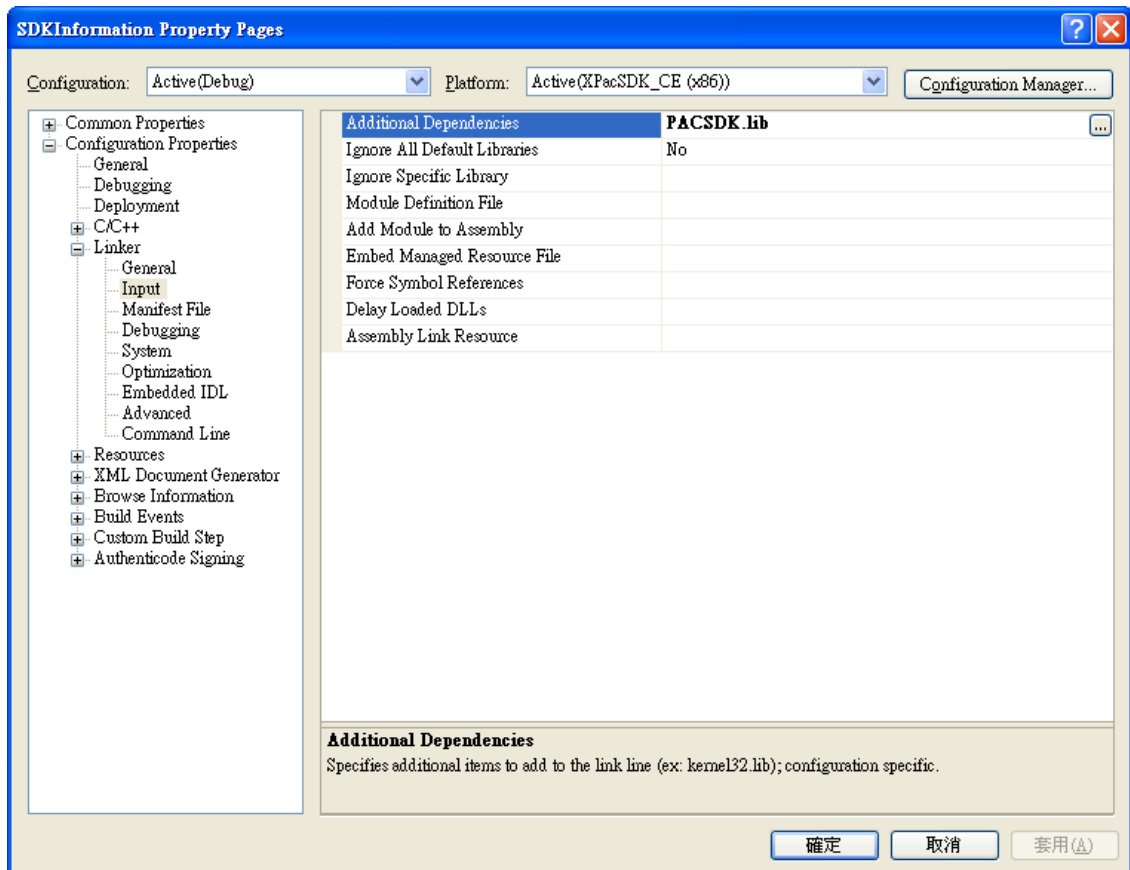


Step 4: In the right pane, choose the following path in the “Additional Include Directories” item

C:\Program Files\Windows CE

Tools\SDKs\AM335x_WINCE7_SDK\Include\Armv4i

C:\Program Files\Microsoft Visual Studio 9.0\VC\ce7\atlmfc\include

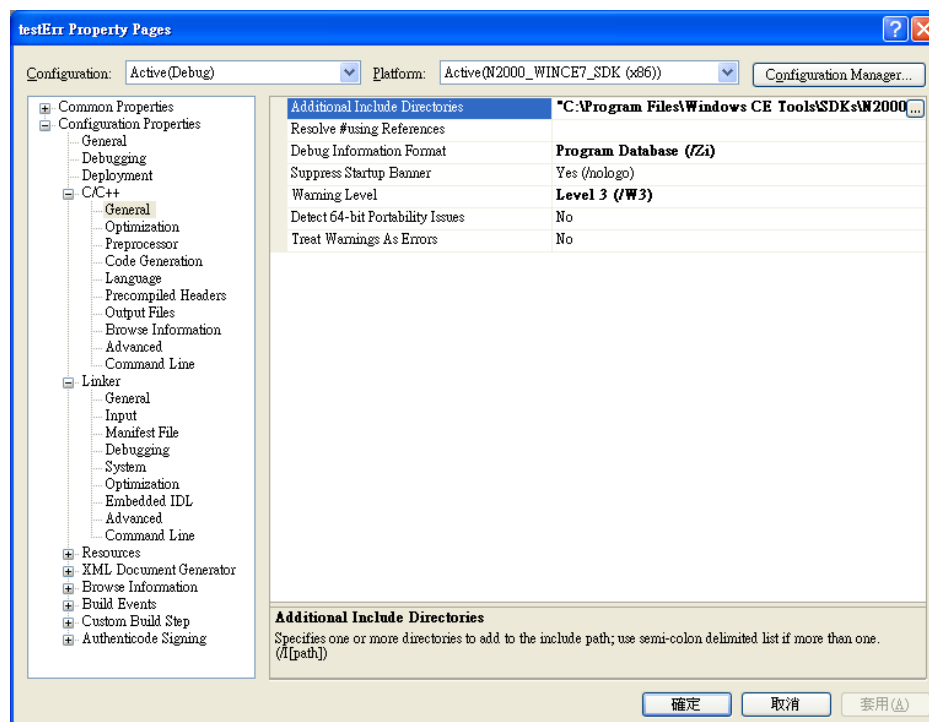


4.5.4. Add the Control to the Form

You can drag various controls from the Toolbox onto the form. These controls are not really "live"; they are just images that are convenient to move around on the form into a precise location.

After you add a control to your form, you can use the Properties window to set its properties, such as background color and default text. The values that you specify in the Properties window are the initial values that will be assigned to that property when the control is created at run time.


Step 1: In Resource View, expand the resources tree by opening the top level folder

**Step 2: Open the Dialog folder and then double-click the dialog resource name
IDD_SDKINFORMATION_DIALOG**

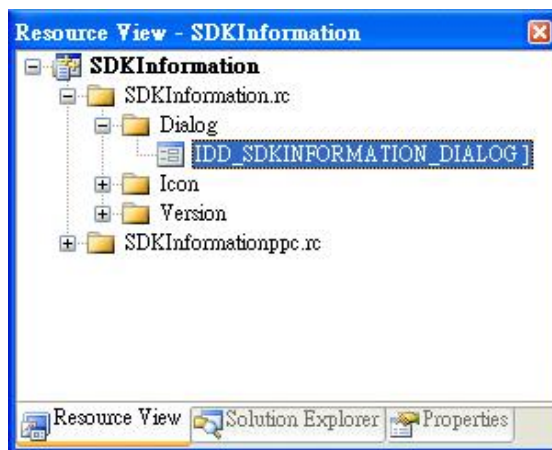


The resource editor appears in the right pane.


Step 3: From the Toolbox, drag a Button control onto the form

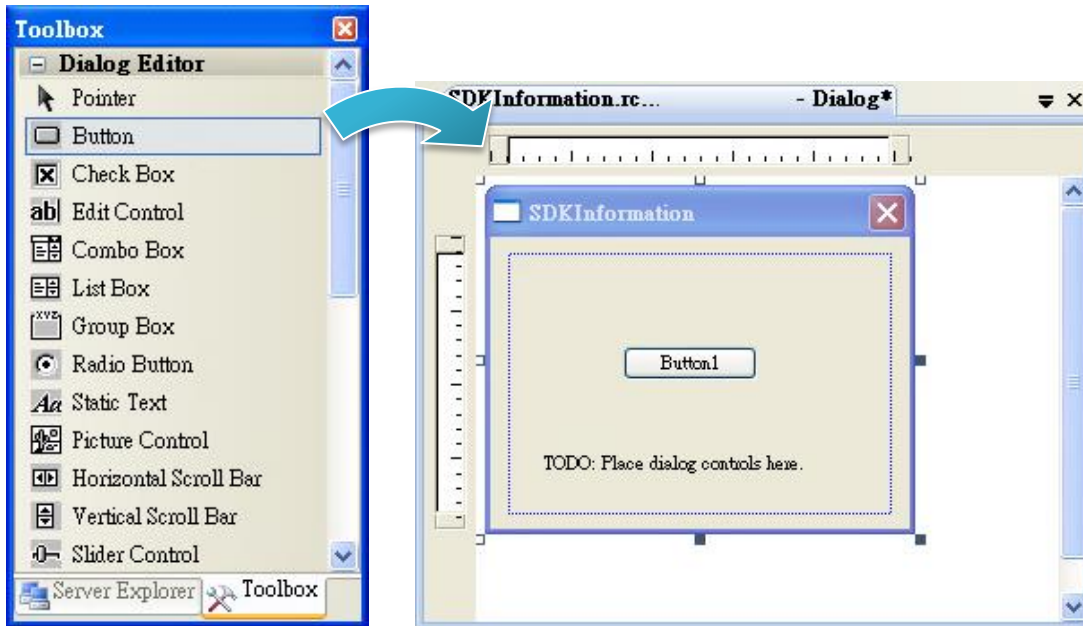

Step 4: Right-click the Button control, and then click Properties

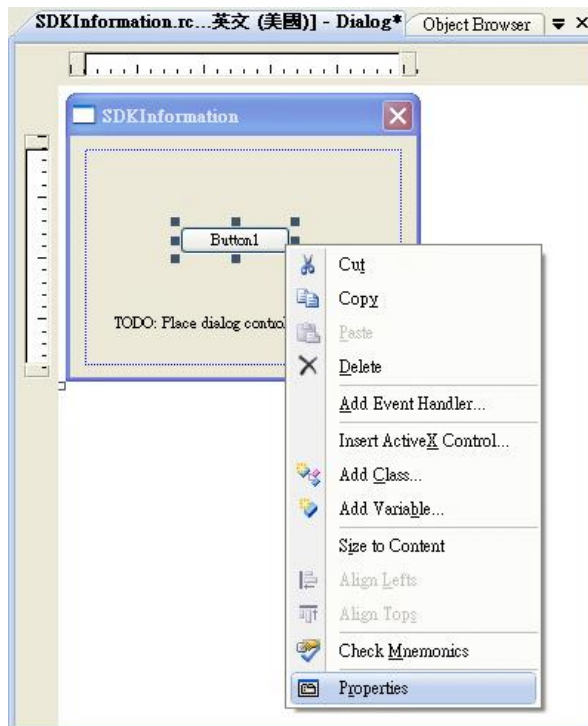


Step 5: In the Properties window, type Check the SDK version, and press ENTER to set the Text property

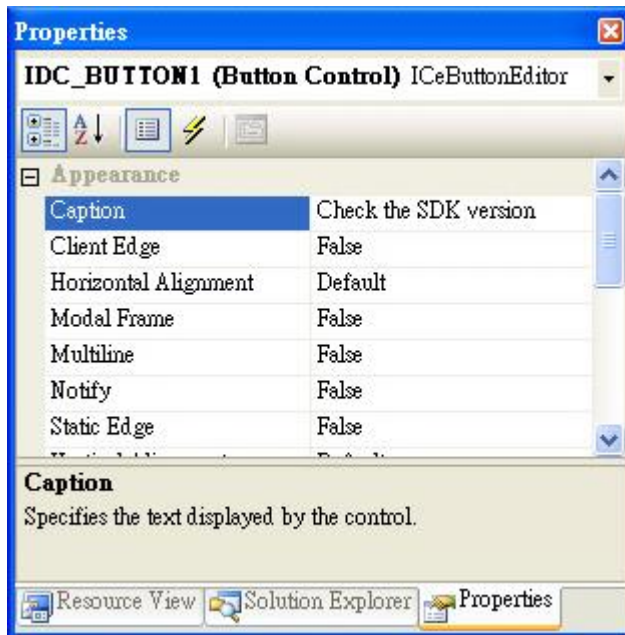

4.5.5. Add the Event Handling for the Control

You have finished the design stage of your application and are at the point when you can start adding some code to provide the program's functionality.

Step 1: Double-click the button on the form

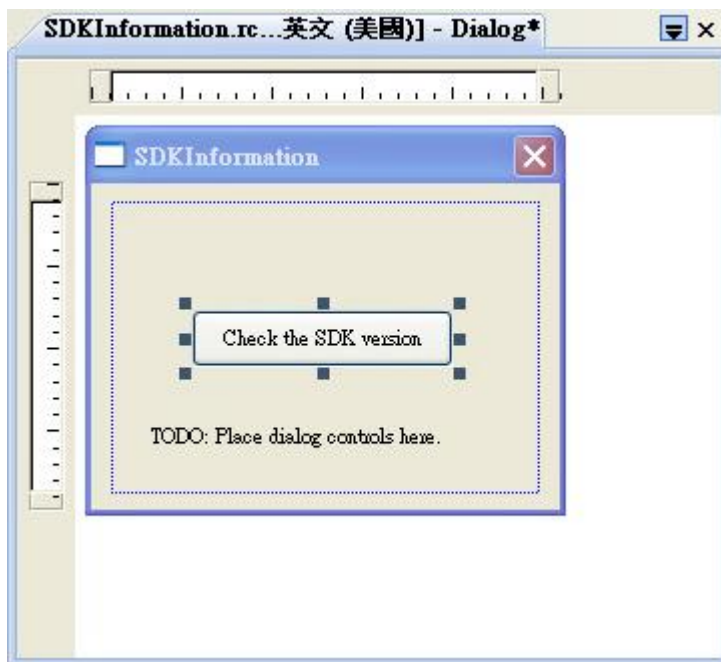

Step 2: Inserting the following code

```
char sdk_version[32];
TCHAR buf[32];
pac_GetSDKVersion(sdk_version);
pac_AnsiToWideString(sdk_version, buf);
MessageBox(buf,0,MB_OK);
```

```
void CSDKInformationDlg::OnBnClickedButton1()
{
    // TODO: Add your control notification handler code here
    char sdk_version[32];
    TCHAR buf[32];
    pac_GetSDKVersion(sdk_version);
    pac_AnsiToWideString(sdk_version, buf);
    MessageBox(buf,0,MB_OK);
}
```


Step 3: Inserting the following code into the header area

```
#include "PACSDK.h"
```


```
#include "stdafx.h"
#include "SDKInformation.h"
#include "SDKInformationDlg.h"
#include "PACSDK.H"
```

4.5.5.1. Upload the Application to WinPAC

WinPAC supports FTP server service. You can upload files to WinPAC or download files from a public FTP server.

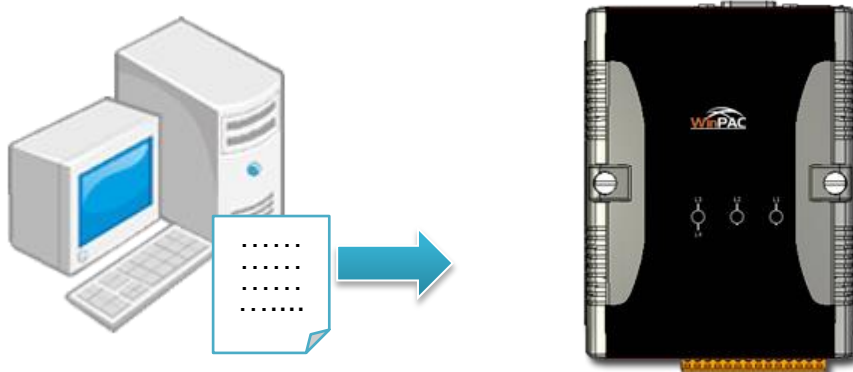

Step 1: On the Build menu, click Build SDKInformation

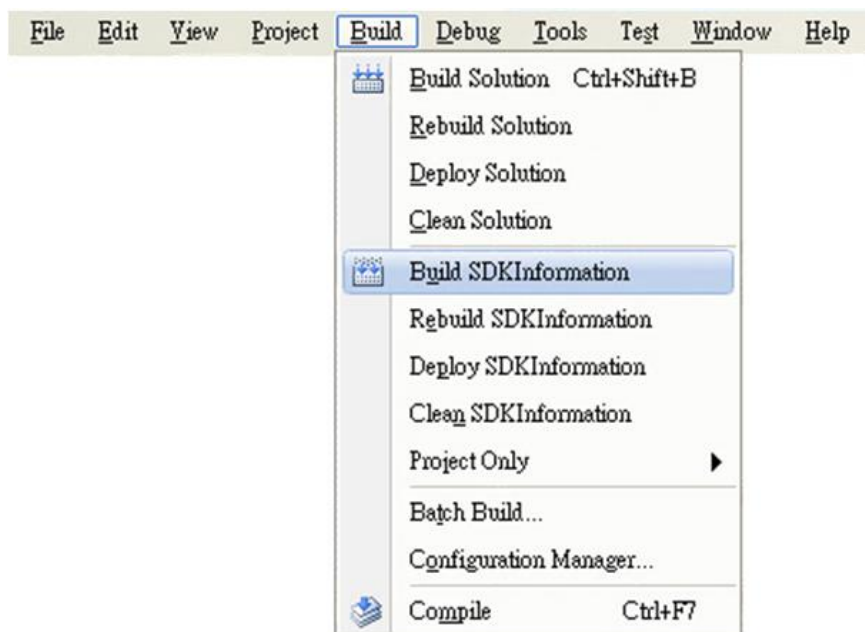

Step 2: Open the browser and type the IP address of WinPAC

Step 3: Upload the SDKInformation.exe application to WinPAC



4.5.5.2. Execute the Application on WinPAC

After uploading the application to WinPAC, you can just double-click it on WinPAC to execute it.




5. APIs and Samples

This chapter provides a brief overview of PAC APIs and samples that have been designed for ViewPAC.


ICP DAS provides a set of samples in different programming languages. You can examine the sample codes, which includes numerous comments, to familiarize yourself with the PAC APIs. This will allow developing your own applications quickly by modifying these demo programs.

For full usage information regarding the description, prototype and the arguments of the functions, please refer to the “PAC Standard API Manual”

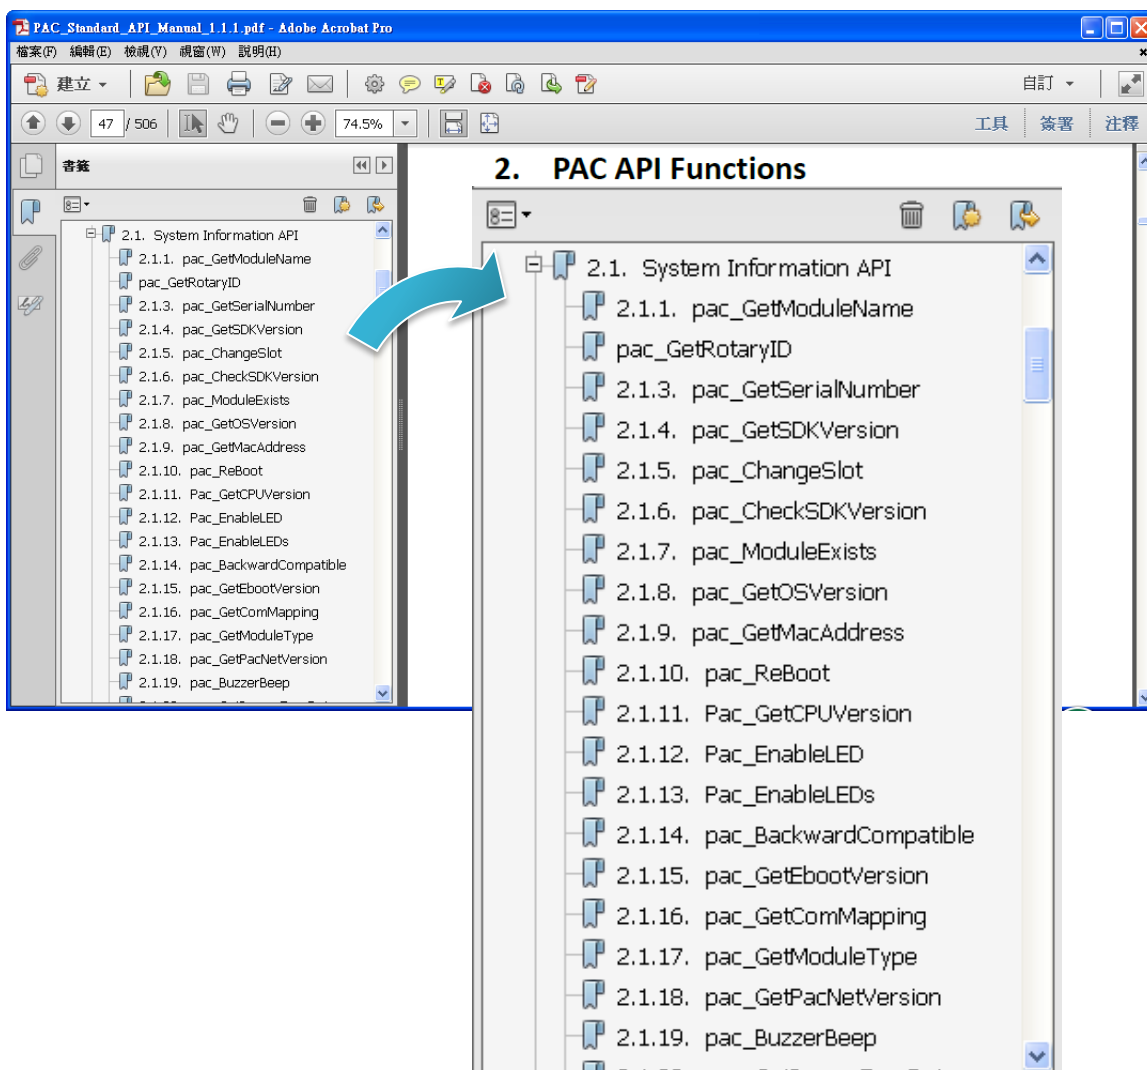

5.1. PAC Standard APIs

The diagram below shows the set of each system operation API provided in the PACSDK.

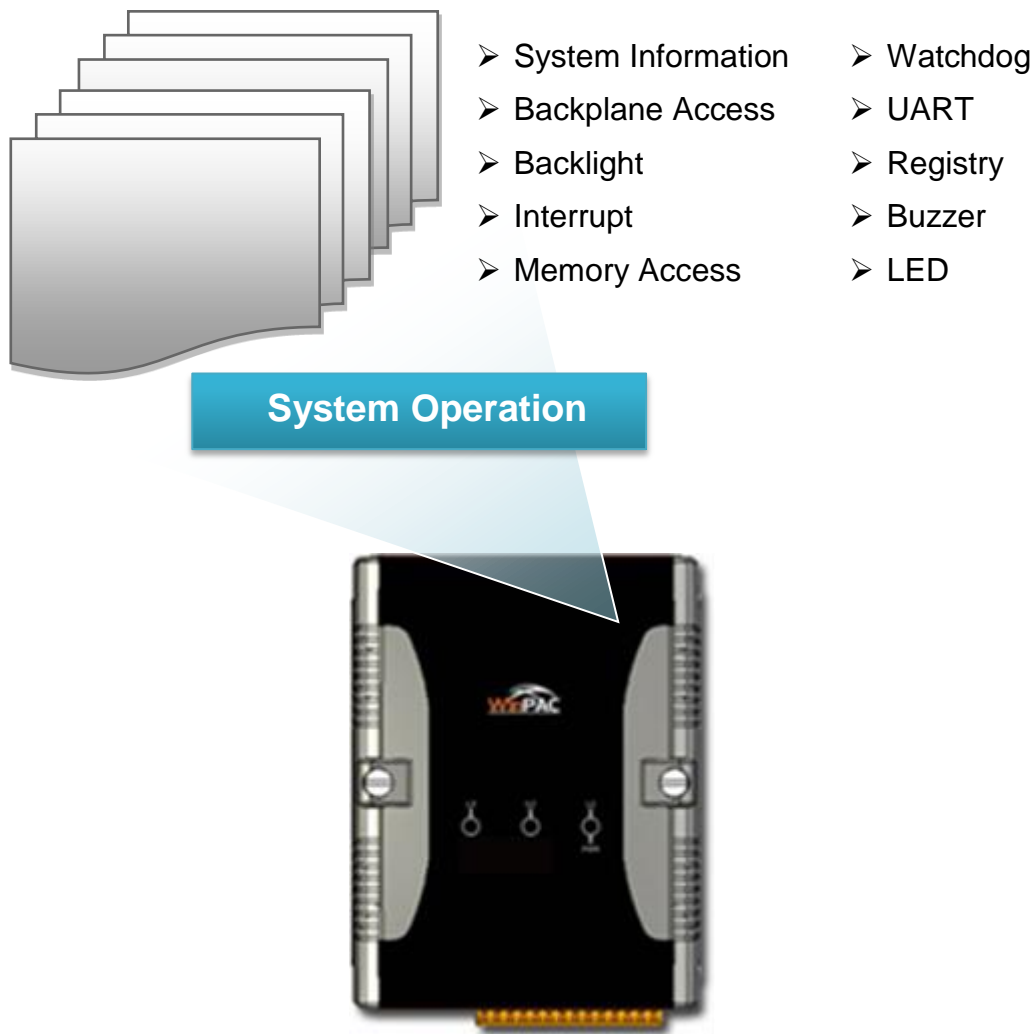

5.1.1. VB.NET Samples for PAC Standard APIs

The PAC SDK includes the following samples that demonstrate the use of the PAC Standard APIs in a VB.NET language environment. The following samples can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

For VB.NET applications, these demo programs can be obtained from:

CD:\wp-5231\Demo\PAC\Vb.net\Standard\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/vb.net/standard/

Folder	Demo	Explanation
buzzer	buzzer	Shows how to make a simple buzzer beep.
DeviceInformation	DeviceInformation	Retrieves information about the OS version, CPU version, SDK version, etc.
GetRotaryID	GetRotaryID	Retrieves information about the status of the rotary switch
Memory	Memory	Shows how to read/write data values from/to the EEPROM or the backplane of the SRAM
MicroSD	MicroSD_Management	Shows how to manage the microSD
RealTimeTest	VB_UI_Call_VC_Realtime	Writes the managed code for the rich graphical user interface that does not require true real-time performance
	VBOnly	Shows how to use the function of JIT compiler and garbage collector
Registry	Registry	Shows how to read/write data values from/to the registry
UART	UART	Shows how to read the name of a local I/O modules via a UART
WatchDog	WatchDog	Displays information about how to operate the watchdog

5.1.2. C# Samples for PAC Standard APIs

The PAC SDK includes the following samples that demonstrate the use of the PAC Standard APIs in a C# language environment. The following samples can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

For C# applications, these demo programs can be obtained from:

CD:\wp-5231\Demo\PAC\C#\Standard\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/c%23/standard/

Folder	Demo	Explanation
buzzer	buzzer	Shows how to make a simple buzzer beep.
DeviceInformation	DeviceInformation	Retrieves information about the OS version, CPU version, SDK version, etc.
GetRotaryID	GetRotaryID	Retrieves information about the status of the rotary switch
Memory	Memory	Shows how to read/write data values from/to the EEPROM or the backplane of the SRAM
MicroSD	MicroSD_Management	Shows how to manage the microSD
RealTimeTest	CSharp_UI_call_VC_Realtime	Writes the managed code for the rich graphical user interface that does not require true real-time performance
	CSharpOnly	Shows how to use the function of JIT compiler and garbage collector
Registry	Registry	Shows how to read/write data values from/to the registry
UART	UART	Shows how to read the name of a local I/O module via a UART
WatchDog	WatchDog	Displays information about how to operate the watchdog

5.1.3. Visual C++ Samples for PAC Standard APIs

The PAC SDK includes the following samples that demonstrate the use of the PAC Standard APIs in a Visual C++ language environment. The following samples can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

For Visual C++ applications, these demo programs can be obtained from:

CD:\wp-5231\Demo\PAC\Vc2008\Standard\


http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/vc2008/standard/

Folder	Demo	Explanation
buzzer	buzzer	Shows how to make a simple buzzer beep.
DeviceInformation	DeviceInformation	Retrieves information about the OS version, CPU version, SDK version, etc.
GetRotaryID	GetRotaryID	Retrieves information about the status of the rotary switch
Memory	Memory	Shows how to read/write data values from/to the EEPROM or the backplane of the SRAM
MultiRT	MultiRT	Shows how to manage the microSD
RealTimeTest	RealTimeTest	Writes the managed cod for the rich graphical user interface that does not require true real-time performance
Registry	Registry	Shows how to read/write data values from/to the registry
UART	UART	Shows how to read the name of a local I/O modules via a UART
WatchDog	WatchDog	Displays information about how to operate the watchdog

5.2. PAC IO APIs

The diagram below shows the types of the PAC IO APIs provided in the PACSDK or the specified SDK.

For more information about the APIs and samples provided by the expansion I/O modules, please refer to chapter 6. I/O Modules and SDK Selection.

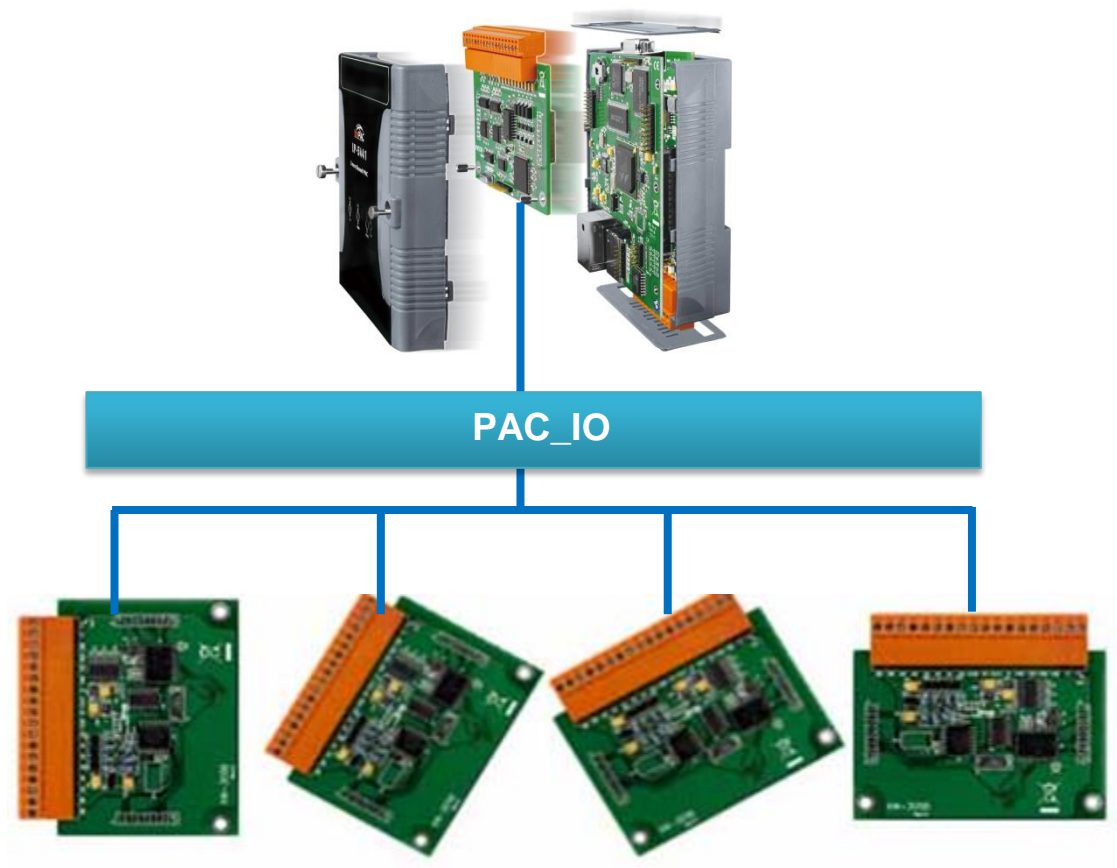

5.2.1. VB.NET Samples for PAC Standard APIs

The PAC SDK includes the following samples that demonstrate the use of the PAC IO APIs in a VB.NET language environment. The following samples can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

For VB.NET applications, these demo programs can be obtained from:

CD:\wp-5231\Demo\PAC\Vb.net\IO\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/vb.net/io/

Folder	Demo	Explanation
XVBoard/XV107	XV107_Modbus_RTU_Master_VB_demo	Shows how to use the XV107 module of the XV-board
Remote (I-7000 or I-87K modules in RU-87Pn I/O unit)	For full details regarding the remote I/O modules and its demos, please refer to: http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/applicable_demo_for_7k_module.pdf	

5.2.2. C# Samples for PAC Standard APIs

The PAC SDK includes the following samples that demonstrate the use of the PAC IO APIs in a C# language environment. The following samples can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

For C# applications, these demo programs can be obtained from:

CD:\wp-5231\Demo\PAC\C#\IO\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/c%23/io/

Folder	Demo	Explanation
XVBoard/XV107	ModbusRTU_Master_Console	Shows how to use the XV107 module of the XV-board in console mode
	XV107_Modbus_RTU_Master_demo	Shows how to use the XV107 module of the XV-board
Remote (I-7000 or I-87K modules in RU-87Pn I/O unit)	For full details regarding the remote I/O modules and its demos, please refer to: http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/applicable_demo_for_7k_module.pdf	

5.2.3. Visual C++ Samples for PAC Standard APIs

The PAC SDK includes the following samples that demonstrate the use of the PAC Standard APIs in a Visual C++ language environment. The following samples can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

For Visual C++ applications, these demo programs can be obtained from:

CD:\wp-5231\Demo\PAC\Vc2008\IO\


http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/vc2008/io/

Folder	Demo	Explanation
Remote (I-7000 or I-87K modules in RU-87Pn I/O unit)	For full details regarding the remote I/O modules and its demos, please refer to: http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/applicable_demo_for_7k_module.pdf	

6. I/O Modules and SDK Selection

This chapter describes how to select a suitable I/O expansion module and the corresponding SDK library to be used for developing programs on WinPAC series devices.

Selecting an SDK Library for I/O Expansion

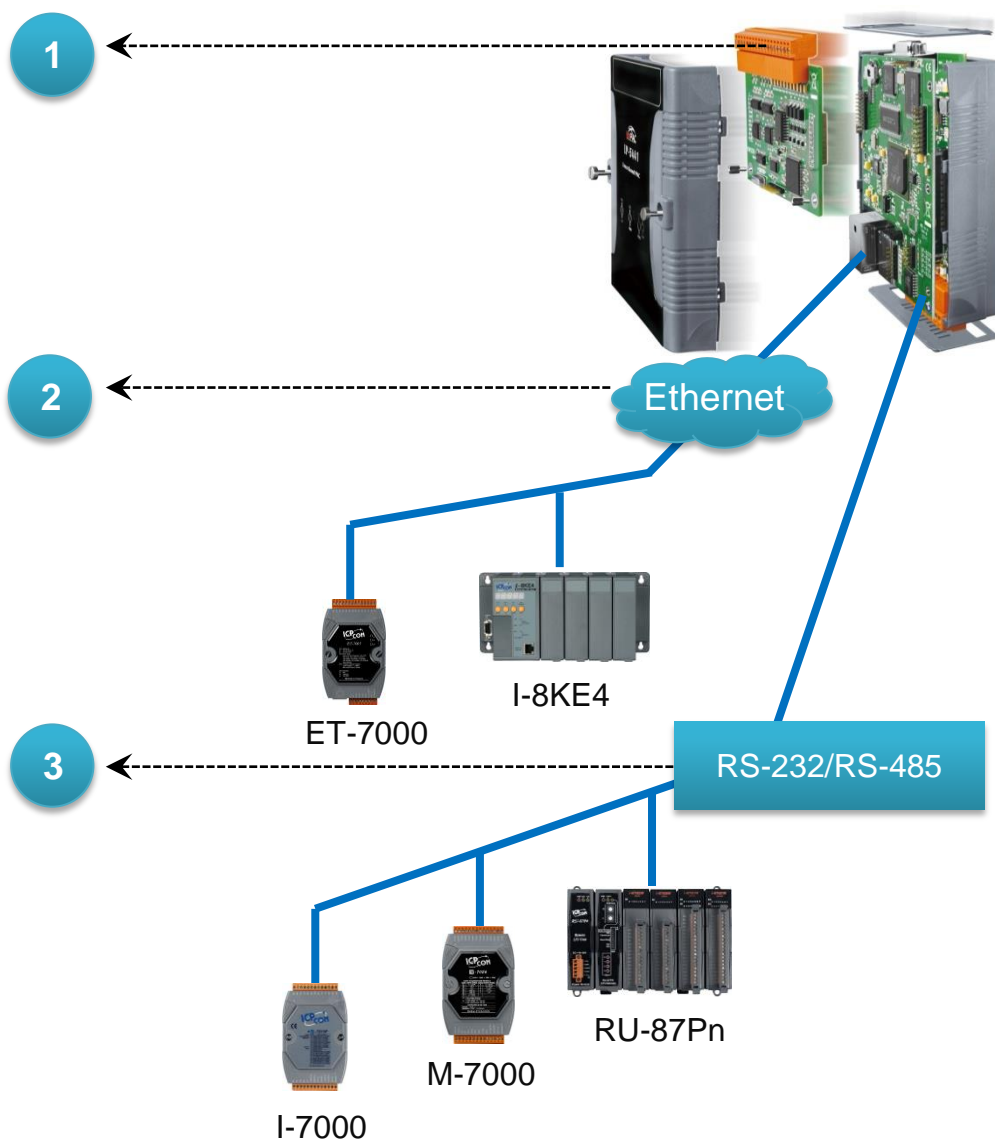

① Local I/O Module (XV-Board)

There are more than 8 XV-Board available for expanding the function of the WP-5231. The following table shows the appropriate SDK library to be used for I/O modules.

Module	Native SDK	.NET CF SDK
XV-Board	Modbus Demo	Modbus Demo

For more detailed information about these support modules, please refer to http://www.icpdas.com/root/product/solutions/hmi_touch_monitor/touchpad/xv-board_selection.html

② RS-485 (I-7000 series and M-7000 series)

I-7000, M-7000, RU-87Pn and high profile I-87K series modules connect to WP-5231 series devices via a twisted-pair, multi-drop, 2-wire RS-485 network.

➤ I-7000 series I/O modules

Module	Native SDK	.NET CF SDK
I-7000 series	PACSDK.dll	PACNET.dll
I-7000 series with I-7088 (D)	PACSDK_PWM.dll	PACNET.dll

For full details regarding I-7000 series I/O modules and its demos, please refer to: http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/pac/applicable_demo_for_7k_module.pdf

➤ **M-7000 series I/O modules**

Module	Native SDK	.NET CF SDK
M-7000 series	Modbus Demo	Modbus Demo

For more detailed information about M-7000 series modules using Modbus protocol and its demos, please refer to:

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/nmodbus/

➤ **RU-87Pn + I-87K series I/O modules**

Module	Native SDK	.NET CF SDK
RU-87Pn + I-87K	PACSDK.dll	PACNET.dll

➤ **Other specified I/O**

Module	Native SDK	.NET CF SDK
I-7088W	PACSDK_PWM.dll	PACNET.dll

③ Ethernet (ET-7000 series and I-8KE4/8-MTCP)

The Ethernet I/O devices available include ET-7000 and I-8KE4/8-MTCP, and support the Modbus/TCP communication protocol.

Module	Native SDK	.NET CF SDK
ET-7000	Modbus Demo	Modbus Demo
I-8KE4/8-MTCP	Modbus Demo	Modbus Demo

For more detailed information about ET-7000 and I-8KE4/8-MTCP series modules using Modbus protocol and its demos, please refer to:

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/demo/nmodbus/

7. WP-5231 Updates


This chapter provides information of the ViewPAC OS and SDKs, and a guided tour that demonstrates the steps needed to update the ViewPAC OS and SDKs.

ICP DAS will continue to add additional features to WinPAC-5231 SDK and OS in the future, so we advise you to periodically check the ICP DAS web site for the latest updates.

Both the files of OS updates and SDK updates can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/

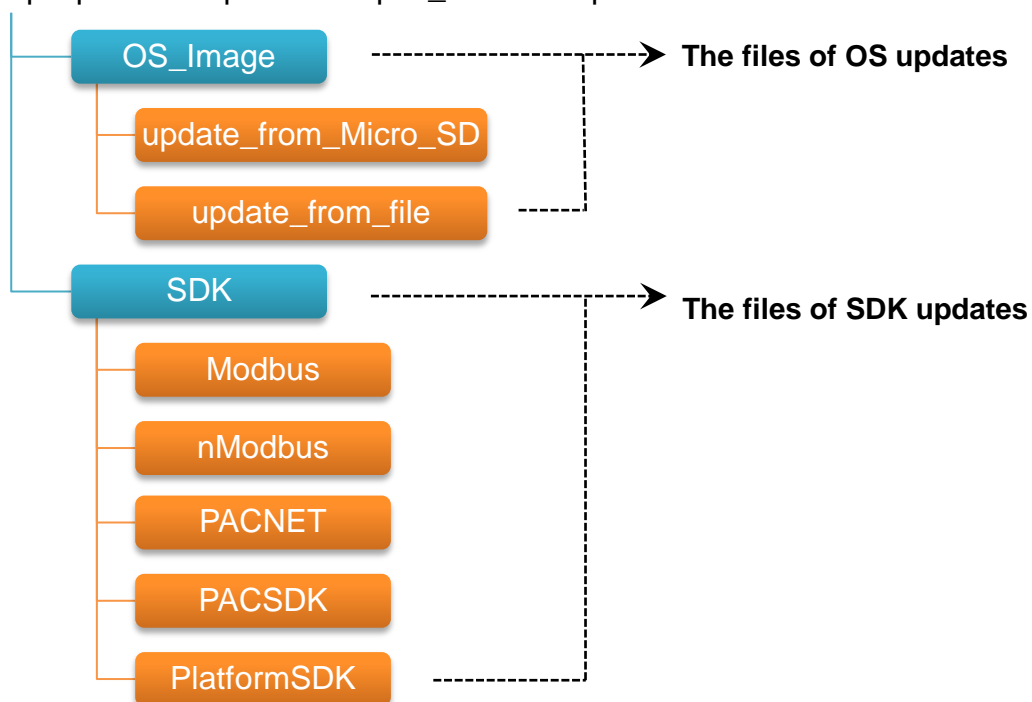


7.1. OS Updates

OS updates are part of the WP-5231 updates services to provide additional and more efficient features and functionality for WP-5231 operating system.


The updates files of OS image can be found separately on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\OS_Image\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/os_image/

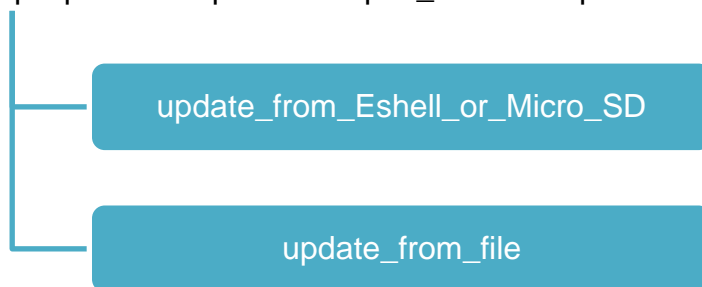

There are two ways to update the OS:

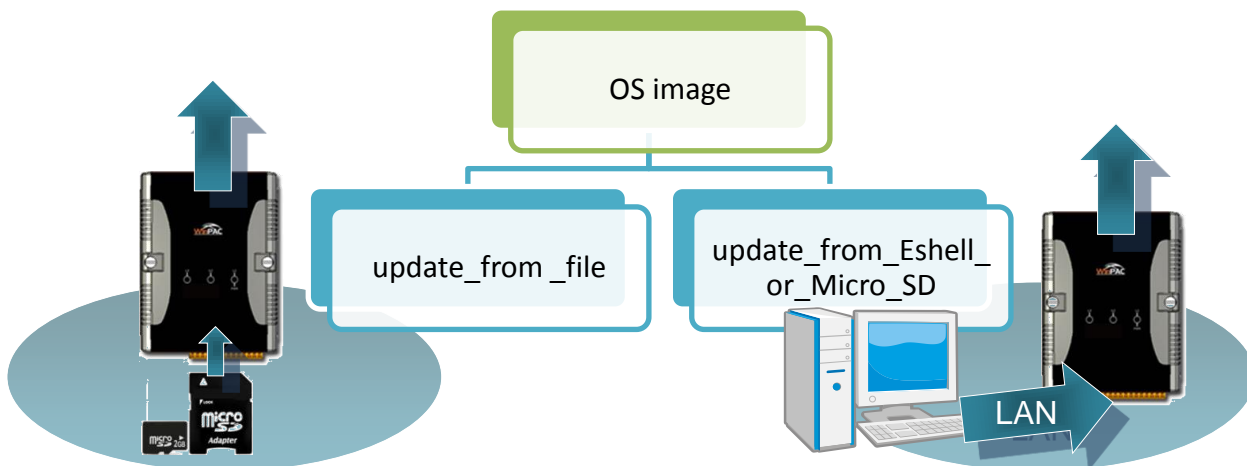

1. Update from eshell (Please refer to section 7.1.1)

(We recommend that you use this one for more quicker and easier to update)

2. Update from micro_SD (Please refer to section 7.1.2)

7.1.1. OS Updates using Eshell

By default, the OS updates via LAN. Therefore, to update the OS image, make sure LAN is connected to the PC.



Step 1: Get the latest version of the installation package file and then unzip it

The latest version of the installation package file can be found from ICP DAS web site.

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/os_image/update_from_eshell_or_micro_sd/

Step 2: Run the registry clear.exe


The registry.exe can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\PC_Tools\Eshell

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/pc_tools/eshell/



Step 3: Place the rotary switch in position 3, OS update mode

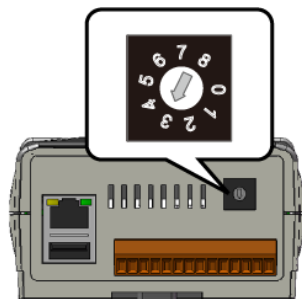

Step 4: Run the ESHELL.exe, and then restart the WP-5231

The ESHELL.exe can be found on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.




CD:\wp-5231\PC_Tools\Eshell


http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/pc_tool/s/eshell

Step 5: Select the device which you want to update the OS image, and then click OK


Select the device name which you want to update the OS image from the list.

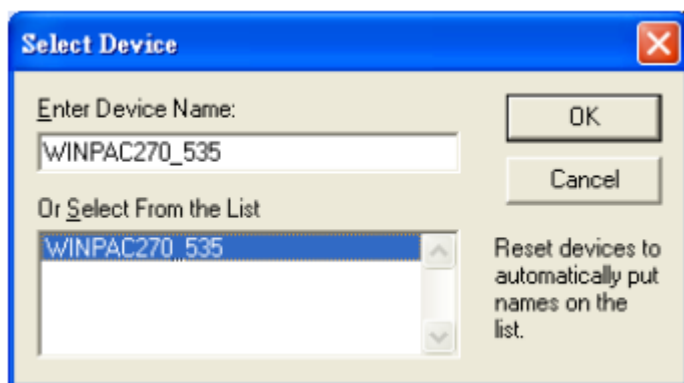


Step 6: Select the latest version of the OS image file

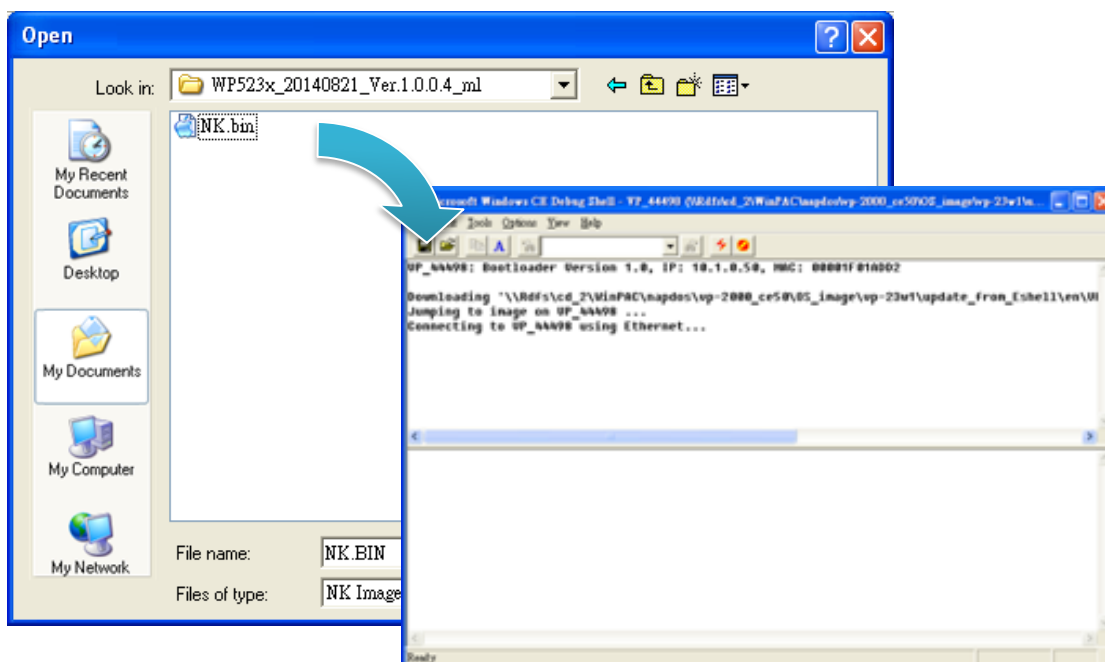


Step 7: Once the procedure is completed, the “Warning !” dialog box will appear as below shown, then turn the rotary switch in position 0, normal mode

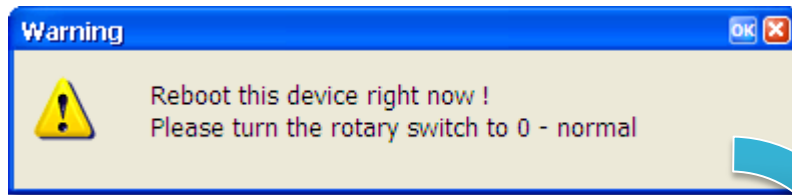


Step 8: Click the OK button

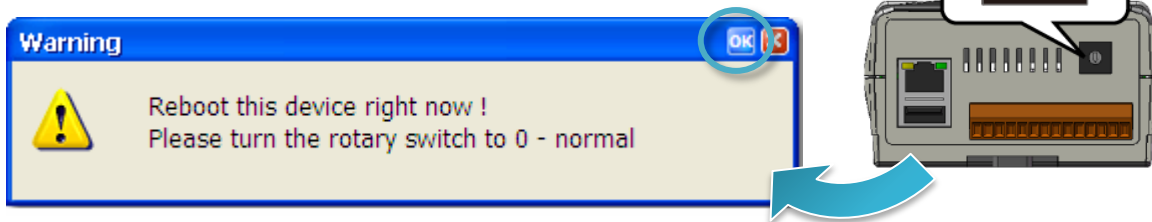

Step 9: Check the OS version

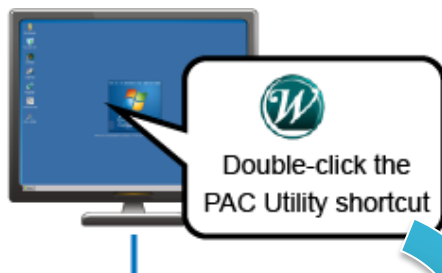

Start the PAC Utility, and then select the “Device Information” tab to check the current OS version.

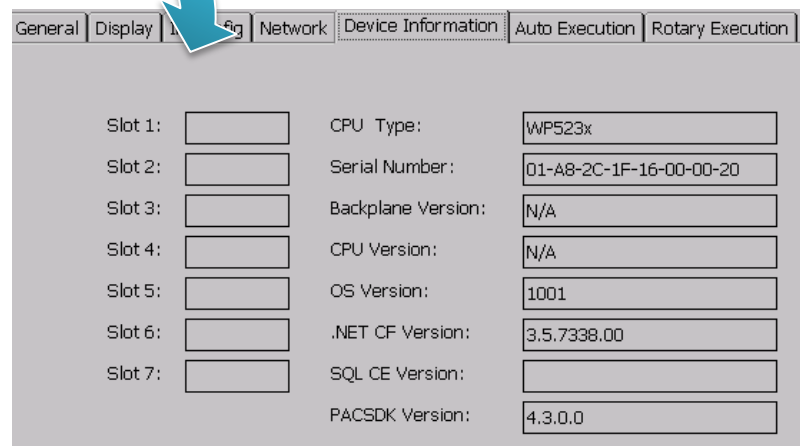


7.1.2. OS Updates using micro_SD

The microSD card can be used to reinstall the WP-5231 OS image to factory default settings in the event of the WP-5231 failure.

Step 1: Get the latest version of the installation package file, then unzip the file, and then copy them to microSD card



The latest version of the installation package file can be found from ICP DAS web site.

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/os_image/update_from_eshell_or_micro_sd/

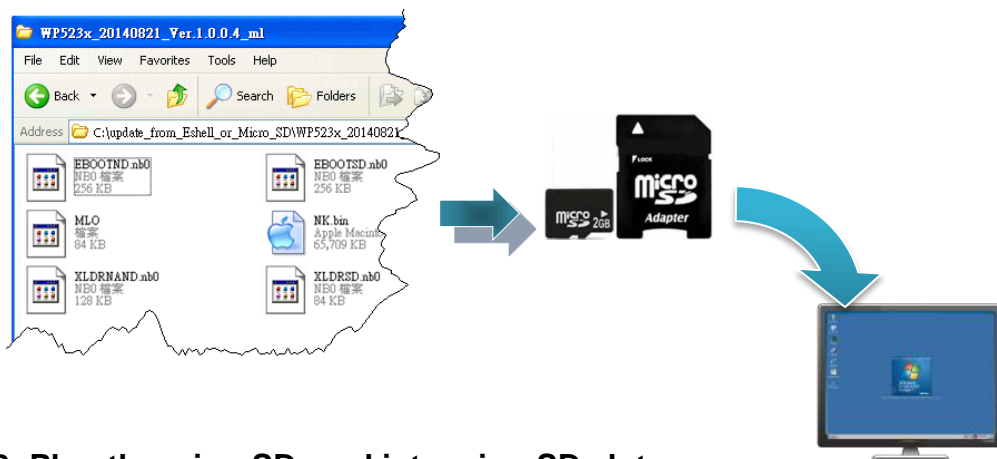

Step 2: Plug the microSD card into microSD slot

Step 3: Turn the rotary switch in position 5, OS update mode

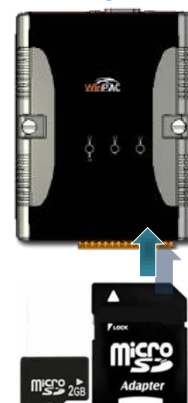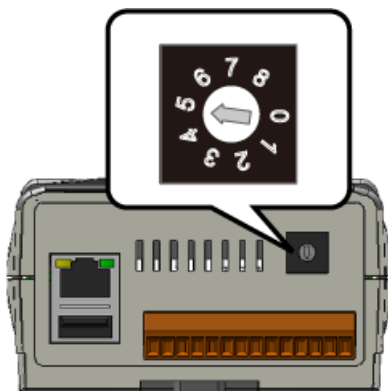


Step 4: Reboot the WP-5231

Step 5: Wait a few minutes for the following desktop to be displayed




Step 6: Turn the rotary switch in position 0, normal mode

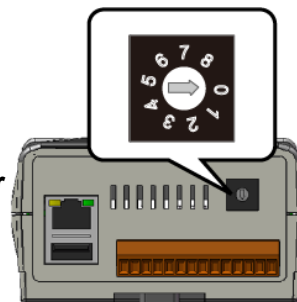

Step 7: Reboot the WP-5231

Step 8: Check the OS version

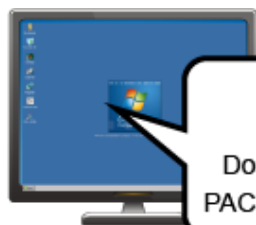

Double-click the
PAC Utility shortcut

Start the PAC Utility, and then select the “Device Information” tab to check the current OS version.



General	Display	1	2	3	4	5	6	7
Slot 1: <input type="text"/>								
Slot 2: <input type="text"/>								
Slot 3: <input type="text"/>								
Slot 4: <input type="text"/>								
Slot 5: <input type="text"/>								
Slot 6: <input type="text"/>								
Slot 7: <input type="text"/>								
CPU Type: WP523x								
Serial Number: 01-A8-2C-1F-16-00-00-20								
Backplane Version: N/A								
CPU Version: N/A								
OS Version: 1001								
.NET CF Version: 3.5.7338.00								
SQL CE Version: <input type="text"/>								
PACSDK Version: 4.3.0.0								


7.2. SDK Updates

SDK updates are part of the WP-5231 updates services to provide additional and more efficient features and functionality for WP-5231 operating system.

The updates files of SDK files can be found separately on the CD that was provided with the package or by downloading the latest version from ICP DAS web site.

CD:\wp-5231\SDK\

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/

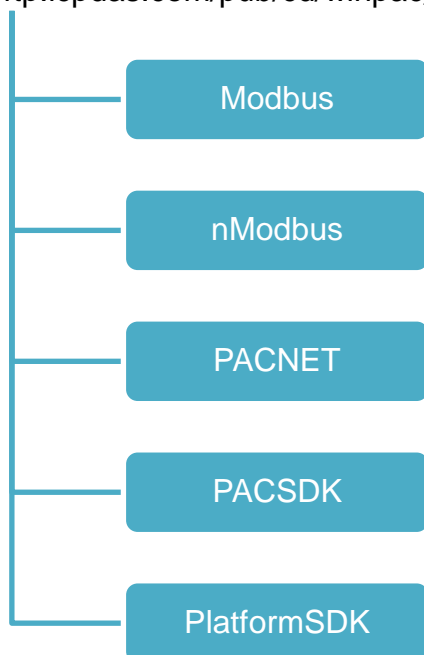

7.2.1. SDK Updates for VB.NET or C#

You can just change the old one with a new one.

Step 1: Get the latest version of the ViewPAC SDK components

The latest version of the ViewPAC SDK can be obtained from ICP DAS web site.

http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/pacnet/

Step 2: Copy the latest version of DLL to PC and ViewPAC

The DLL files on PC are located at anywhere only the solution can reference it.

The DLL files on ViewPAC are located at the same directory as the .exe file.

7.2.2. SDK Updates for Visual C++

You can just change the old one with a new one.

Step 1: Get the latest version of the VC++ components

The latest version of the VC++ components can be obtained from:
http://ftp.icpdas.com/pub/cd/winpac_am335x/wp-5231/sdk/pacsdk/

Step 2: Copy the latest version of header files and libraries to Host PC

The header files are located at:

C:\Program Files\Windows CE

Tools\SDKs\AM335x_WINCE7_SDK\Include\Armv4i

The libraries are located at:

C:\Program Files\Windows CE Tools\SDKs\AM335x_WINCE7_SDK\Lib\ARMv4I

Step 3: Copy the latest version of DLL files to WinPAC

The DLL files are located at:

\System_Disk\ICPDAS\System

A. Tips – How to

This chapter provides tips and a guided tour on using and maintaining the WinPAC.

A.1. How to use the Printer

WinPAC have ability to access the printer, you can connect to the printer via Ethernet network or USB.

Tips & Warnings



WinPAC only supports HP Laser Jet Printers which support PCL6 driver. The following printer support is released by HP


- HP LaserJet 4000 series/HP LaserJet 4100 series
- HP LaserJet 2100 series/HP LaserJet 2200 series
- HP LaserJet 1200
- HP LaserJet 3200/HP LaserJet 3300
- HP LaserJet 4200 series/HP LaserJet 4300 series
- HP LaserJet 5000 series/HP LaserJet 5100 series
- HP LaserJet 8000 series
- HP LaserJet 9000 series printers

If you need the latest support of HP PCL6 printer, you can refer to following link
<http://h20000.www2.hp.com/bizsupport/TechSupport/Document.jsp?objectID=bpl04568>


A.1.1. How to use the network printer

Here are step by step instructions on how to use a shared printer.

Step 1: On PC side, check the name of the PC and the shared printer

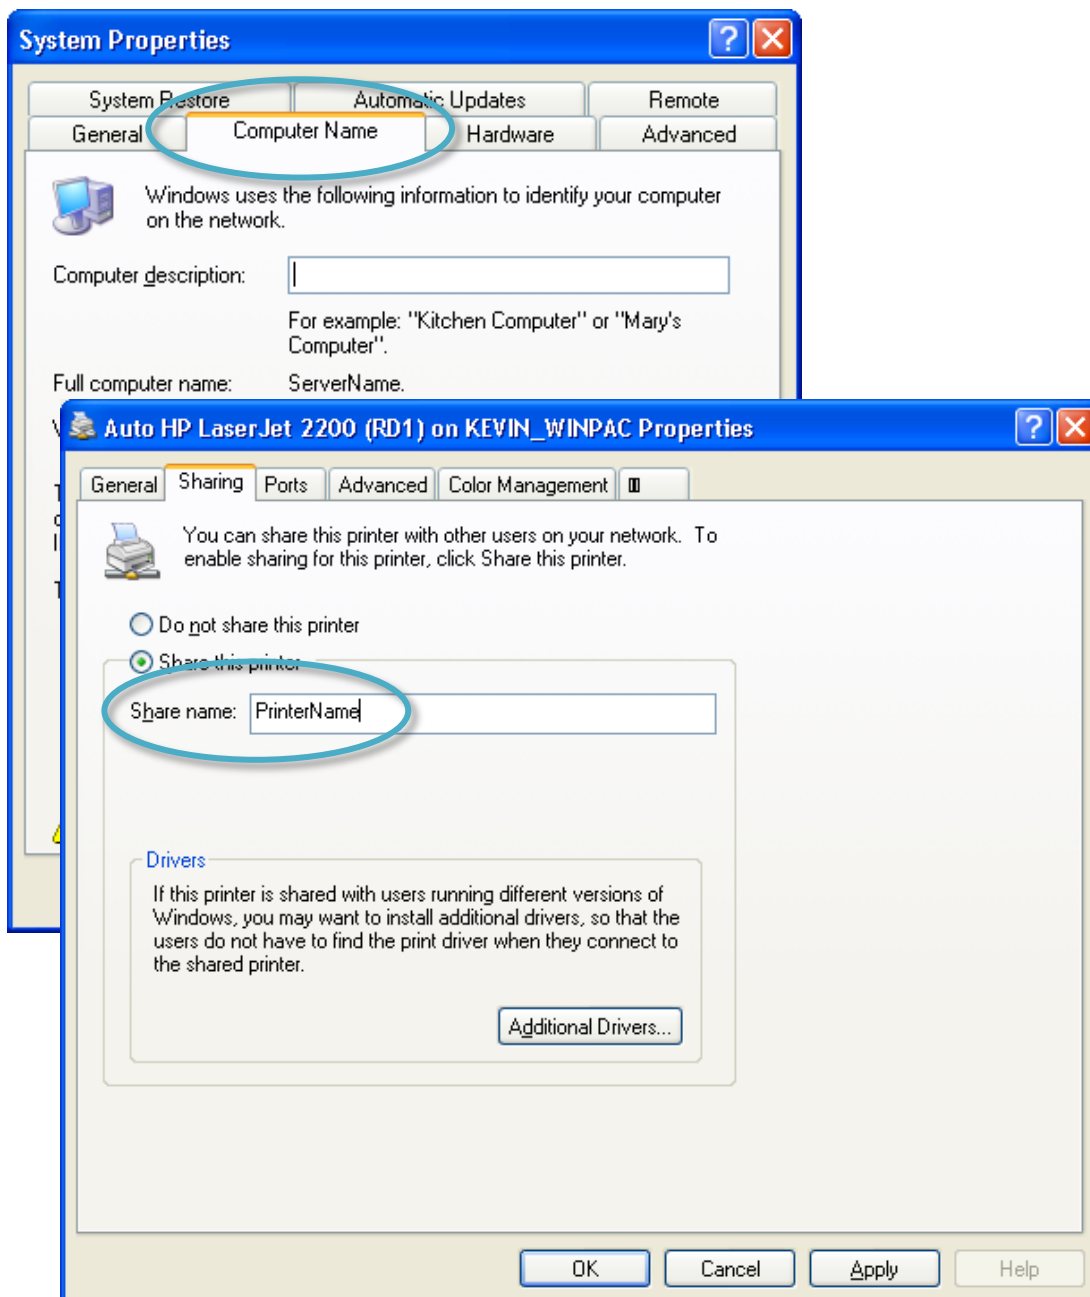

Step 2: On WinPAC – Run the Notepad, and then open a WordPad format file

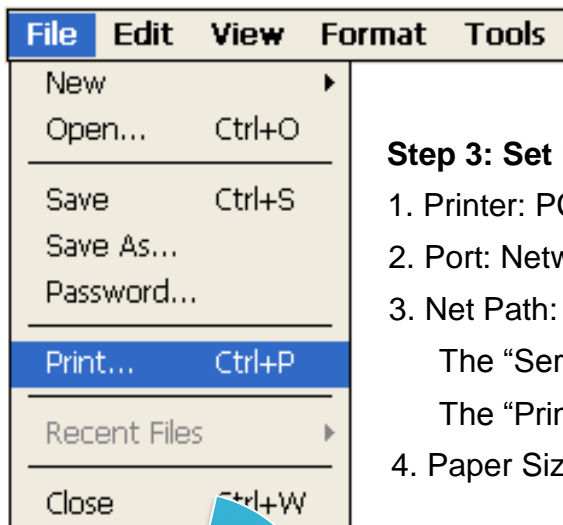

Step 3: Set up the printer

1. Printer: PCL Laser
2. Port: Network
3. Net Path: \\ServerName\PrinterName


The "ServerName" is the name or IP of the PC.

The "PrinterName" is the name of share printer of the PC.

4. Paper Size: Select the paper size




Test !!!

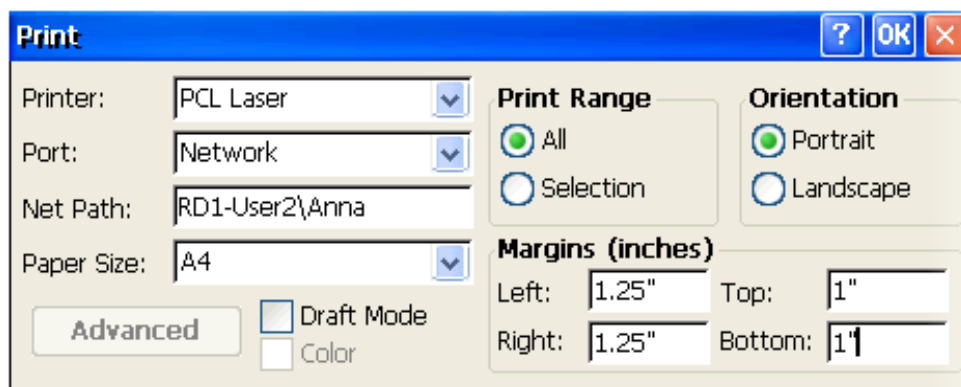


A.1.2. How to use the USB printer

Here are step by step instructions on how to use a shared printer.

Step 1: Run the Notepad, and then open a WordPad format file

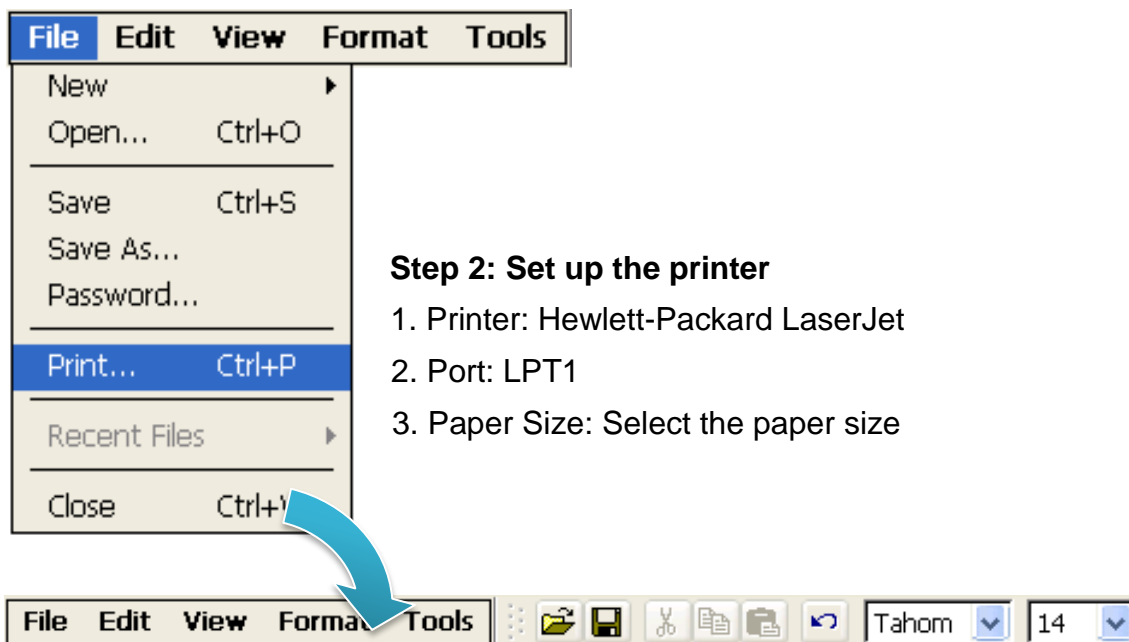

Test !!!

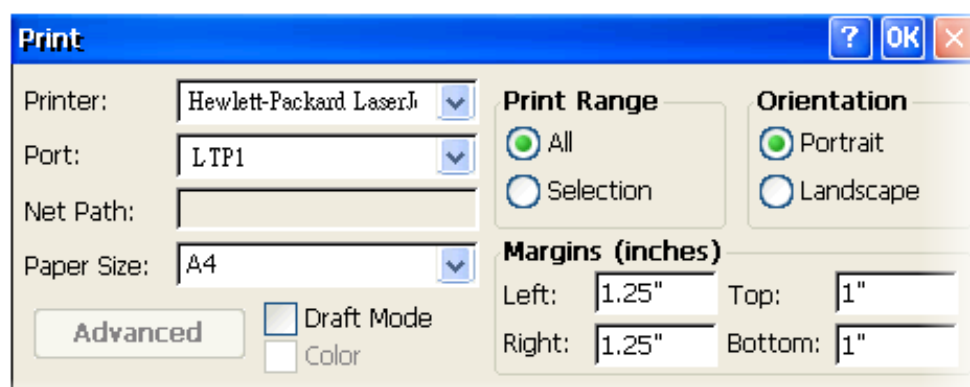


A.2. How to Automatically Synchronize WinPAC Clock with an Internet Time Server


You can synchronize your WinPAC clock with an Internet time server.

If synchronization is enabled, the WinPAC clock is synchronized with an Internet time server.

Step 1: Double-click the PAC Utility on the desktop

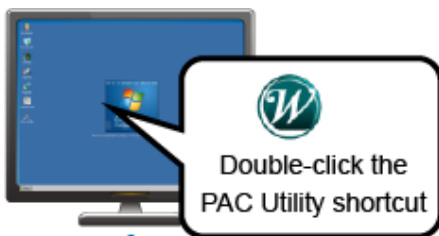


Step 2: On the General tab, press Configure button

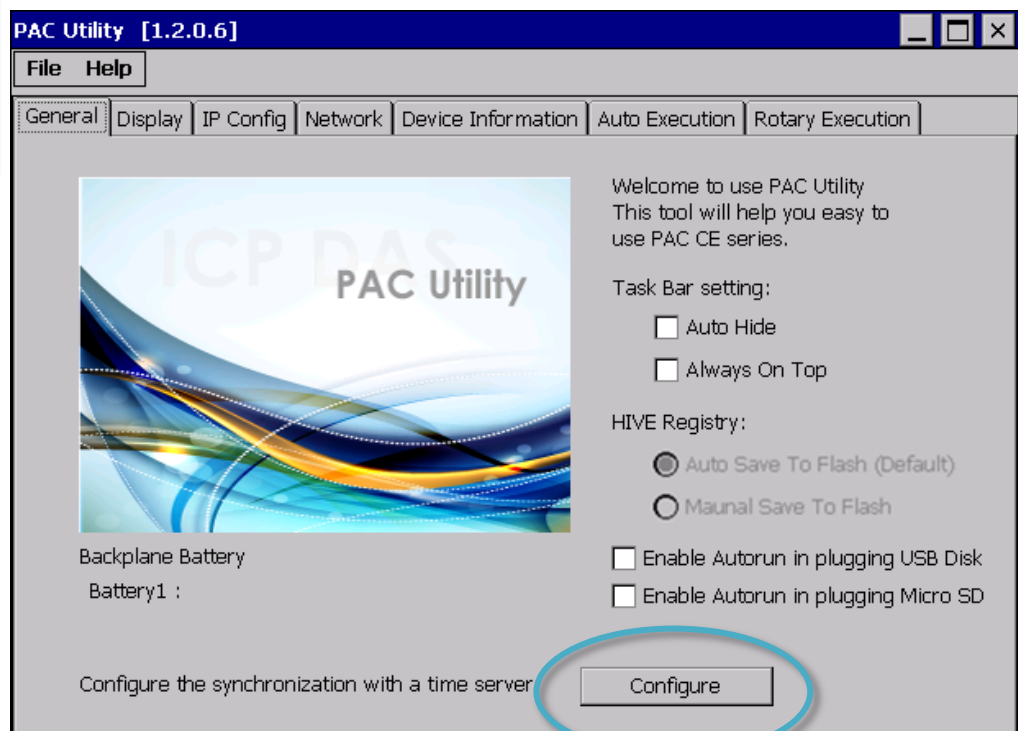


Step 3: Select the domain name from the Server drop-down list, and then enter a value in the Autoupdate Frequency field

Step 4: Check the Automatically synchronize with an internet time server box

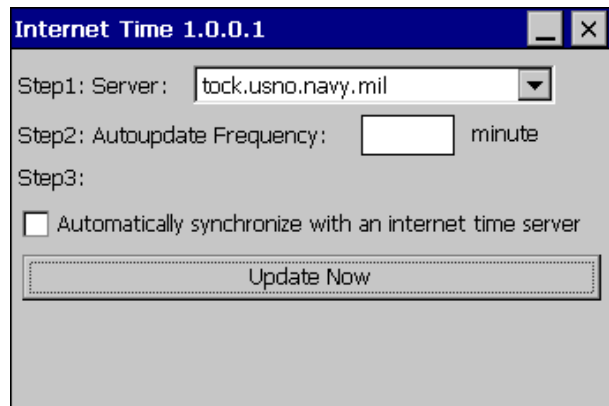

check


Step 5: On the File menu, click Save and

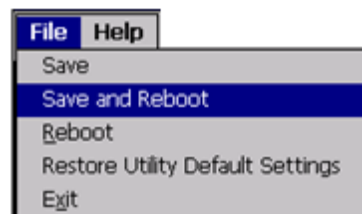

Reboot

Step 6: The WinPAC will automatically synchronize with an internet time server regularly

Step 7: Click the Update Now button to synchronize WinPAC clock immediately

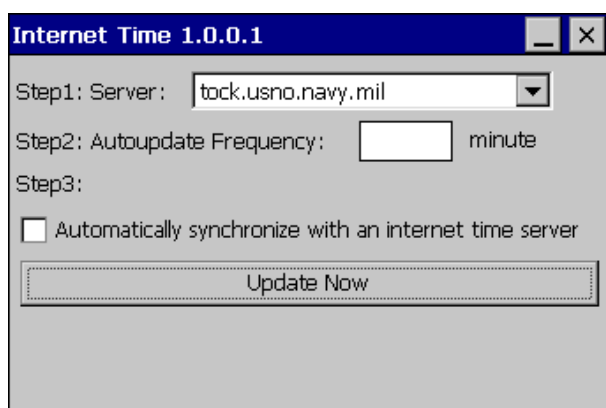


A.3. How to use User Account Control in WinPAC

A.3.1. How to Create an User Account


Here are step by step instructions on how to add a user account.

Step 1: Double-click the PAC Utility on the desktop


Step 2: On the Login tab of the Network tab, click Login tab, type the User Name and Password, and then click Add button

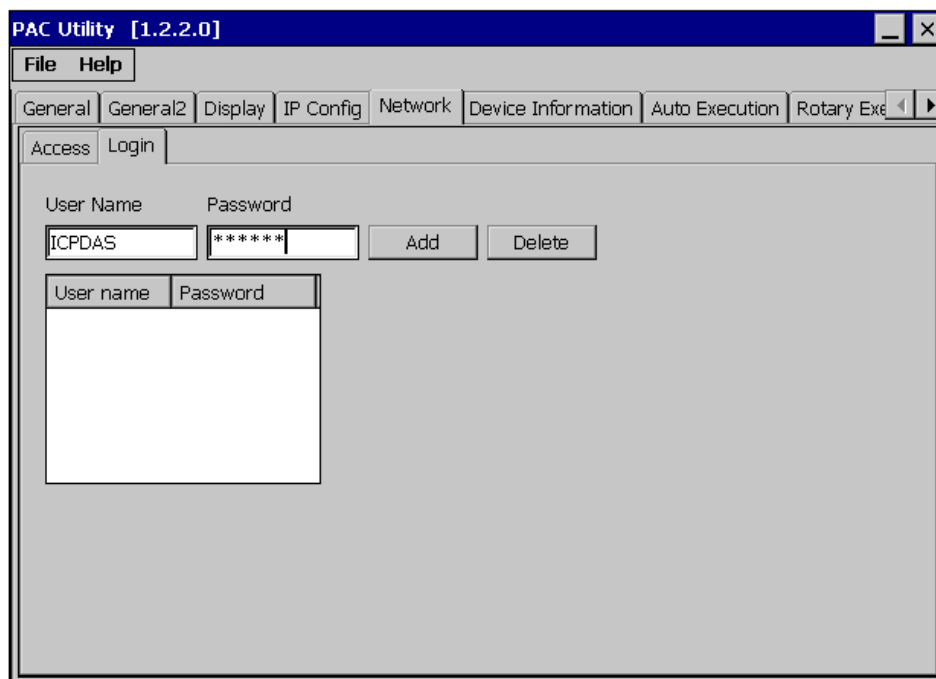

Step 3: The user has been added to the allowed under the remote login and included in the following list

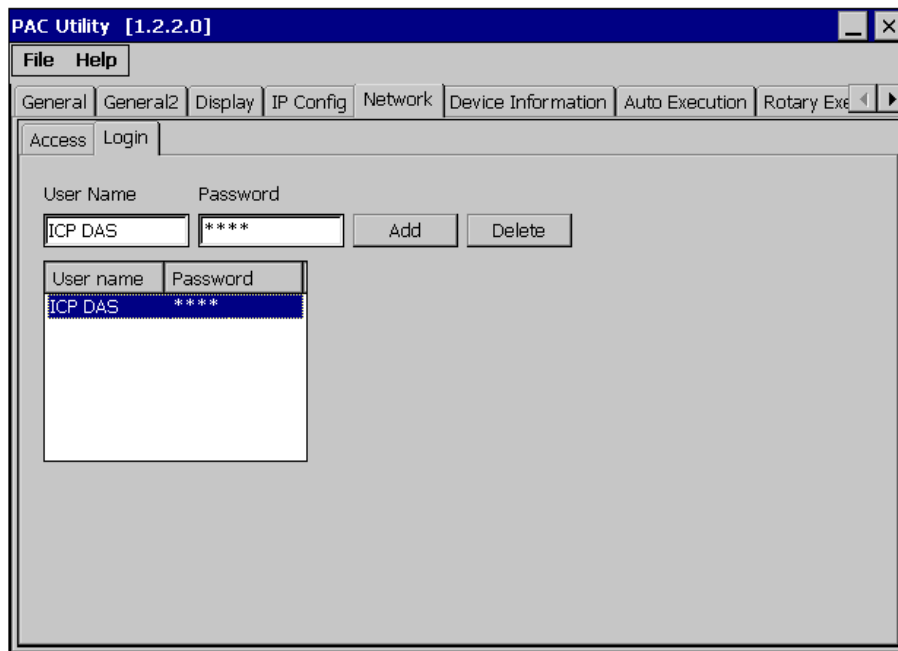


Step 4: On the File menu, click Save and Reboot for changes to take effect

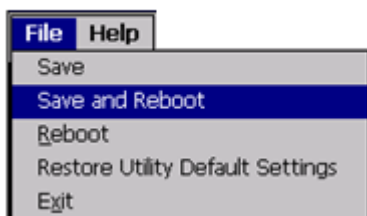


A.3.2. How to Use Telnet to remote login the WinPAC from PC


Here are step by step instructions on how to use telnet to remote login the WinPAC from PC.

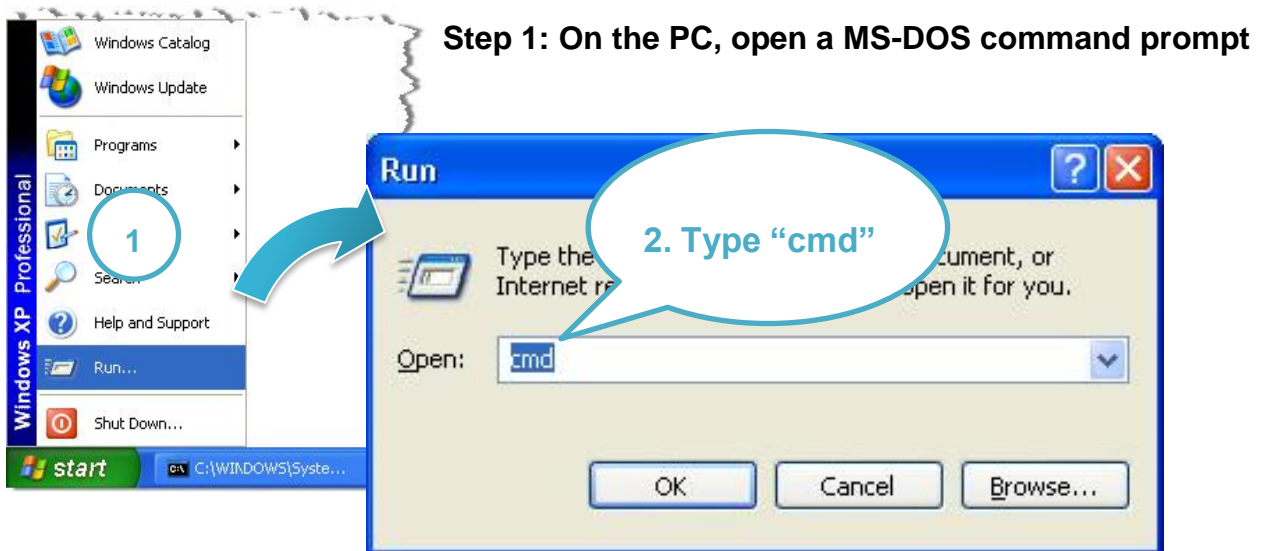


Step 2: At the command prompt, type "telnet (IP address)"

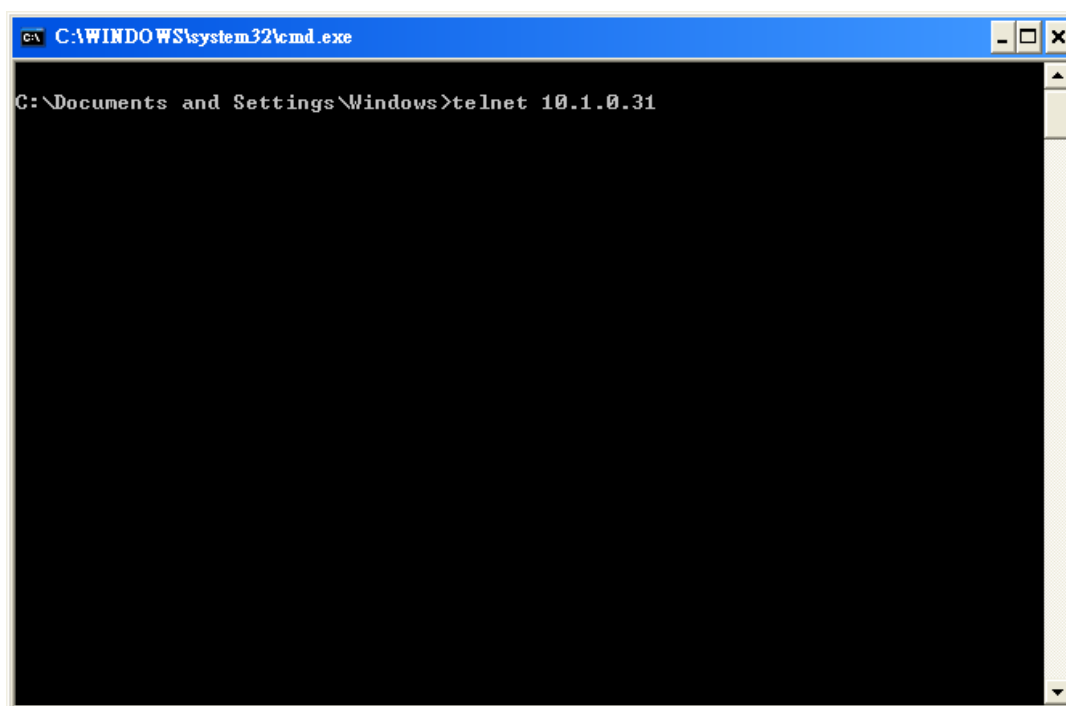

Step 3: The connection has been set up, and then type the name and password

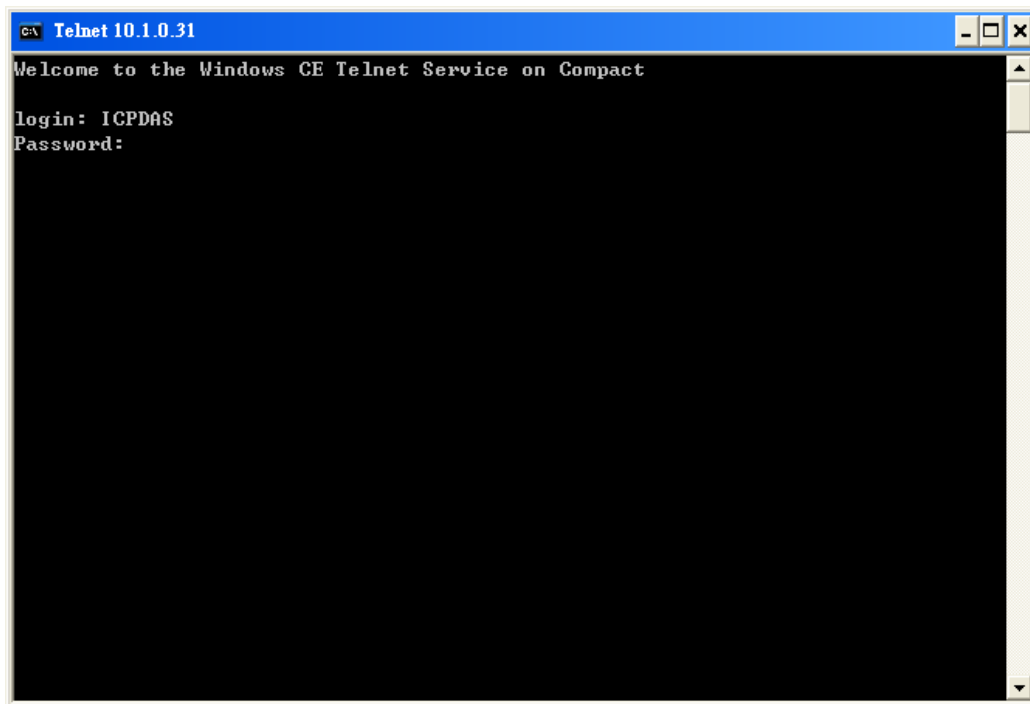


Step 4: The remote login has been completed

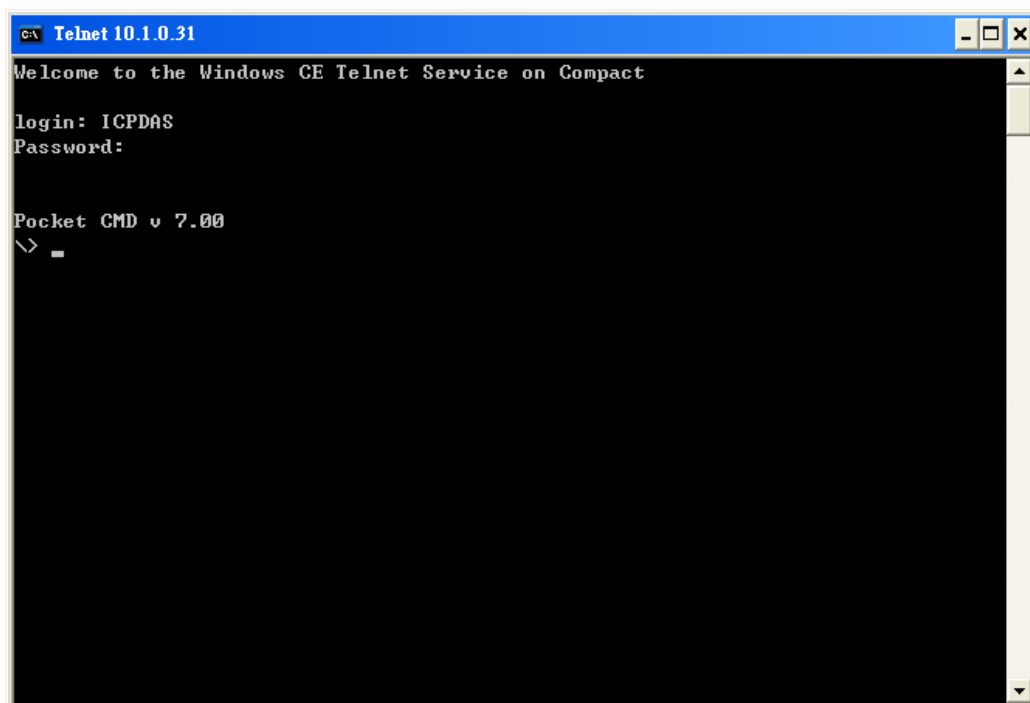


A.3.3. How to Remove a User Account from the Login List

Here are step by step instructions on how to remote the user from the login list.

Step 1: Click a user from the list which you want to remove, and the user will display in the field, and then press Delete to delete the user from the login list

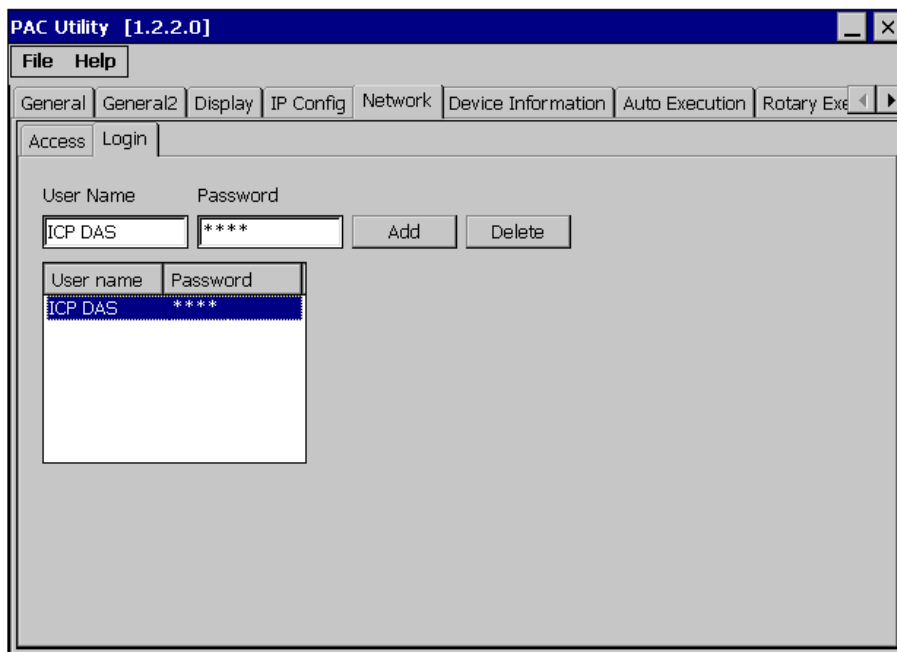

Step 2: On the File menu, click Save and Reboot for changes to take effect

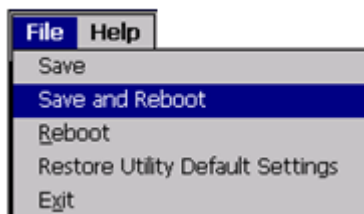

B. XV-Board Modules

The XV-board series are for LP-5000, WP-5231. One PAC can only plug only one XV-board. The XV-board series have following common specification:

- DI channel is dry contact, sink type.
- DO channel is open collector, sink type.



DIO Expansion

Model	DI			DO	
	Channel	Type	Sink/Source	Channel	Sink/Source
XV107	8	Wet	Source	8	Sink
XV107A			Sink		Source
XV110	16	Dry/Wet	Sink/Source	-	-
XV111	-			16	Sink
XV111A					Source

Relay Output Expansion

Model	DI			Relay Output	
	Channel	Type	Sink/Source	Channel	Type
XV116	5	Wet	Sink/Source	2	Signal Relay
				4	Power Relay

Multi-Function Expansion

Model	AI	AO	DI			DO	
	Channel			Type	Sink/Source	Channel	Sink/Source
XV308	8	-	DI+DO=8	Dry/Wet	Source	DI+DO=8	Sink
XV310	4	5	4		Sink		Source

For more detailed information about these support modules, please refer to

http://www.icpdas.com/root/product/solutions/hmi_touch_monitor/touchpad/xv-board_selection.html

C. Revision History

This chapter provides revision history information to this document.

The table below shows the revision history.

Revision	Date	Description
1.0.0	January 2015	Initial issue